


HIKVISION ALARM – HOW TO USE THE KEYPAD

PART 1: BUTTONS

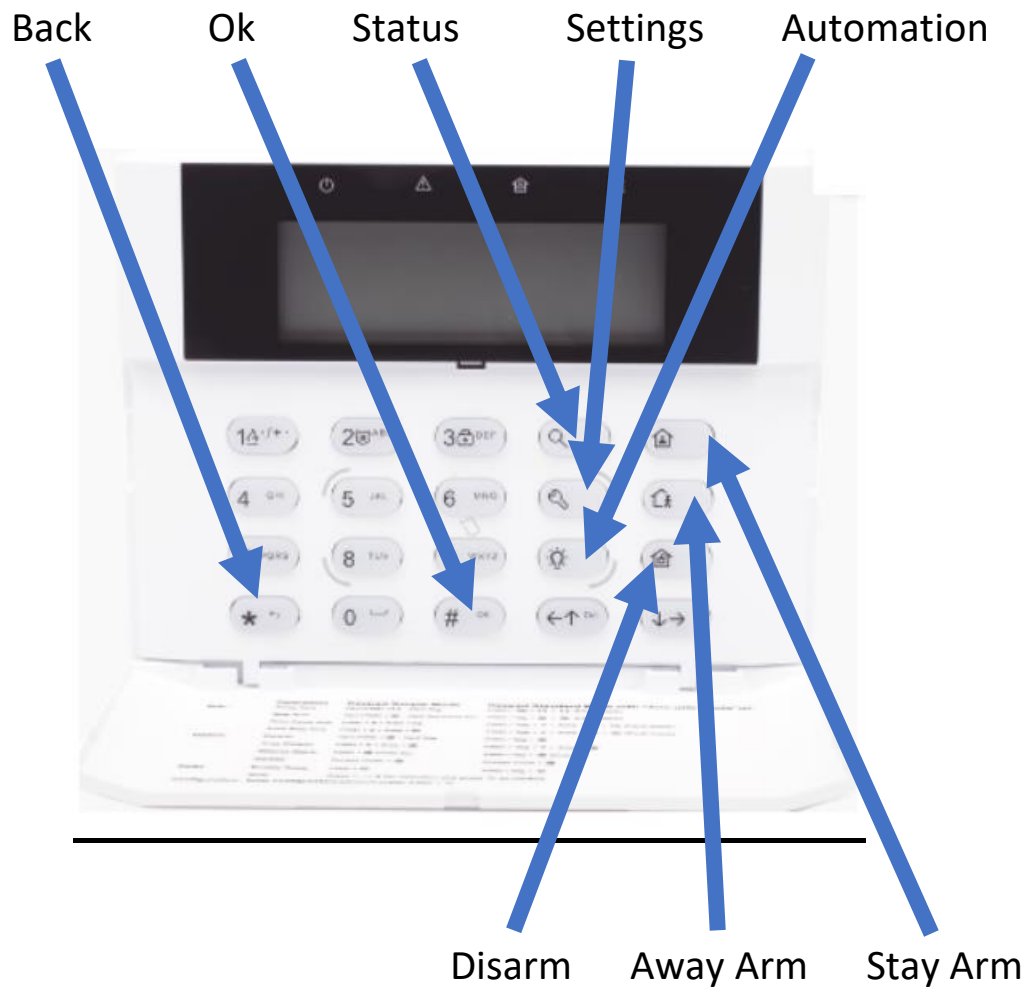

- Back:** Go Back
- OK:** Enter
- Status:** Show current status of the alarm panel, or check faults
- Settings:** Used to activate doors, or check/change settings
- Automation:** Open/close doors, etc.
- Disarm:** Disarm
- Away Arm:** Full arm
- Stay Arm:** Partial arm

PART 2: LIGHTS



- Power:** Alarm is on
- Fault:** There is a fault, a detector triggered etc.
- Arm:** The alarm is armed
- Alarm:** The panel is in alarm (ie: triggered)

PART 3: OPERATION

Arm:

1. Enter your 4-digit PIN, then press 'Arm'.
2. The 'Arm Light' will turn on.
3. If you have any exit delays, the countdown timer will begin.

Stay Arm:

1. Enter your 4-digit PIN, then press 'Stay Arm'.
2. The 'Arm Light' will turn on.
3. If you have any exit delays, the countdown timer will begin.

Disarm:

Enter your 4-digit PIN, then press 'Disarm'.
The 'Arm Light' will turn off.

Open/Close Doors, Etc.

1. Enter your 4-digit PIN, then press 'Automation'.
2. Scroll to your chosen door, then press 'OK'.
3. Press 'Settings'.

Check Status:

If the 'Fault Light' is ON	If the 'Fault Light' is OFF
<ol style="list-style-type: none">1. Enter your 4-digit PIN, then press 'Disarm'.2. This will clear any old faults.3. Enter your 4-digit PIN, then press 'Status'.4. If there are any faults, they will be shown.	<ol style="list-style-type: none">1. Enter your 4-digit PIN, then press 'Status'.2. You can now check the status, and information, of the alarm panel, all detectors, doors, keypads etc.