

# 101. THUMBNAIL MODE AND LIST MODE (JUNE 2025)

#### STEP 1

The Hik-Connect app has 2 display modes.


They are called Thumbnail mode and List mode.

#### STEP 2

This can be changed by clicking the display mode button at top of the home screen.

#### STEP 3


Thumbnail Mode appears as follows.

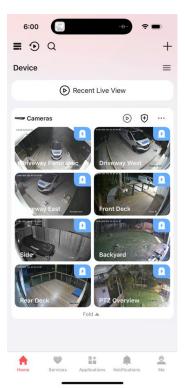



### STEP 4

List Mode appears as follows.

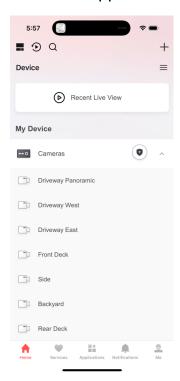

## STEP 5

All our manuals are presented in **Thumbnail Mode**.