


142. HOW TO ARM LIVE-GUARD (JUNE 2025)


STEP 1

Press the 'Live-Guard' icon.

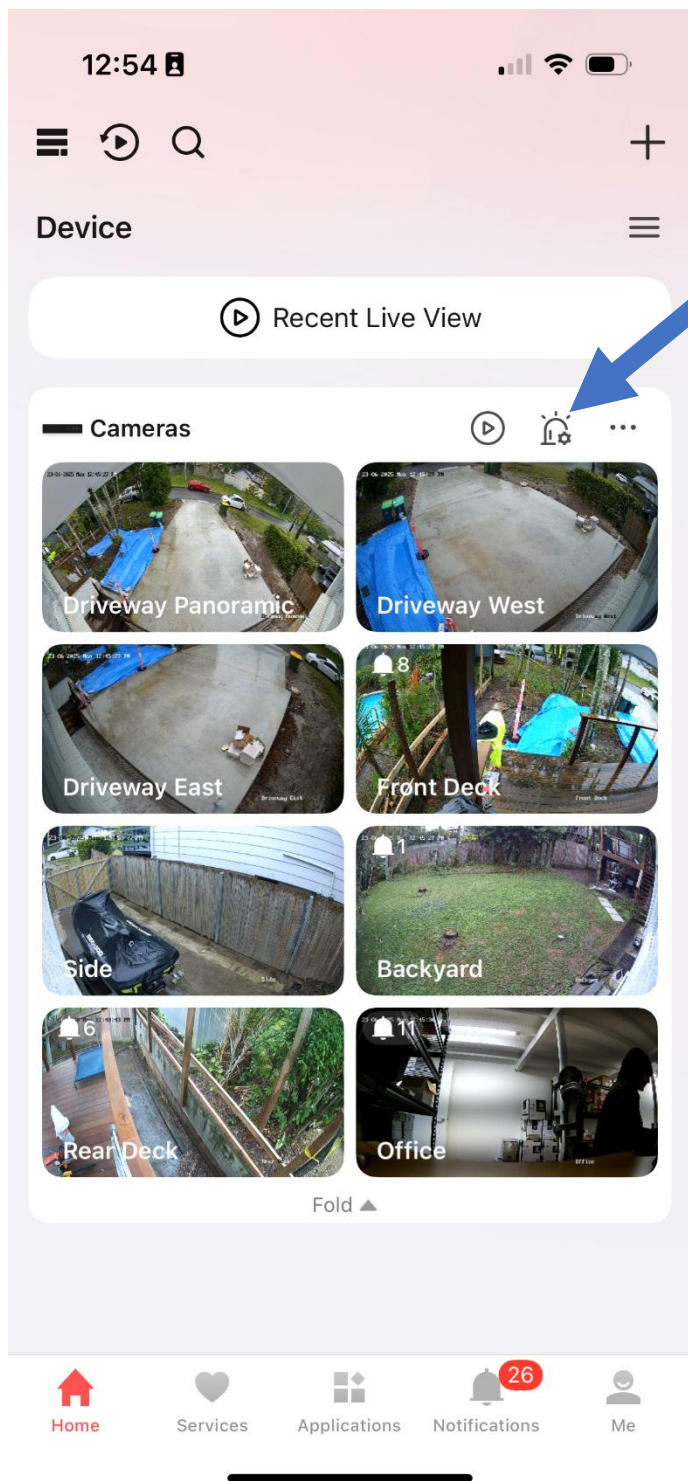


STEP 2

You will now be on the 'Live-Guard' screen.

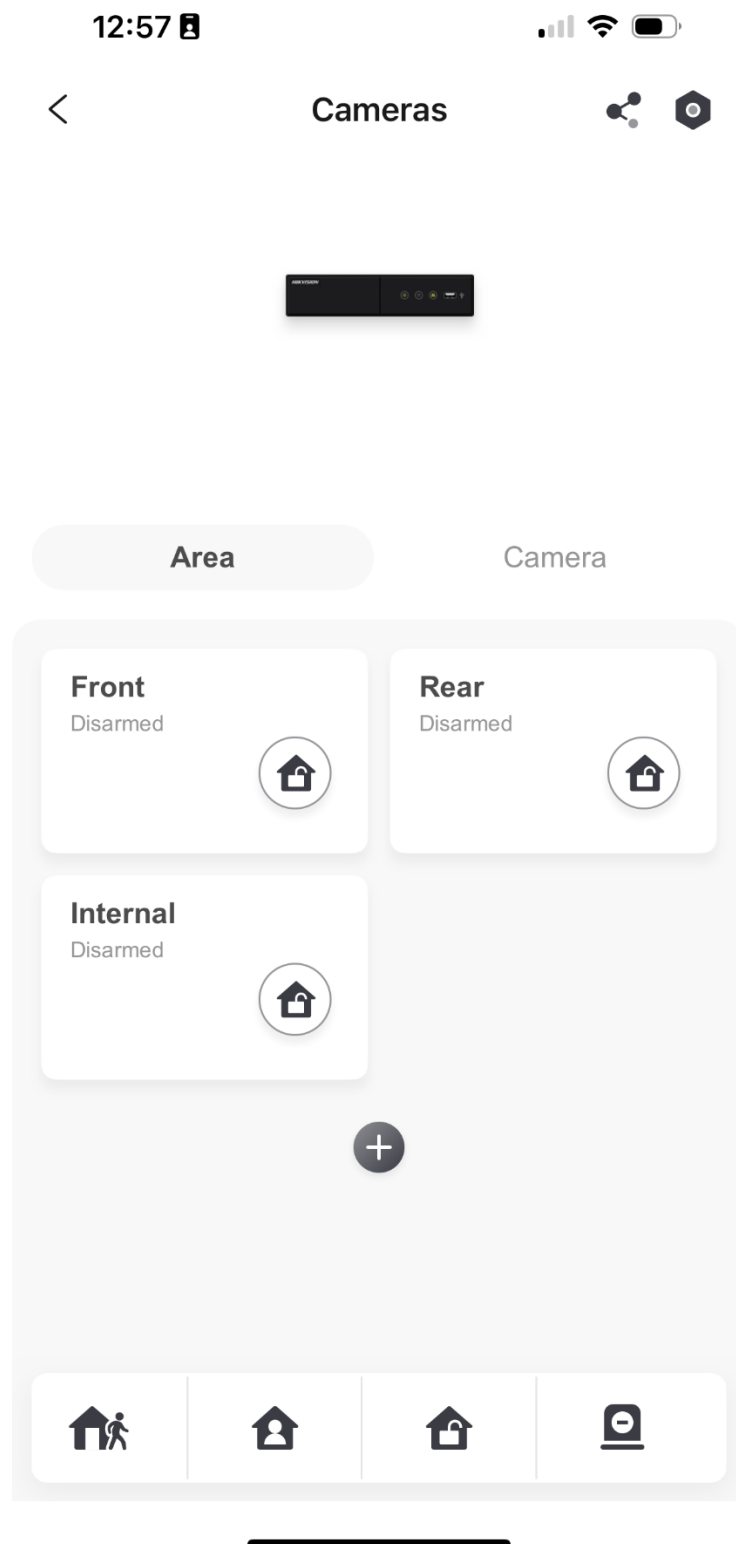

STEP 3


To arm all Areas, press 'Arm All Areas'.

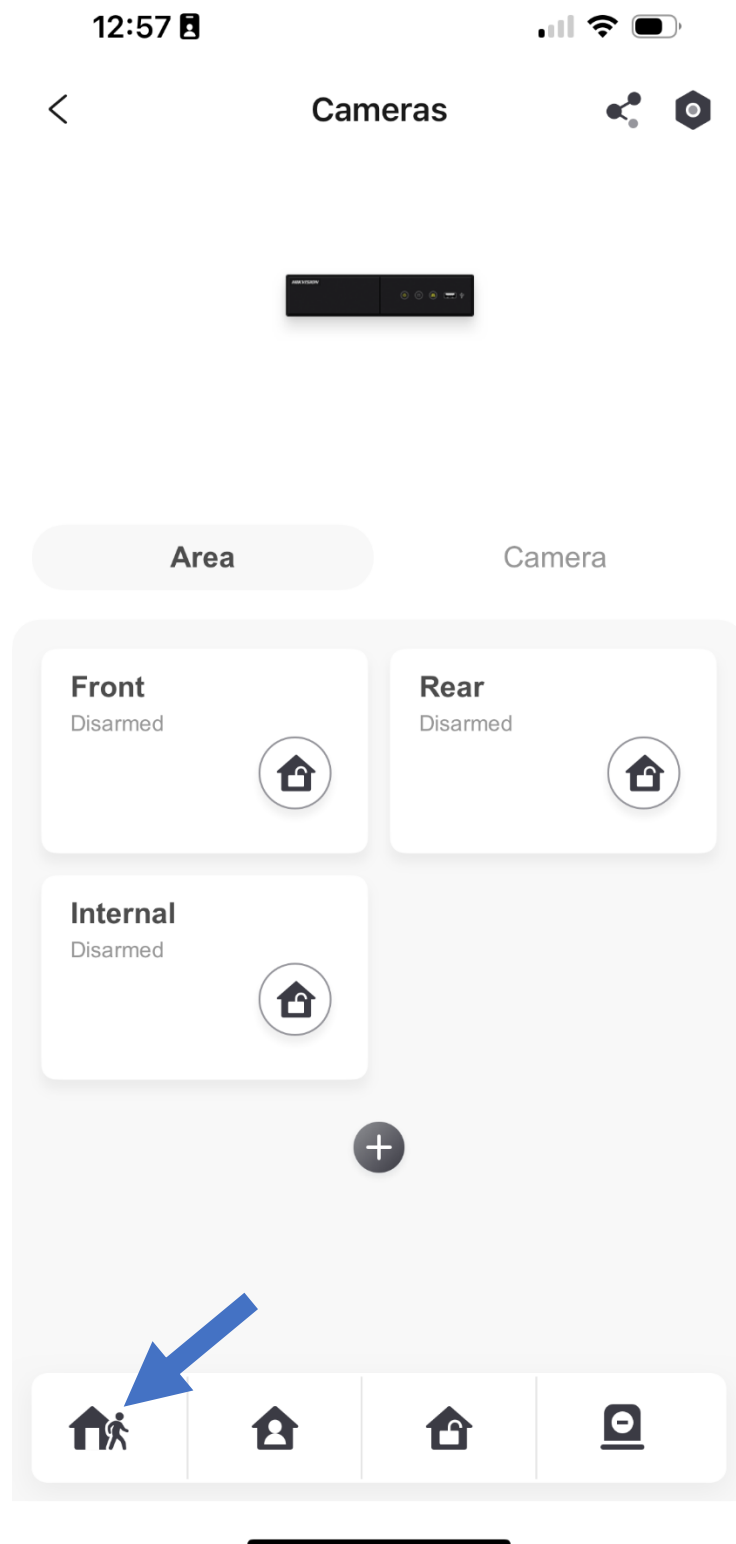

STEP 4


All areas will now be armed (ie: Away).

When an area is armed, its icon will be highlighted blue and its status will change to 'Away'.

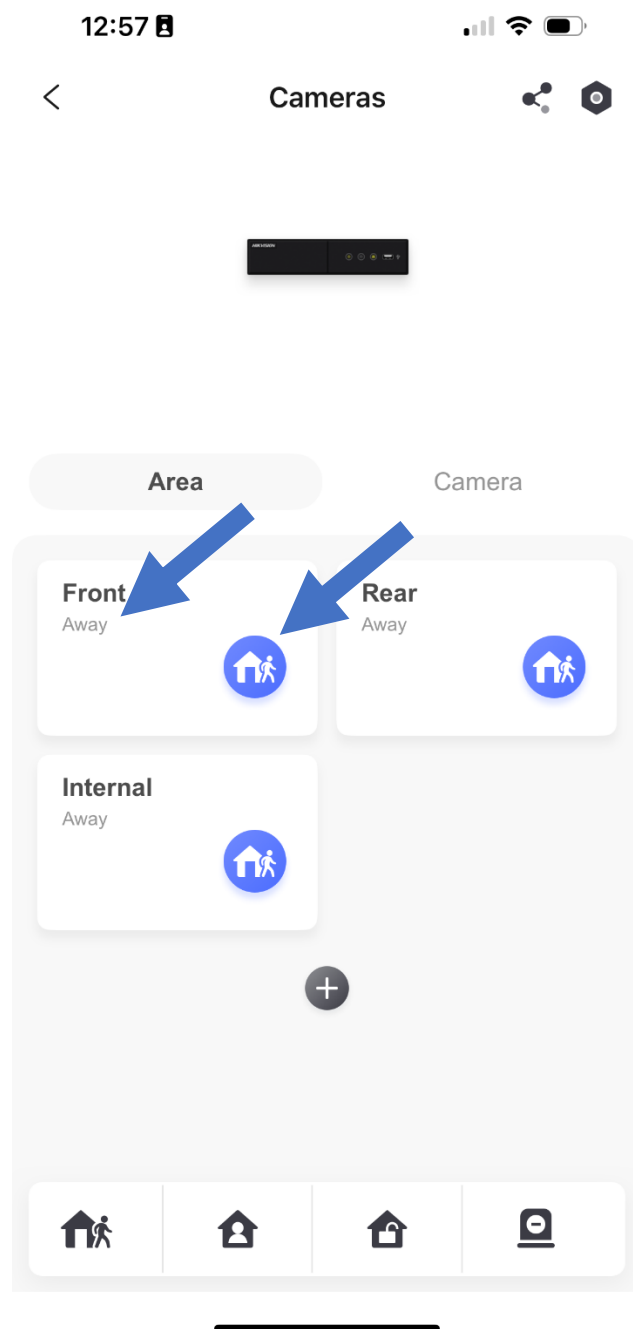

STEP 5


To disarm all areas, press 'Disarm All Areas'.

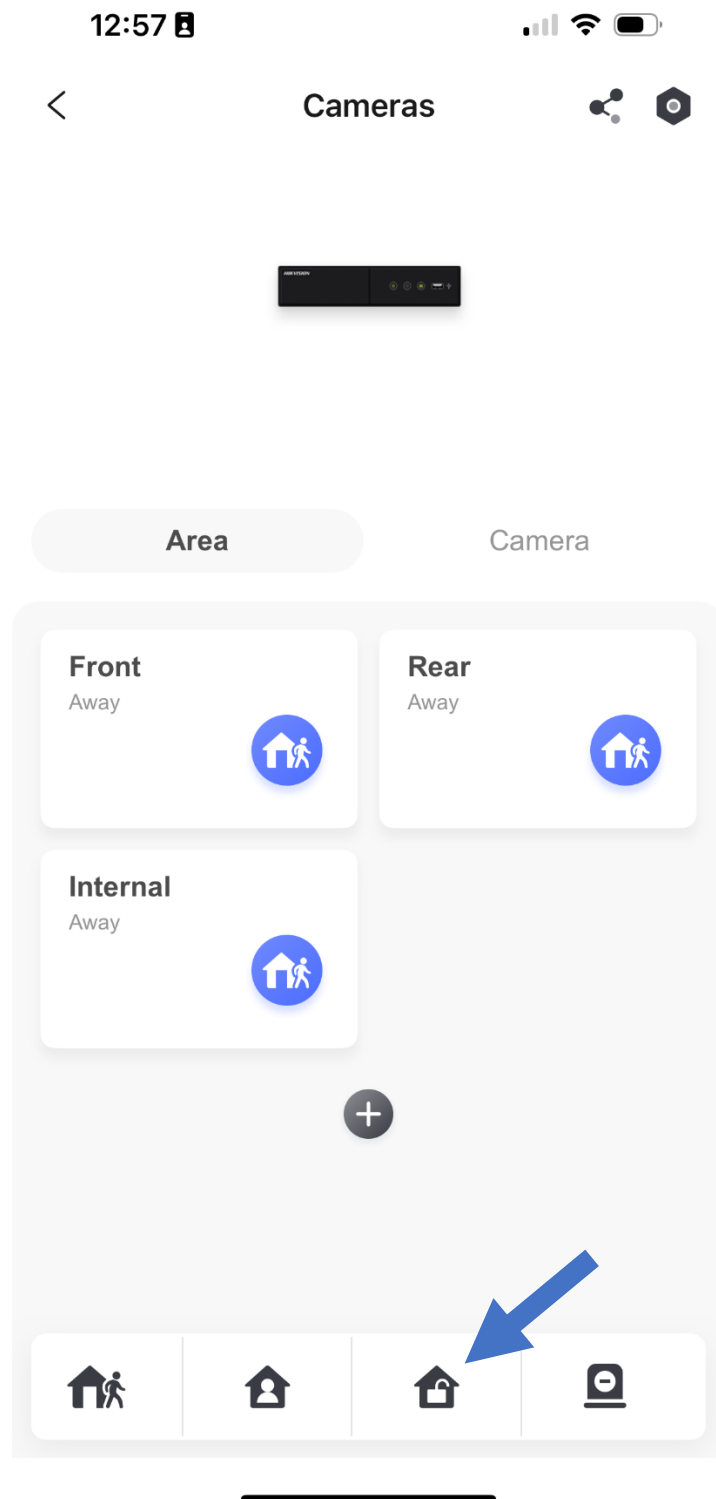

STEP 6


All areas will now be disarmed.

When an area is disarmed, its icon will be not be highlighted and its status will be 'Disarmed'.

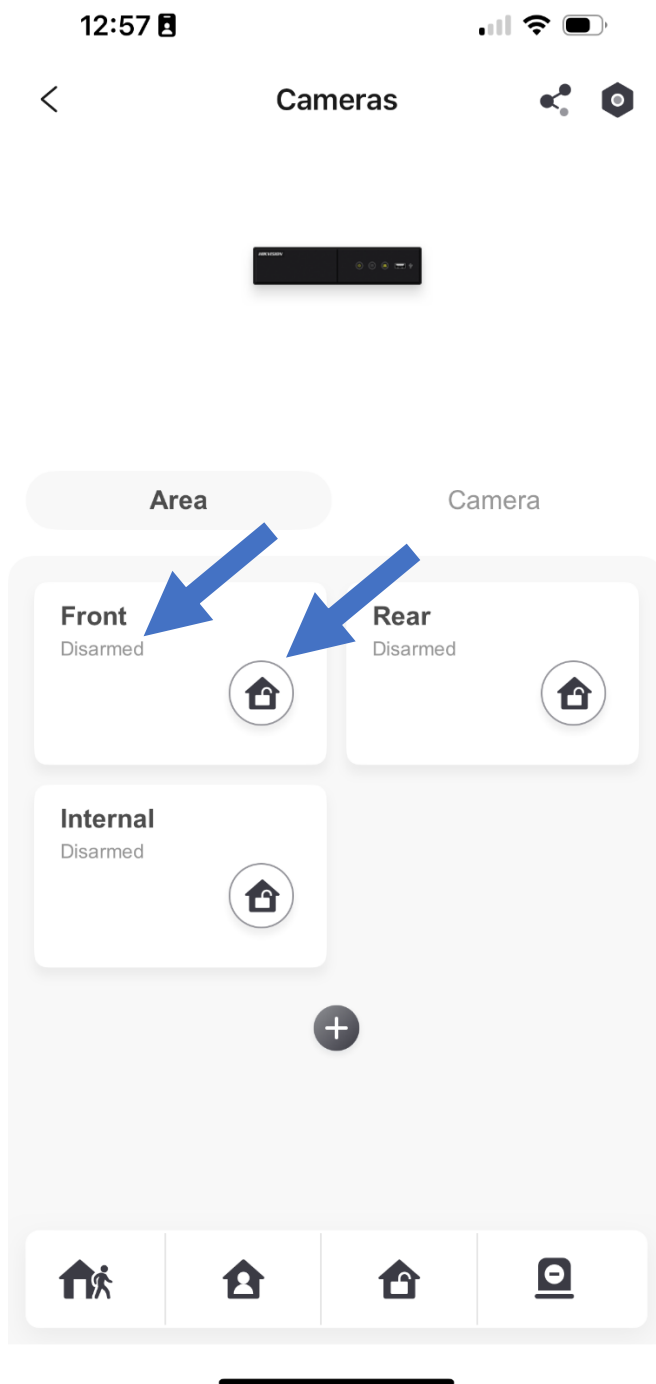

STEP 7


To arm a specific area, click on its icon.

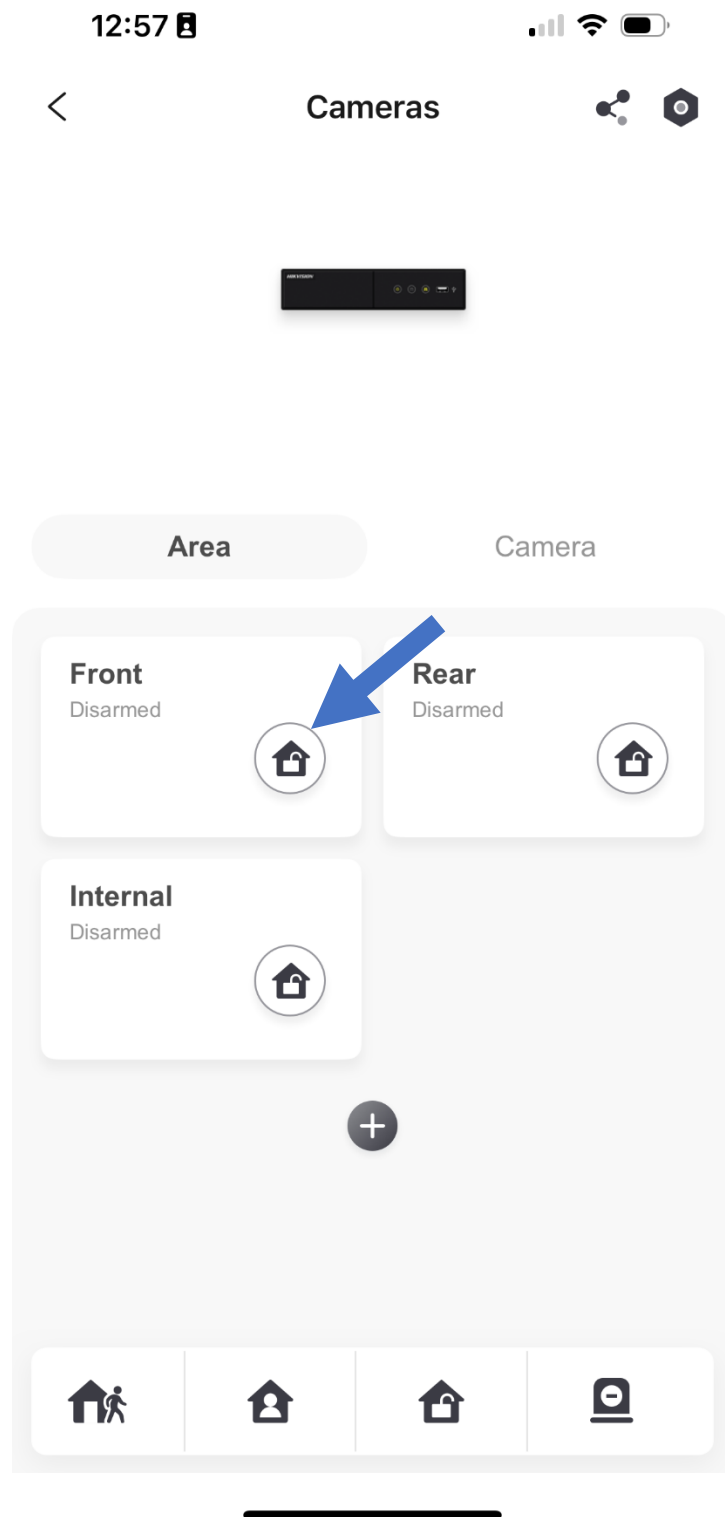

STEP 8


The specific area will now be armed (ie: Away).

When an area is armed, its icon will be highlighted blue and its status will change to 'Away'.

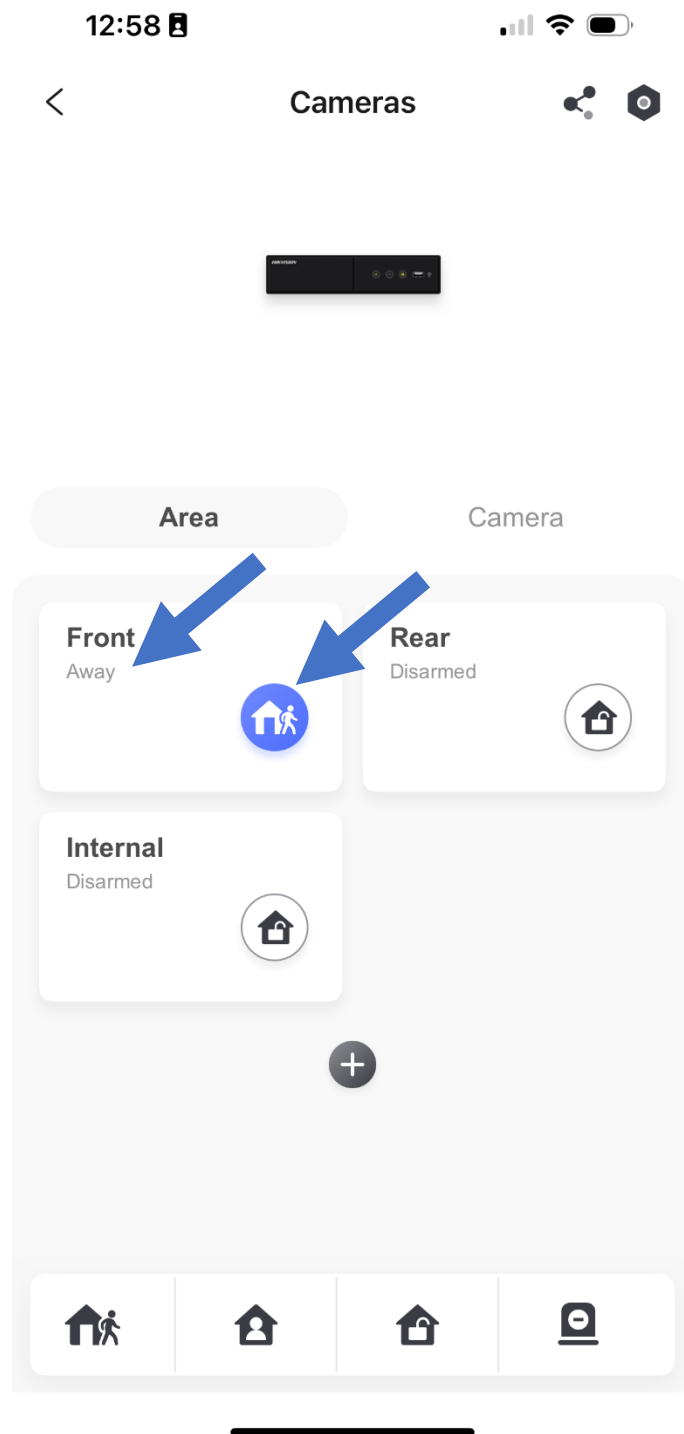

STEP 9

To disarm a specific area, click on its icon.

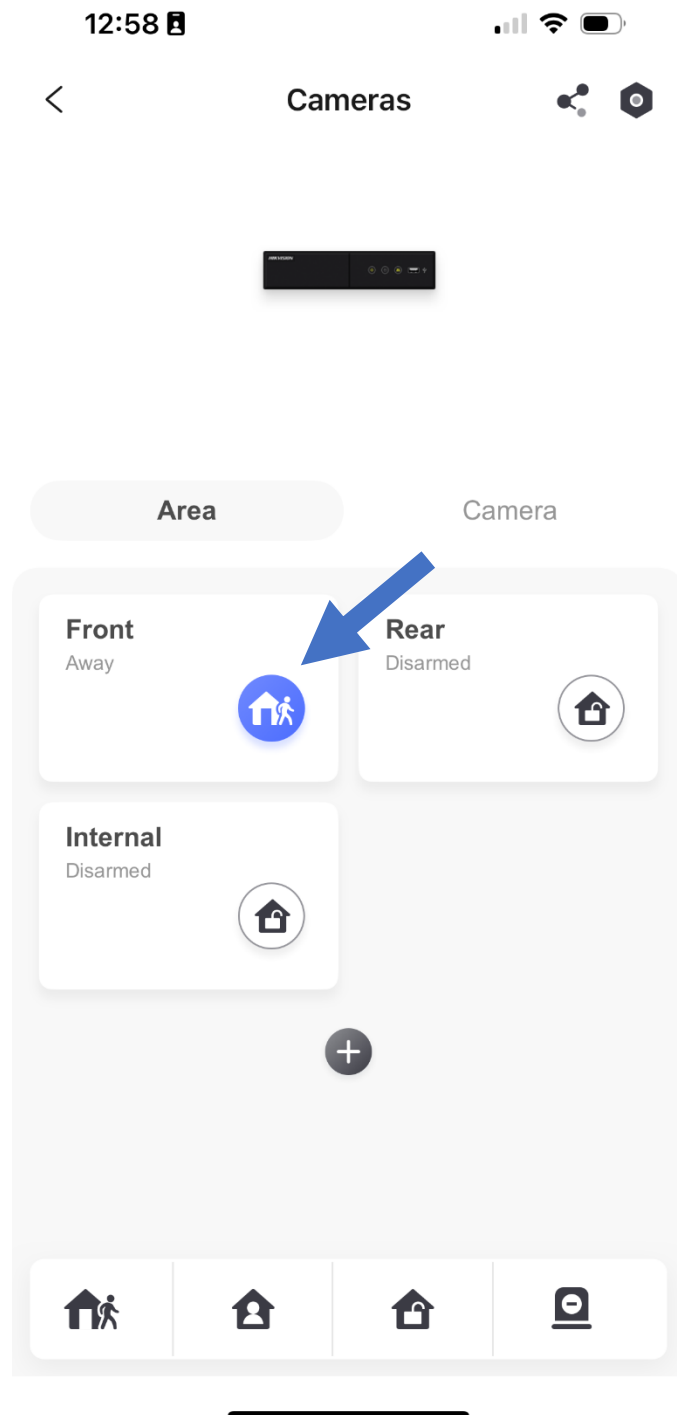

STEP 10

The area will now be disarmed.

When an area is disarmed, its icon will be not be highlighted and its status will be 'Disarmed'.

