


## **143. HOW TO SETUP AREAS (JUNE 2025)**


### **STEP 1**

Press the 'Live-Guard' icon.

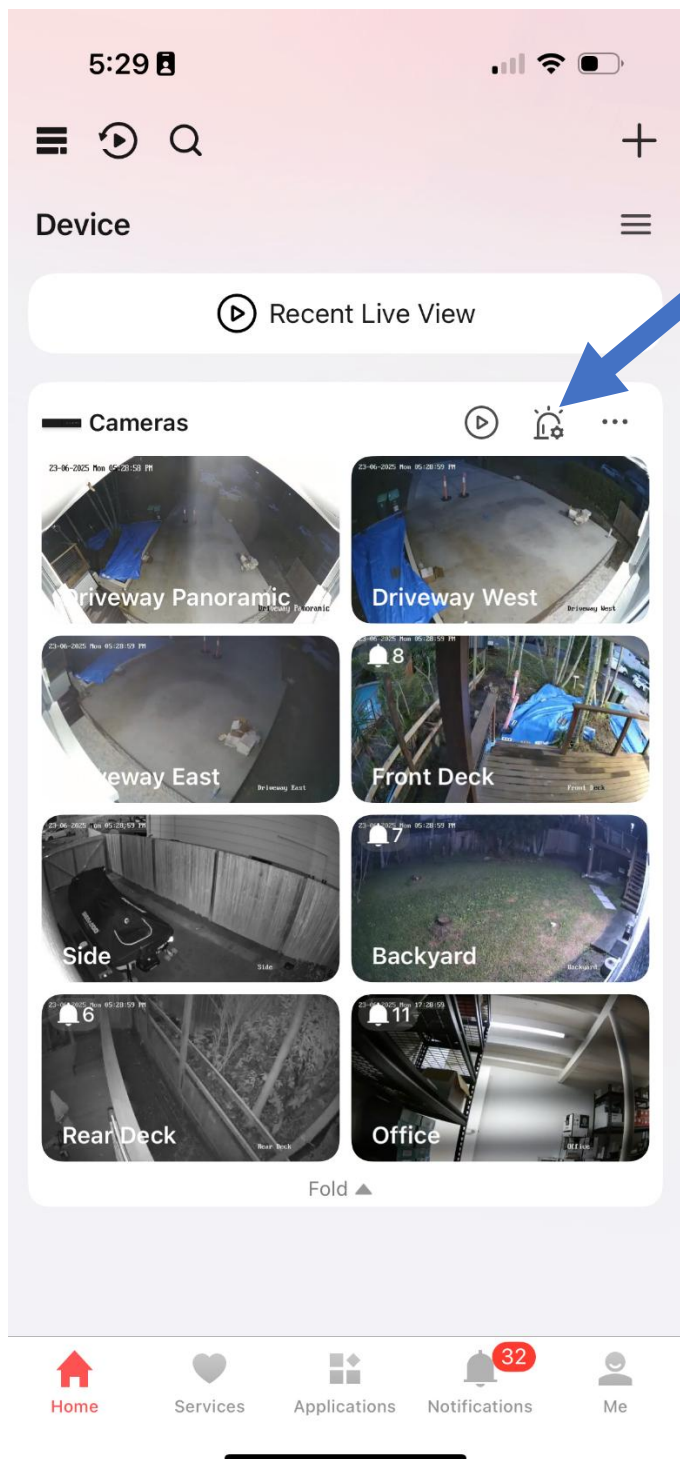


## STEP 2

You will now be on the 'Live-Guard' screen.

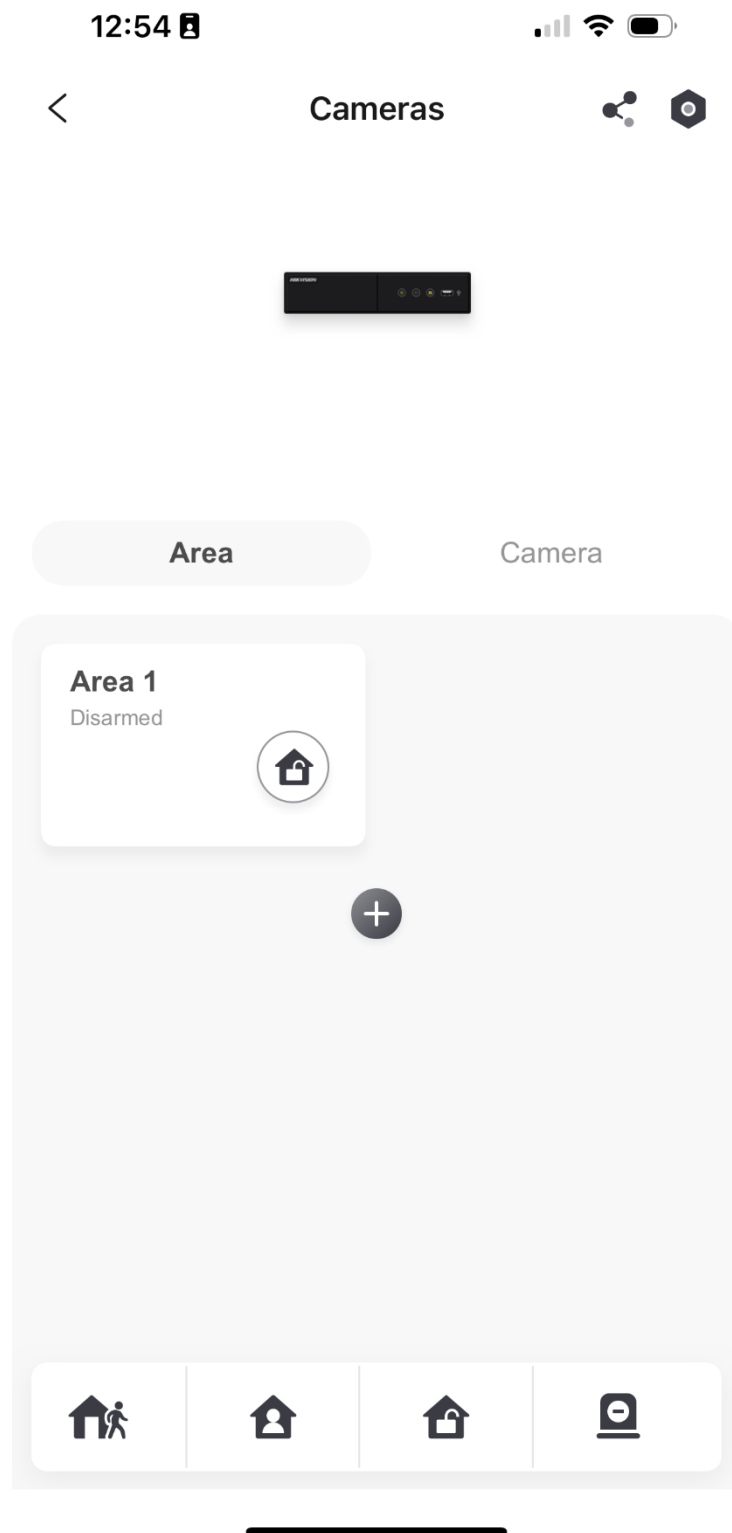


## STEP 3

Press the 'Settings' icon.

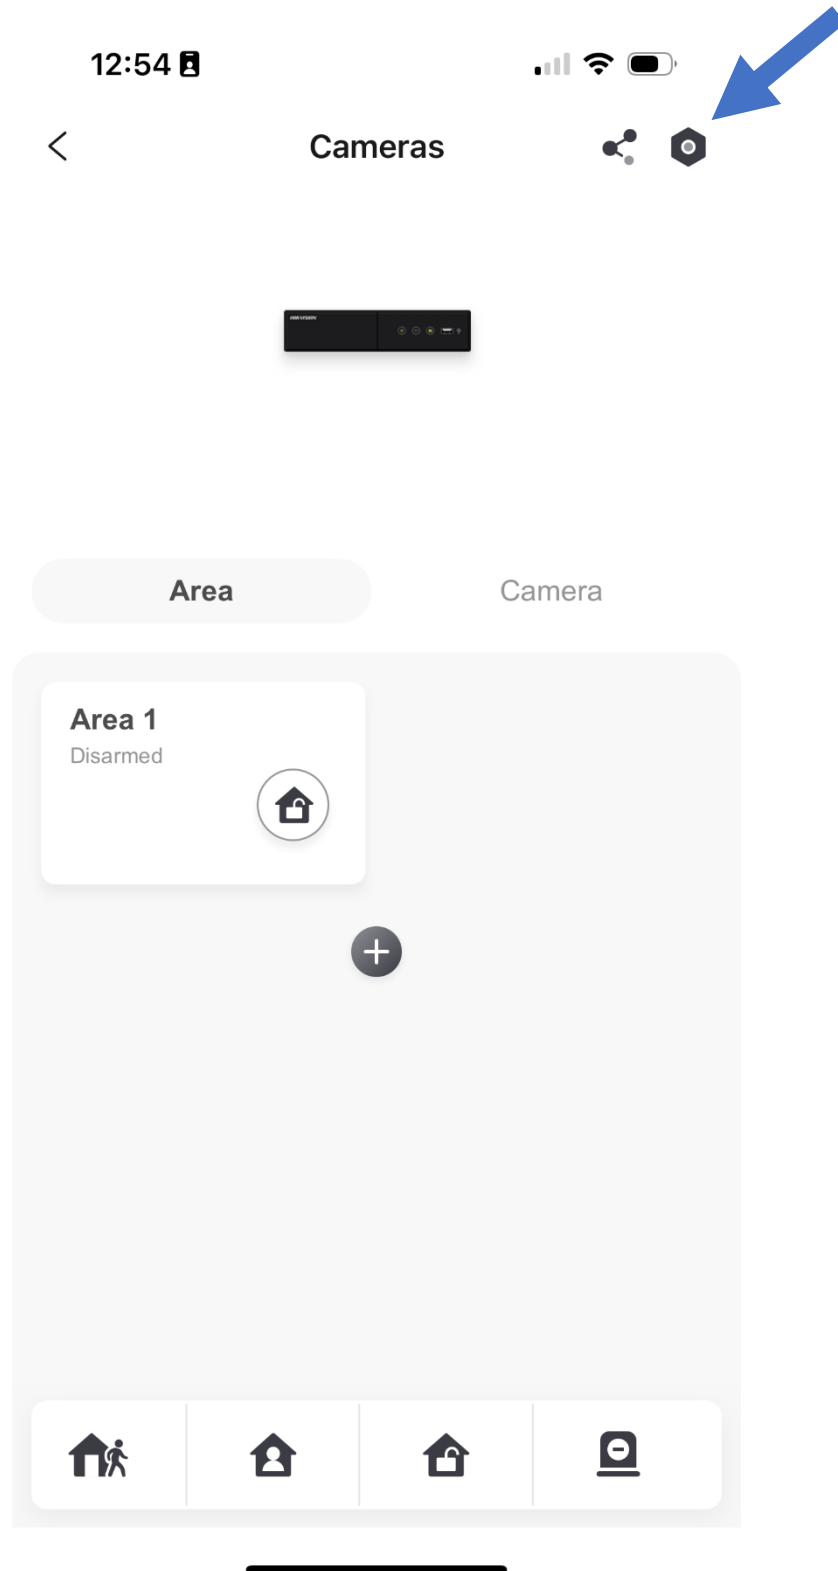


## STEP 4

Press 'Area'.

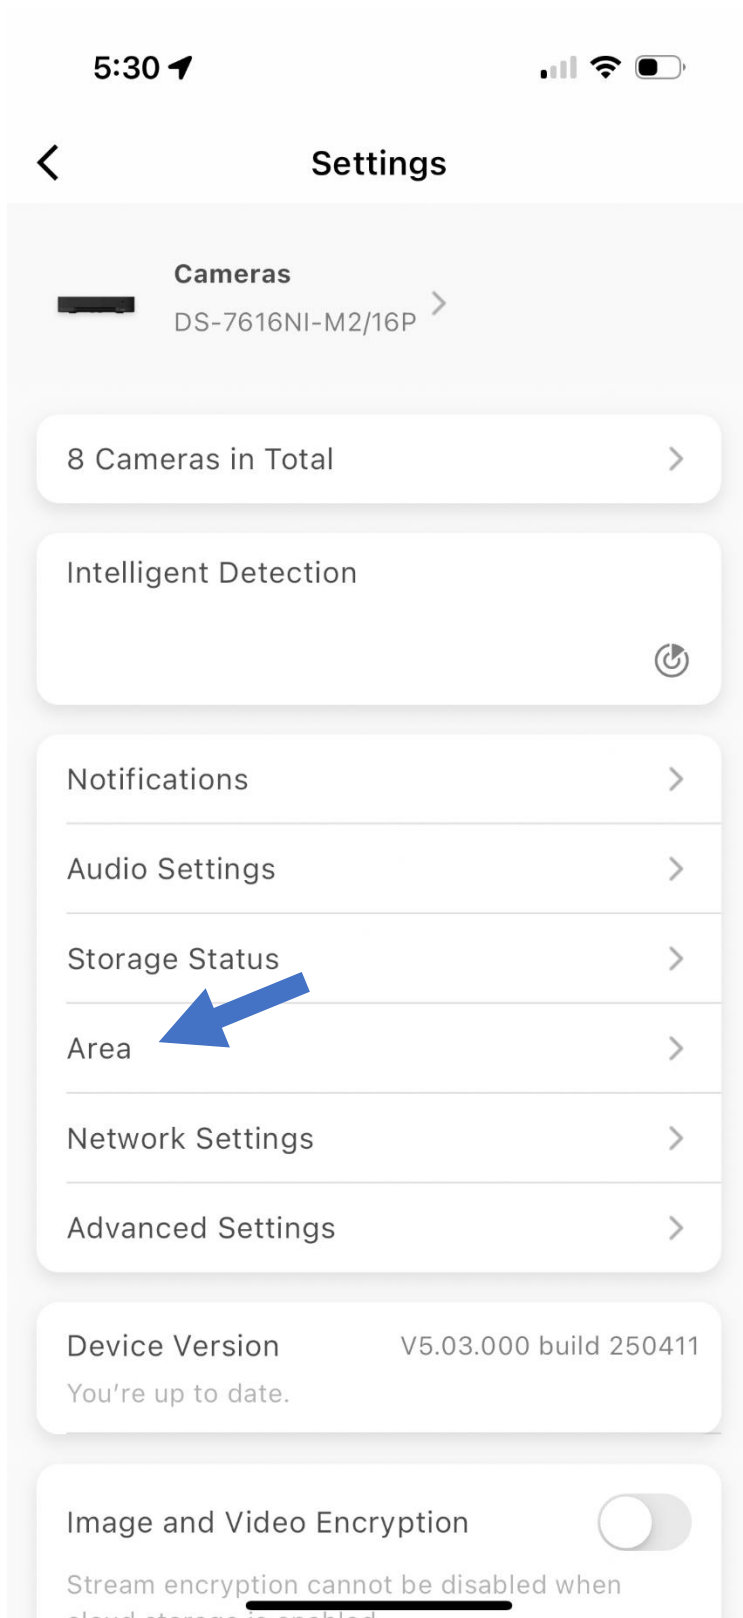


## STEP 5

Press 'Area 1'.

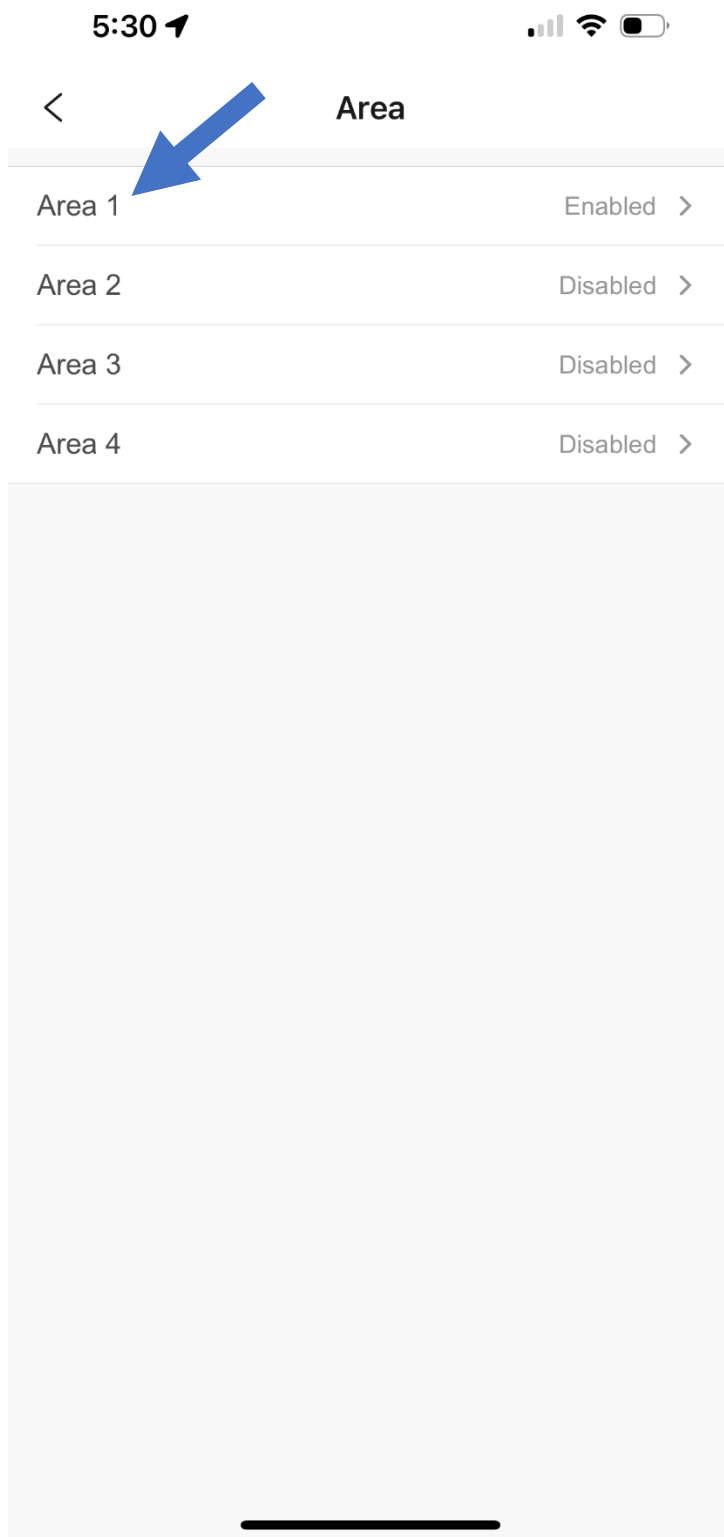


## STEP 6

To see which cameras are in the area, click 'Linked Camera'.

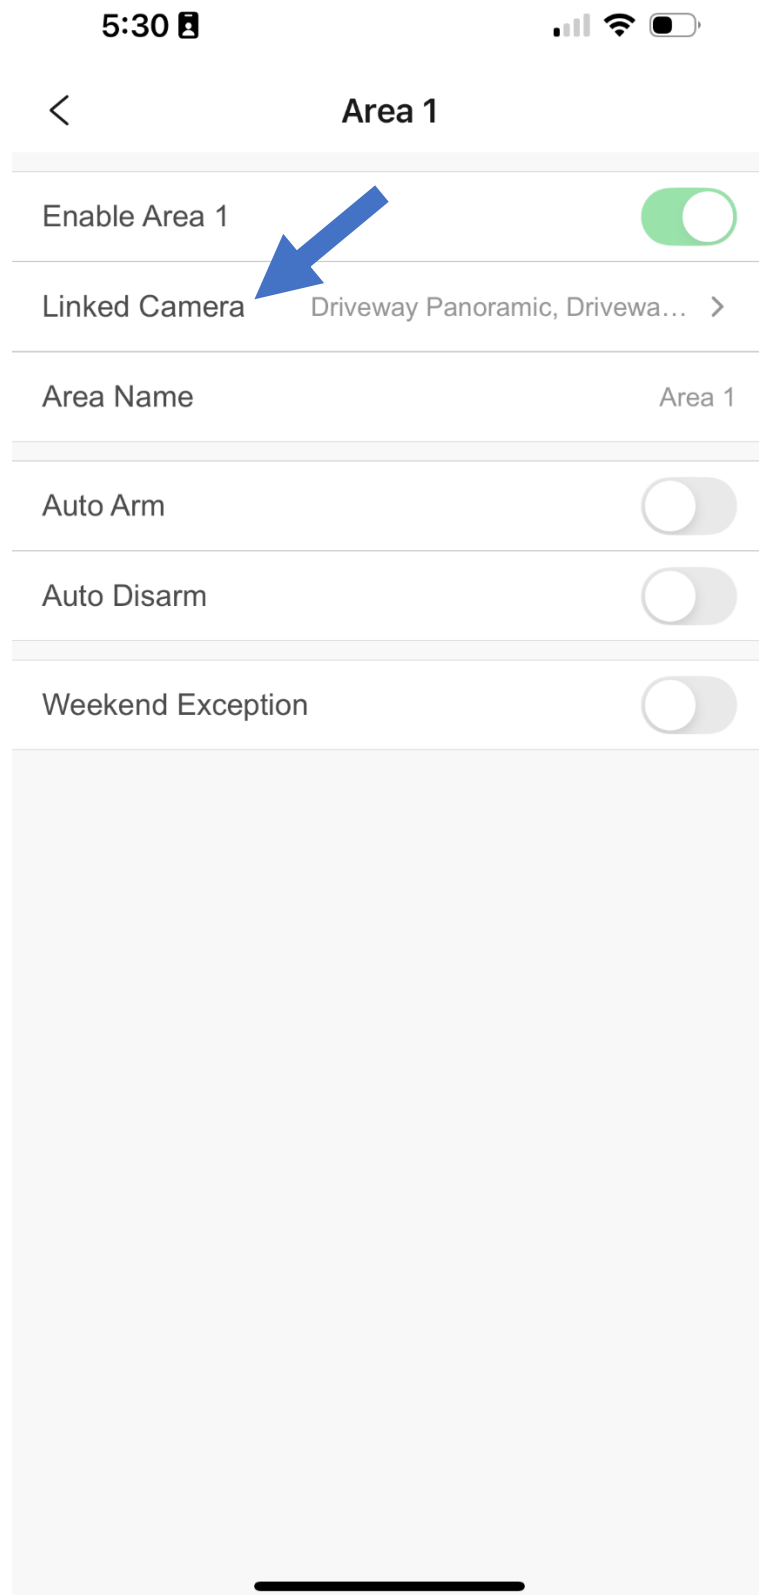

## STEP 7


By default, all cameras are in 'Area 1'.

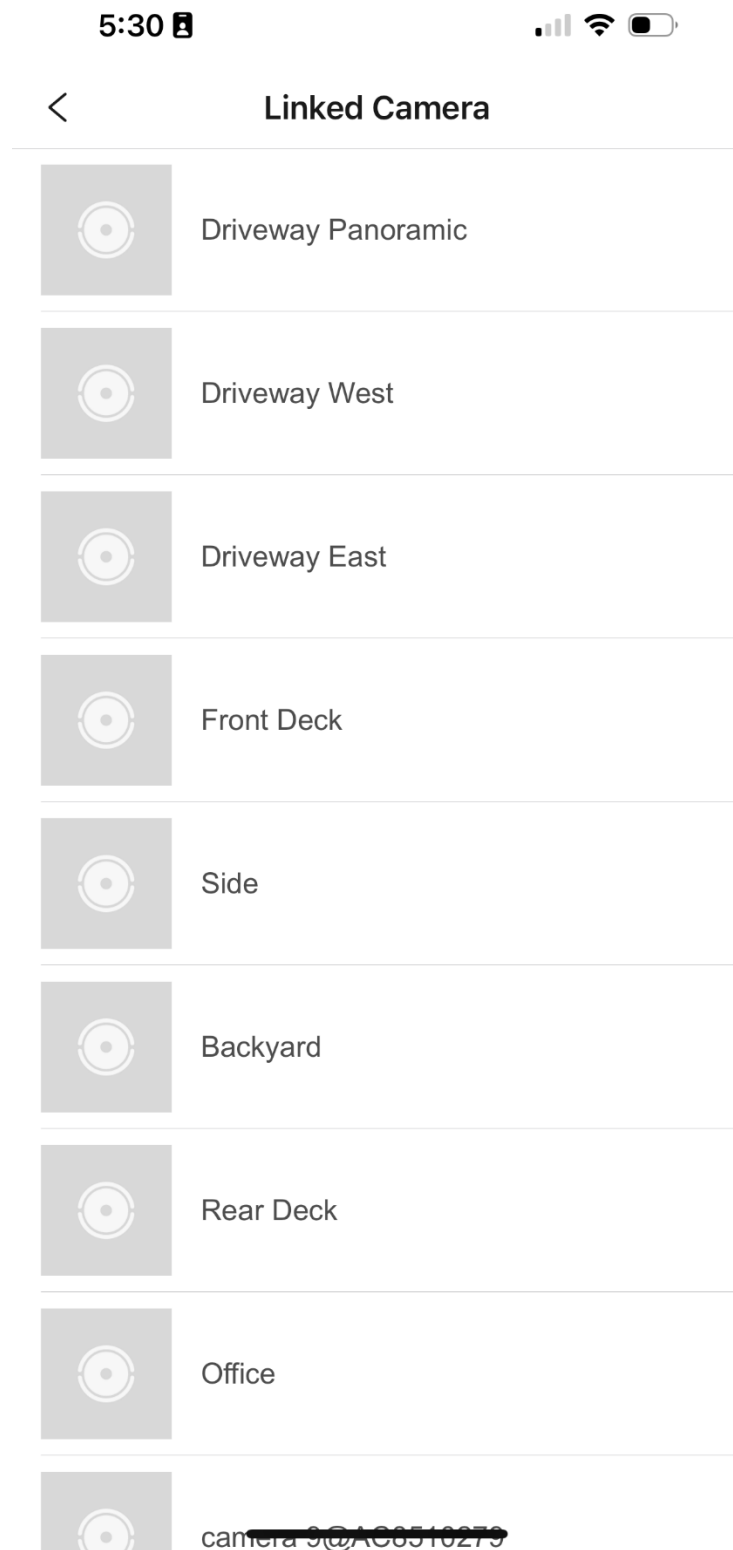

## STEP 8

To create a new area, go back to the 'Area' screen.


Click on 'Area 2'.

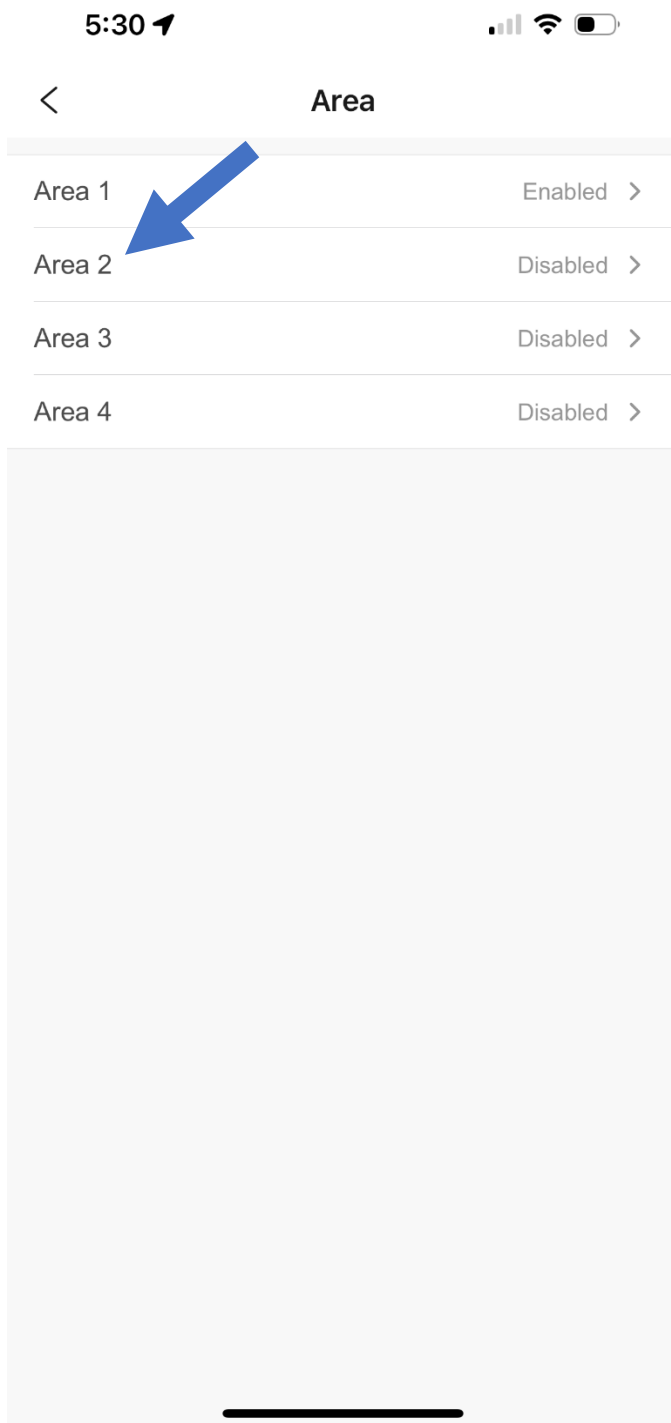




## STEP 9

Press 'Enable'.

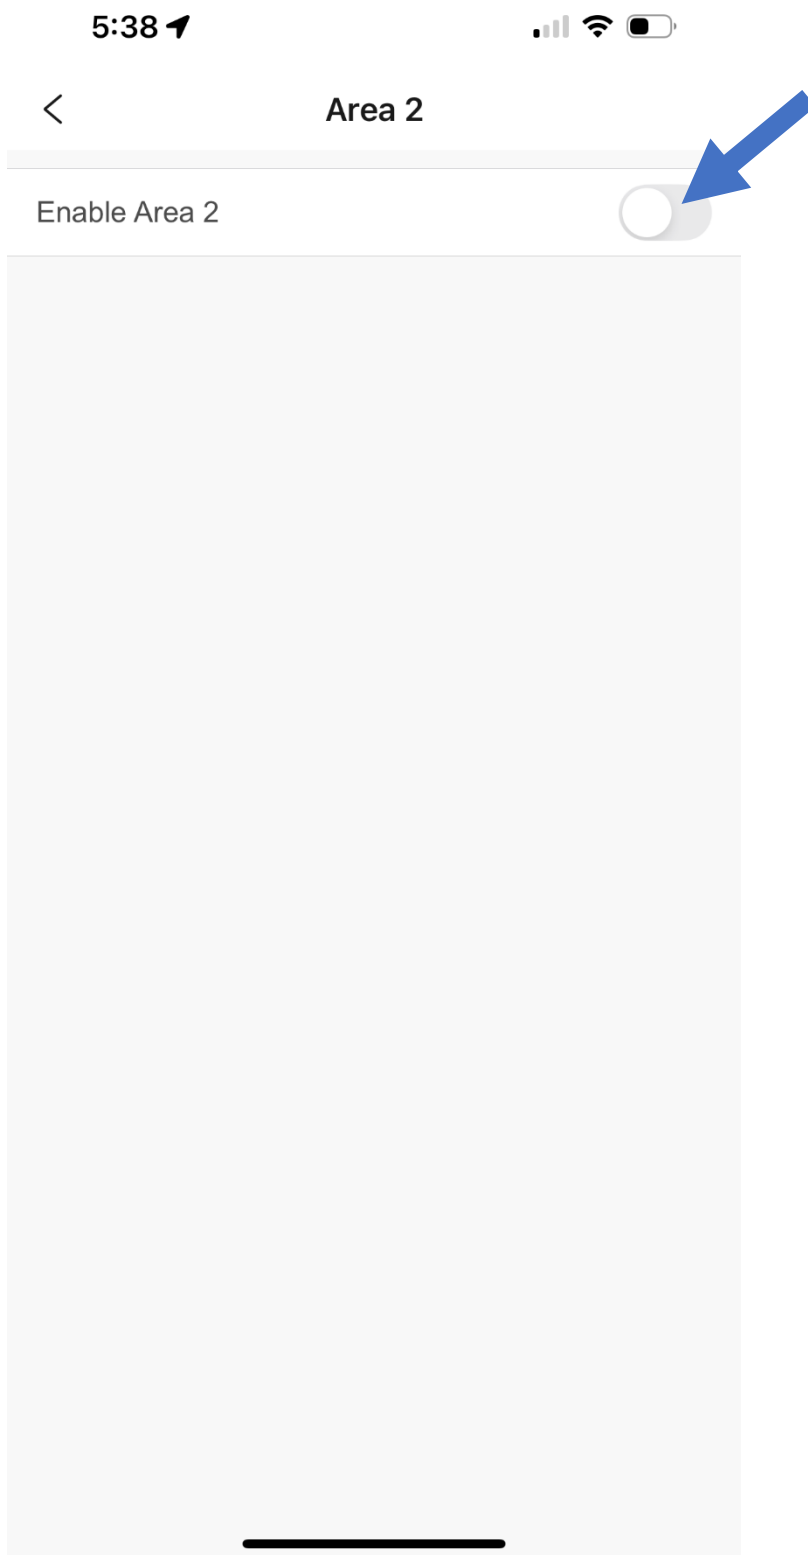

## STEP 10

Click on 'Linked Camera'.

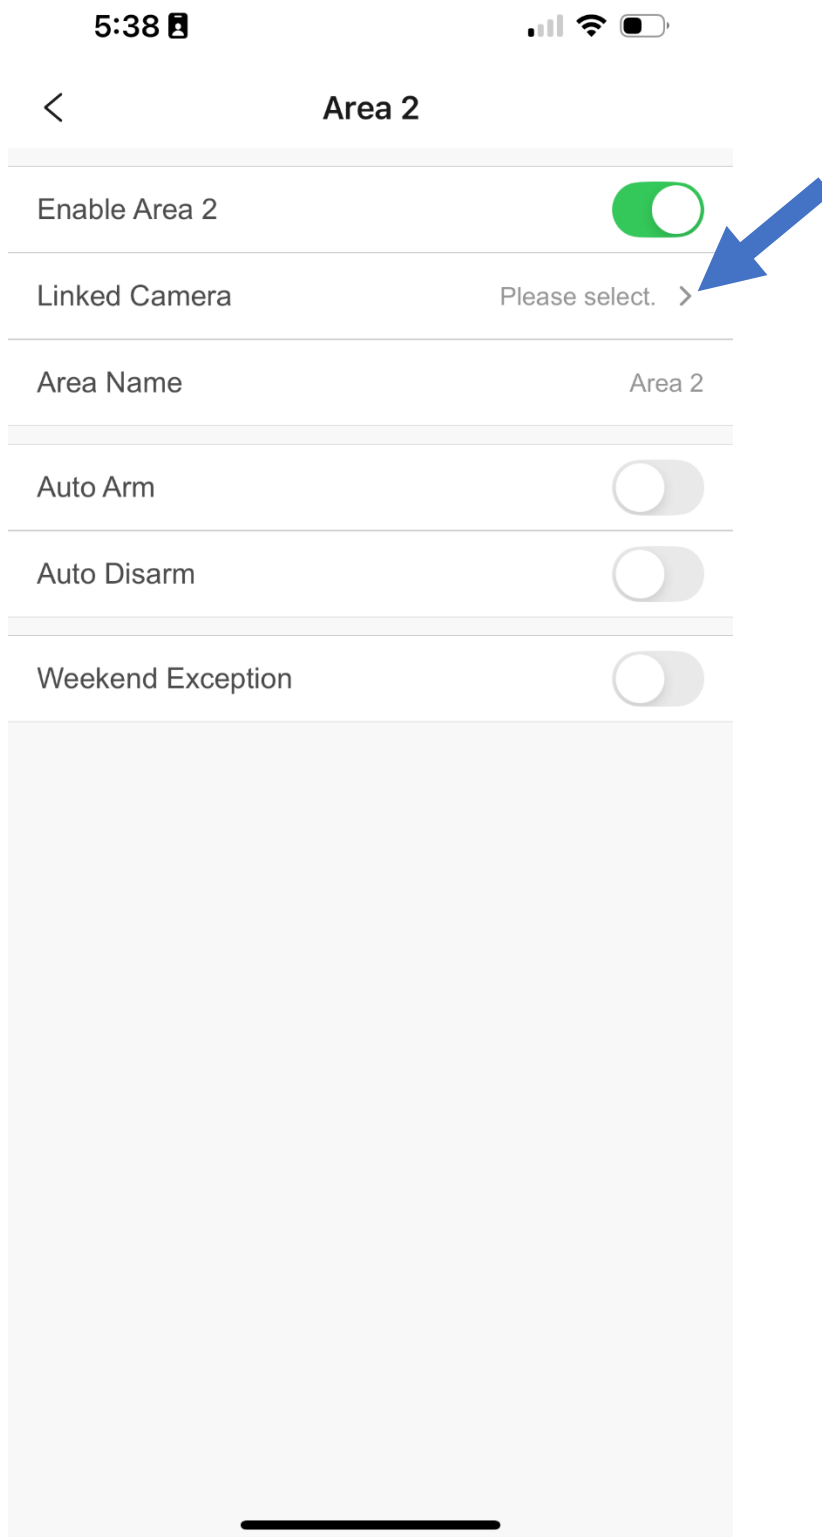

5:38

Area 2

Enable Area 2 ☒

Linked Camera Please select. >

Area Name Area 2


Auto Arm ☐

Auto Disarm ☐

Weekend Exception ☐

## STEP 11

Press 'Plus'.

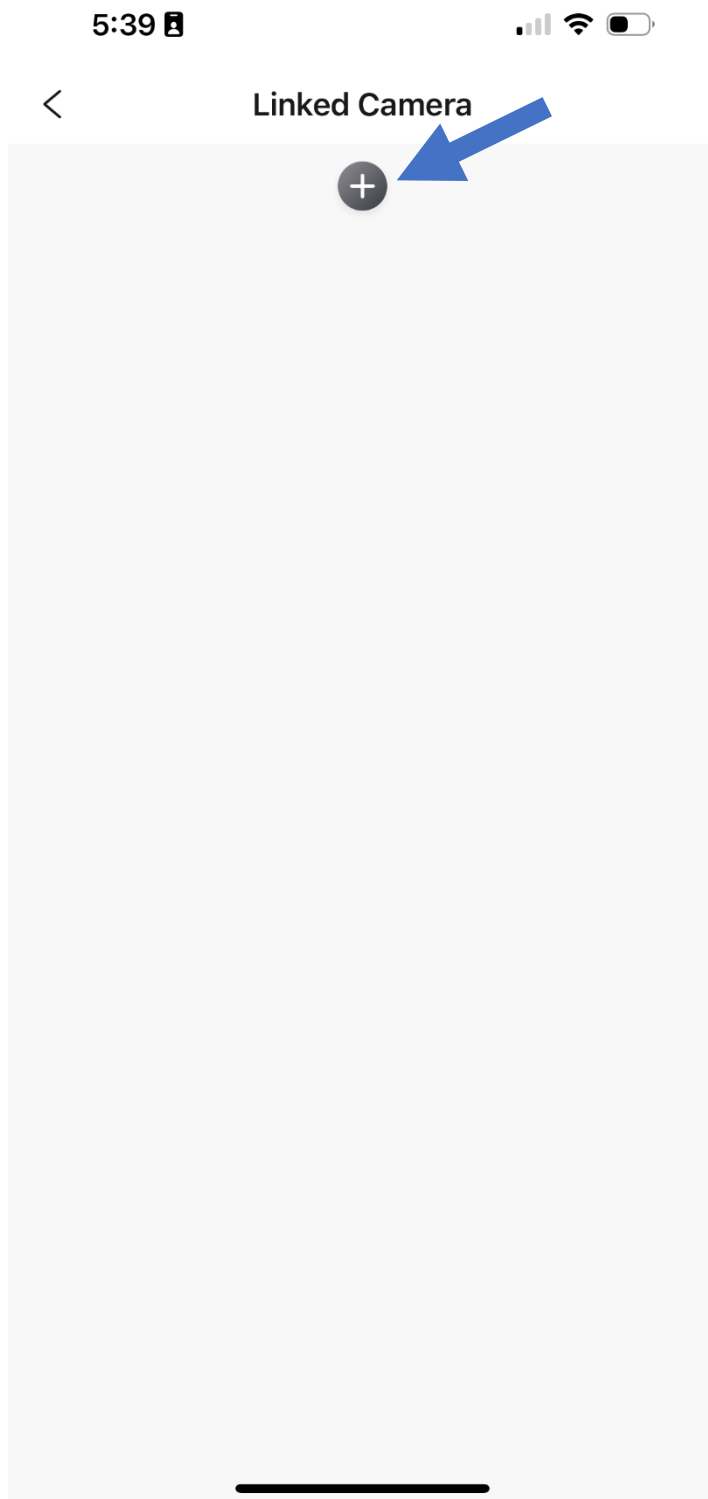


## STEP 12

Select the cameras to move into Area 2.

Press 'OK'.

NOTE:


Any cameras you move into Area 2, will be removed from Area 1.

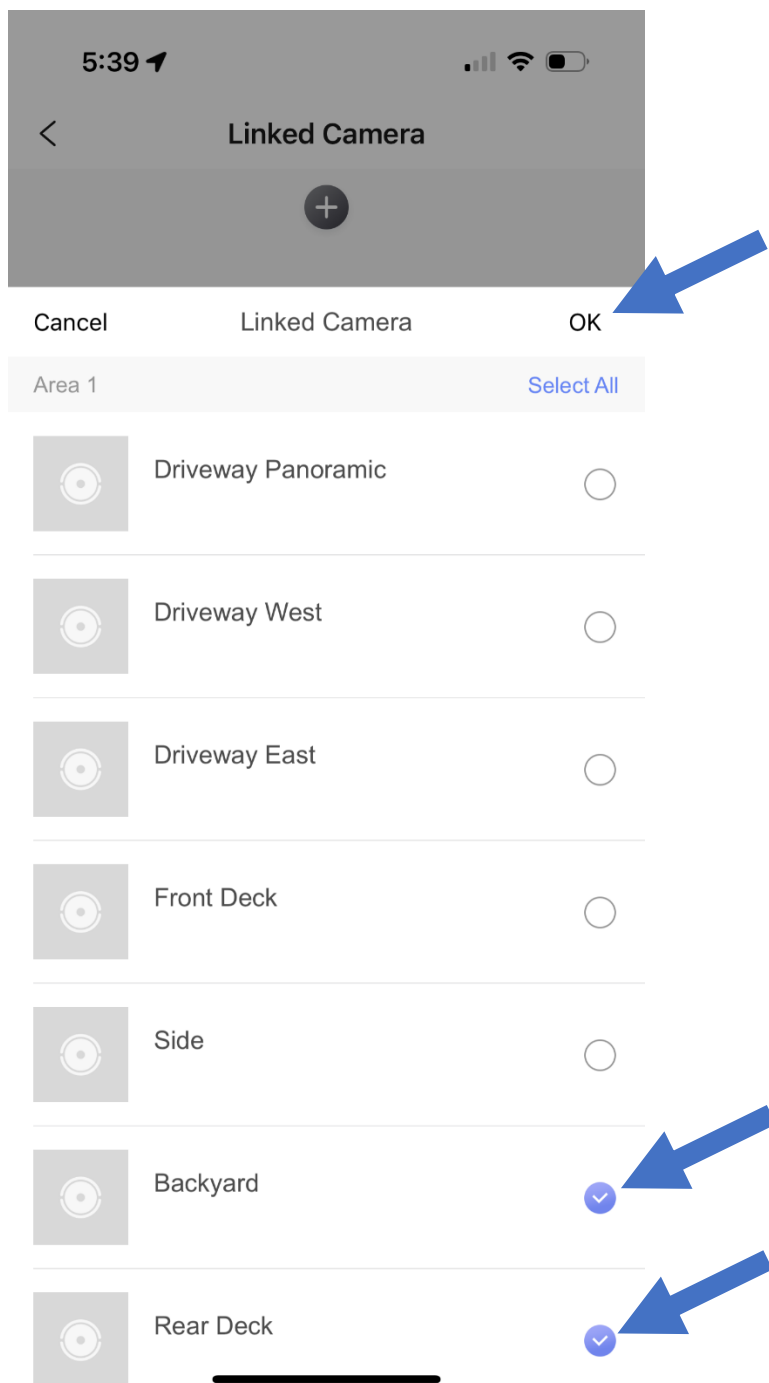

## STEP 13


Confirm the 'Linked Cameras' for Area 2 are now the correct cameras.

Then go back to the 'Area' menu.

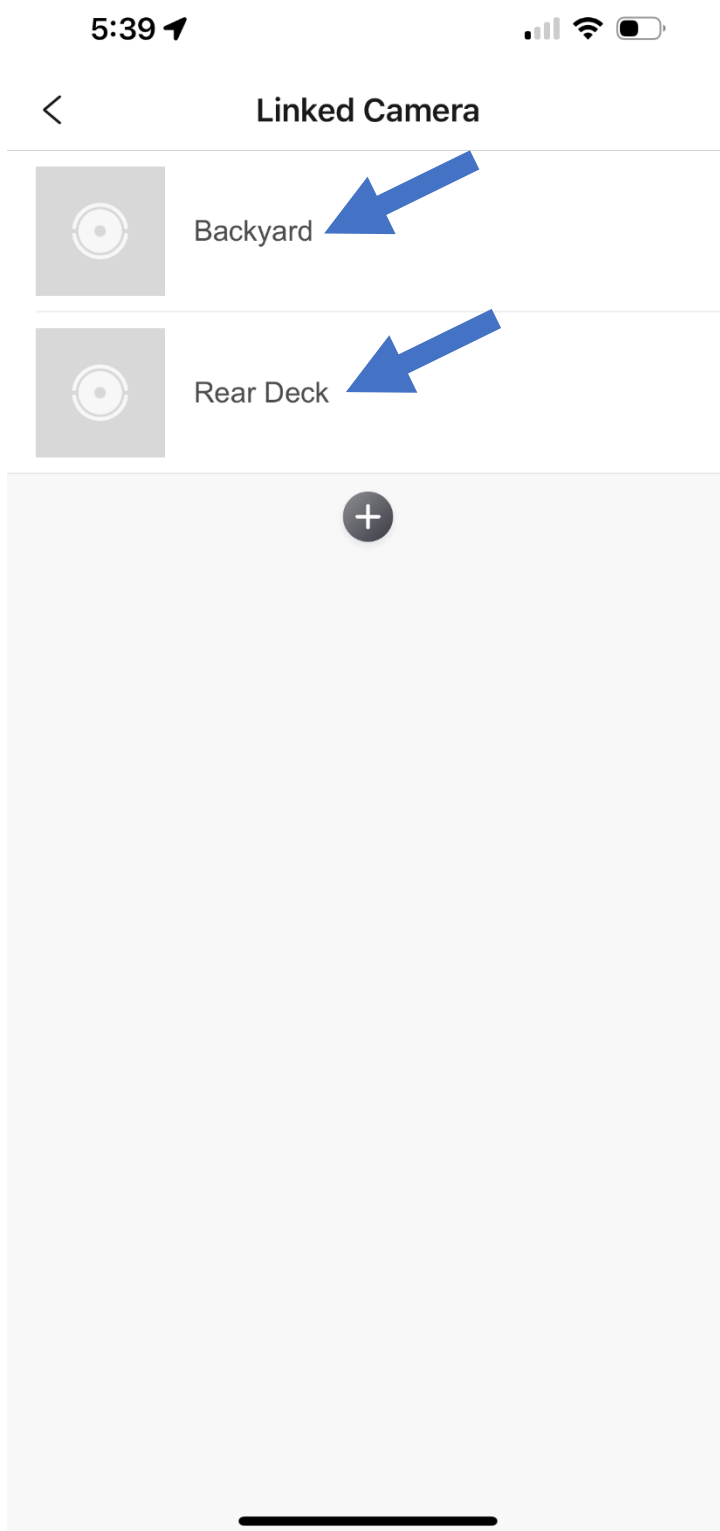


## STEP 14

To rename an area, click on the required area.

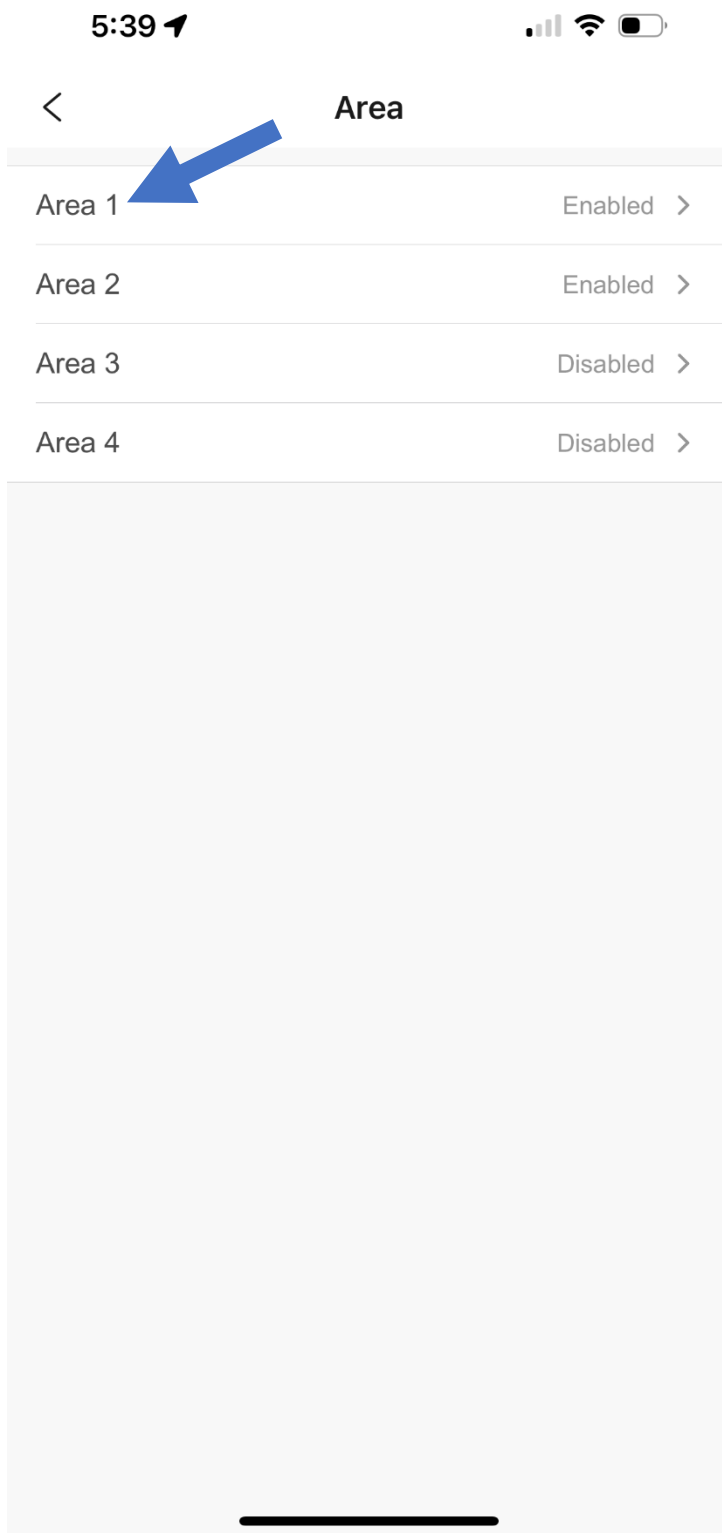

## STEP 15


Click on 'Area Name'.

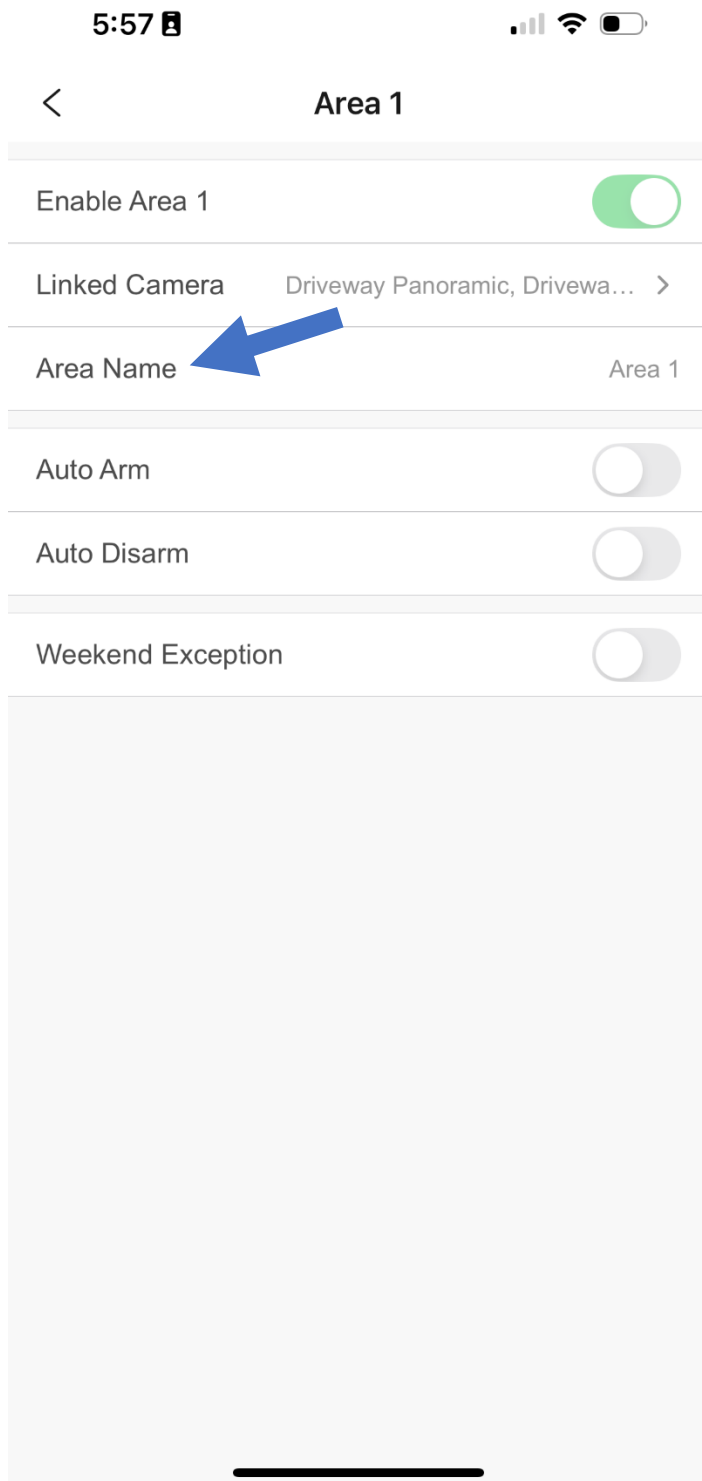

## STEP 16

Rename the area.


Press 'OK'

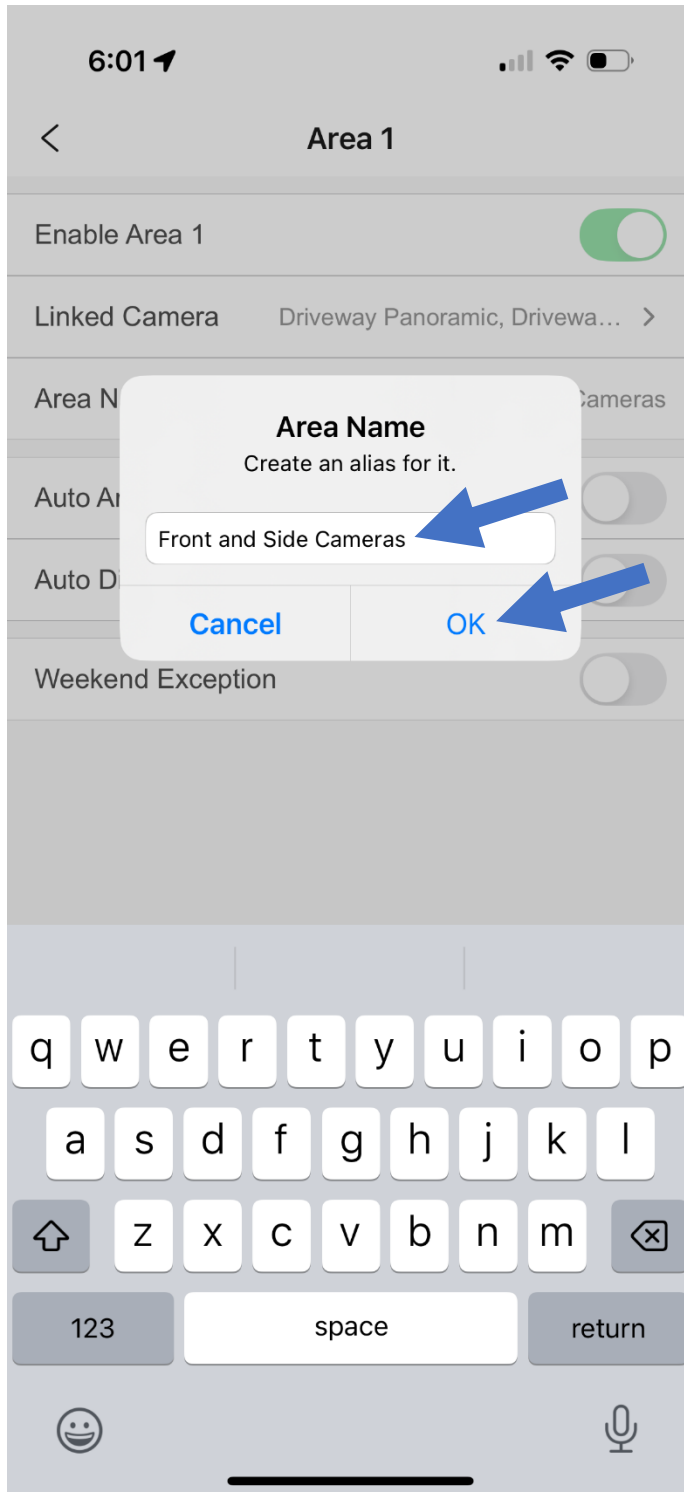



## STEP 17

Repeat for all areas until all area names are as required.

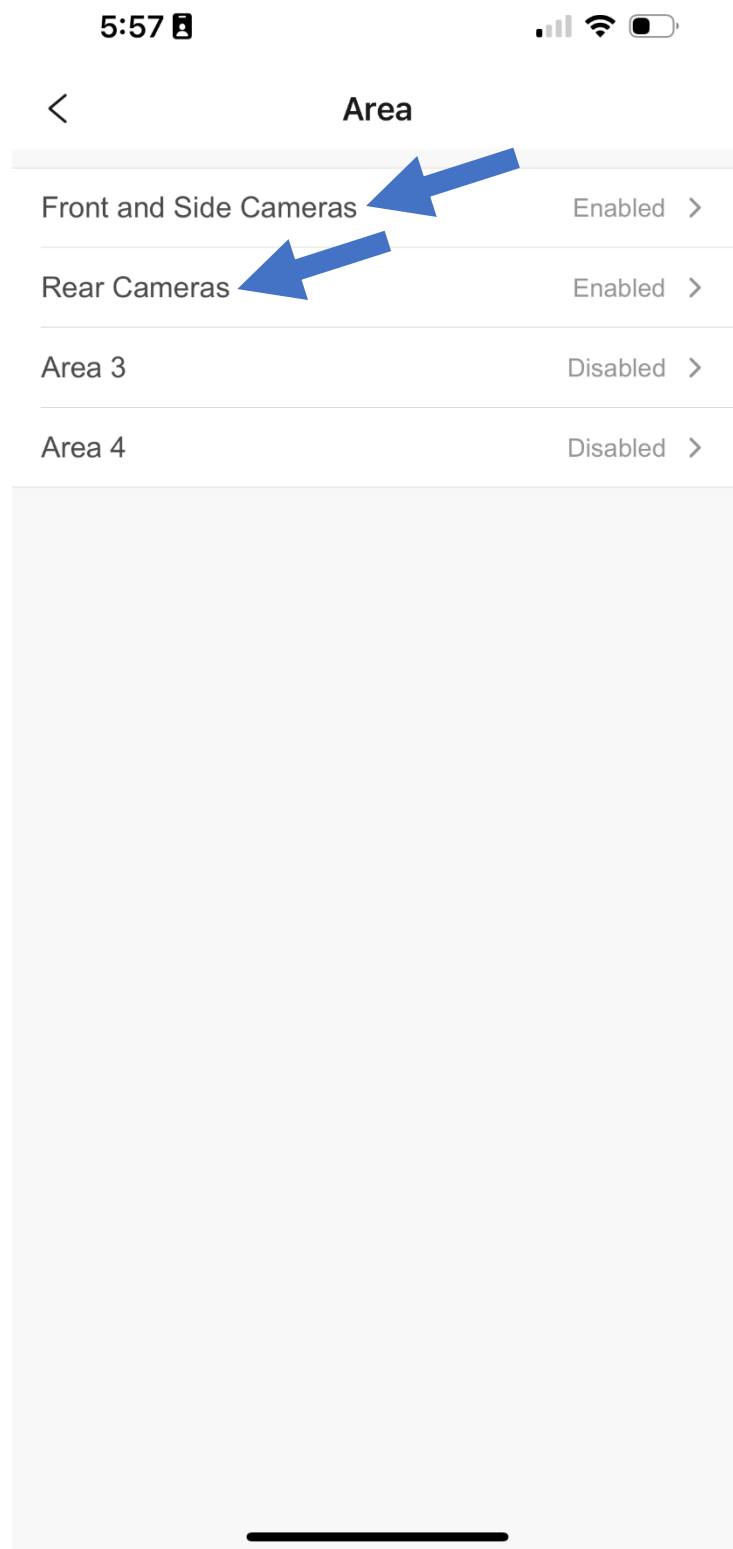


## STEP 18

Go back to the Live-Guard menu.


All areas will be displayed with their chosen names.

All areas now feature their required cameras and can be armed and disarmed independently of each other.

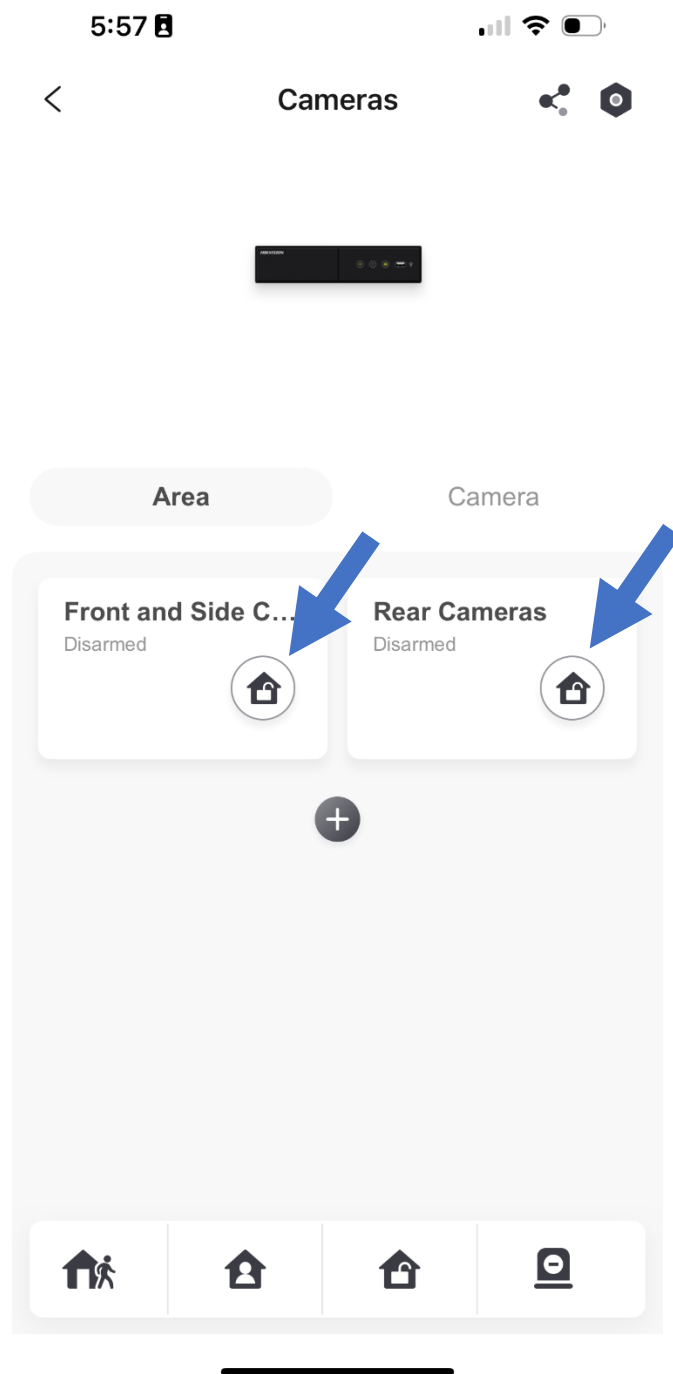


## STEP 19

To move a camera from 'Area 2' back into 'Area 1', go to the 'Area 1' settings.

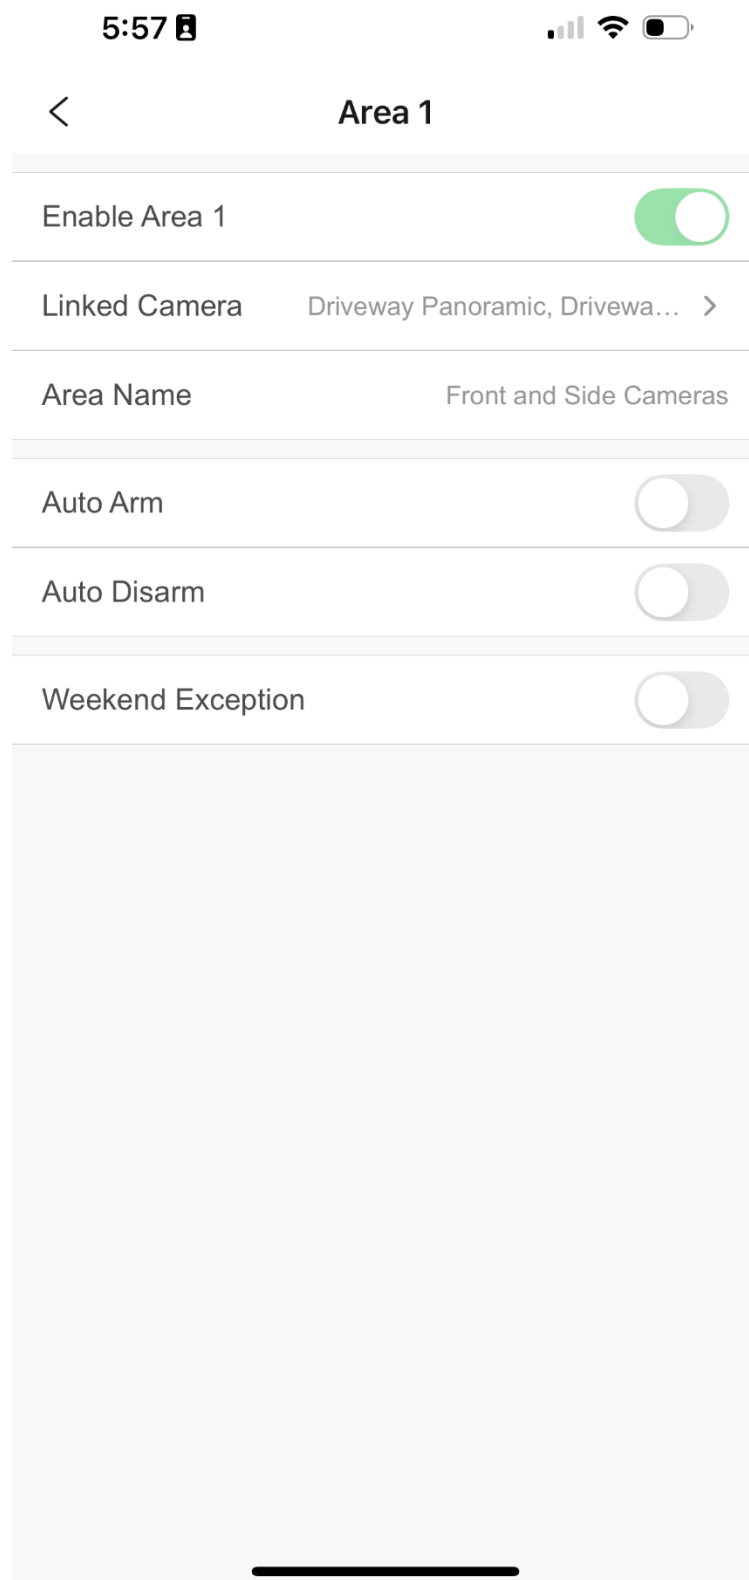


## STEP 19

Click on 'Linked Camera'.

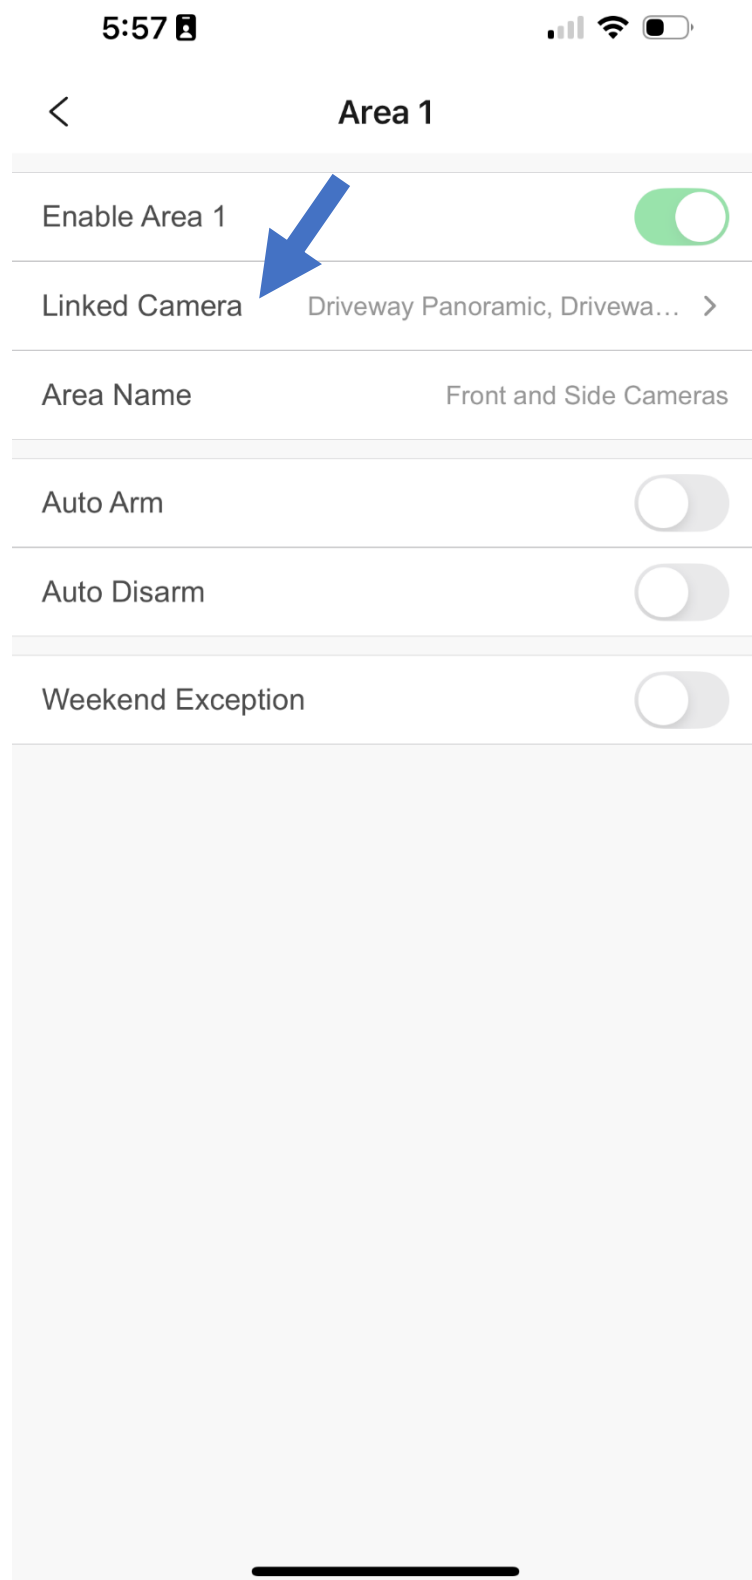

## STEP 20

Scroll to the bottom, then click on 'Plus'.

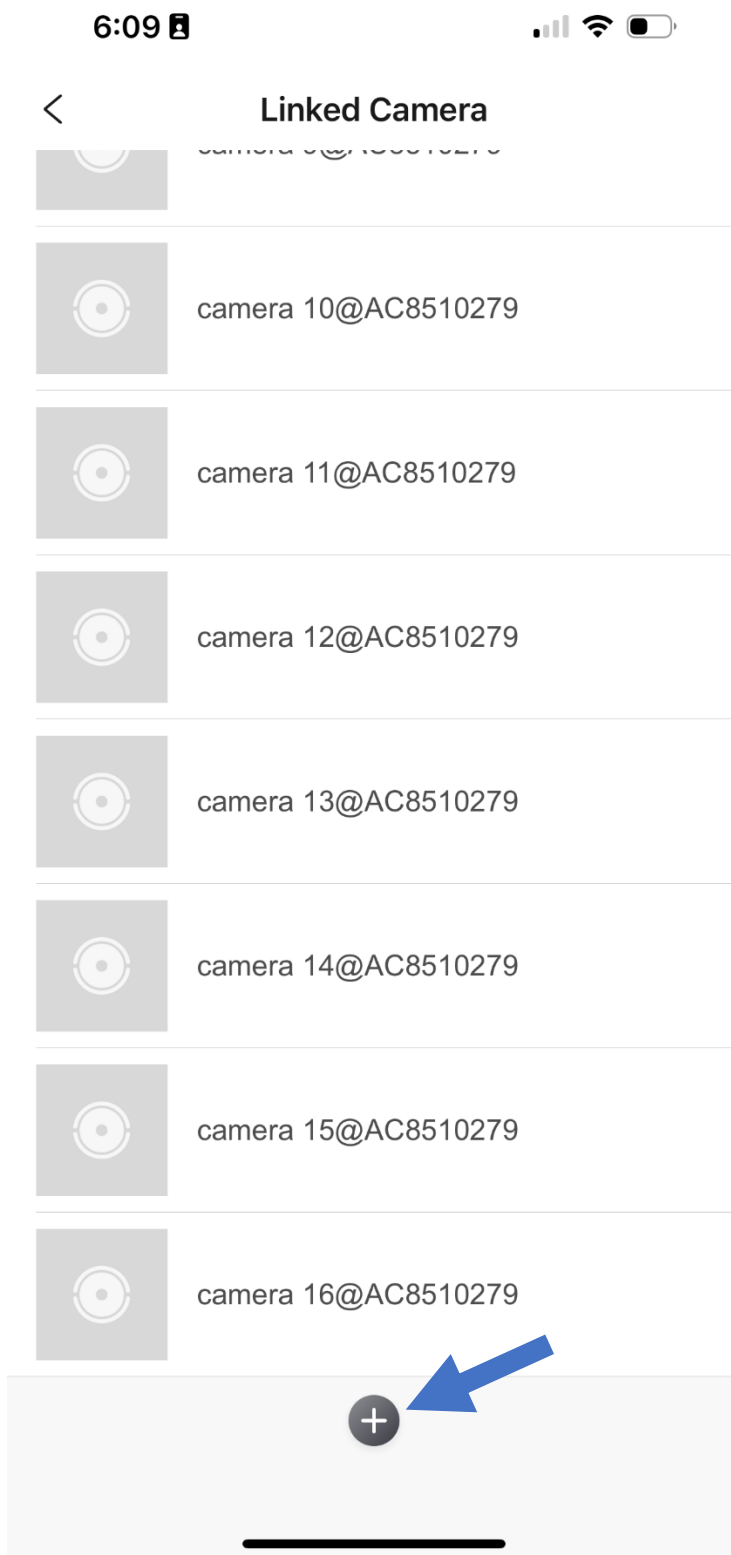


## STEP 21

Select the cameras to move into Area 1.

Press 'OK'.


NOTE:

The cameras will be removed from Area 2, and moved into Area 1.

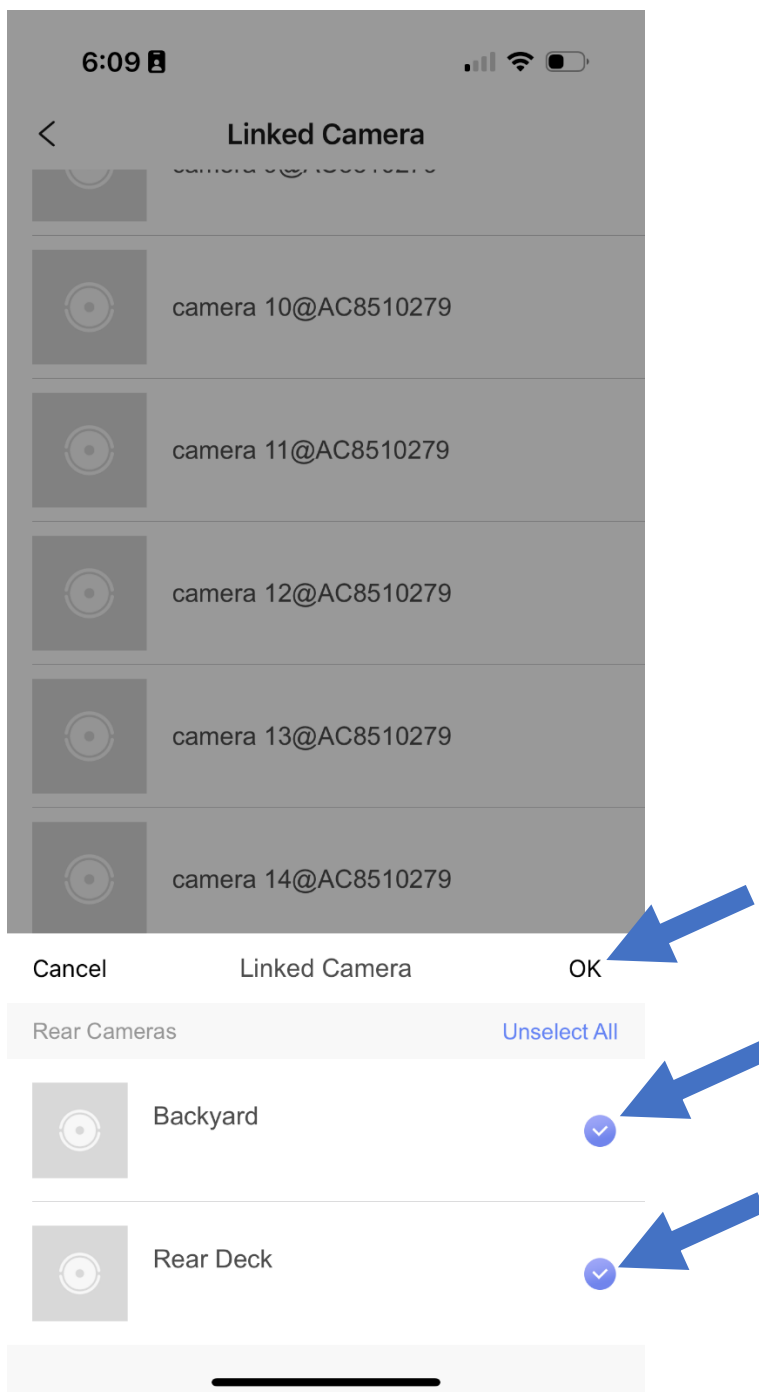

## STEP 22

Confirm the required cameras are in the 'Linked Camera' list for Area 1.

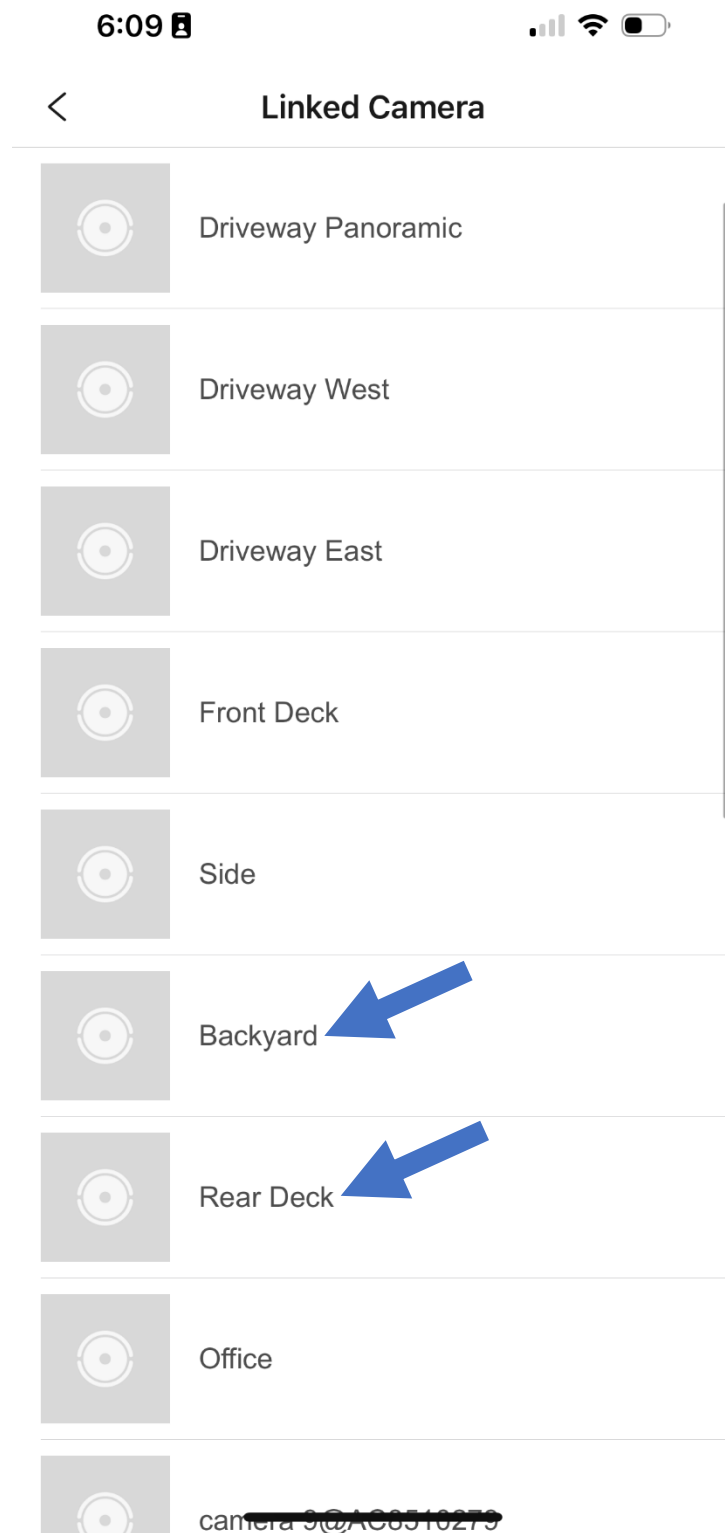

## STEP 23


NOTE:

You can disable an area that doesn't have any cameras in it.

This will prevent it from showing on the Live-Guard menu screen.

To do this, go to Area Settings.


Click on the required area to disable.

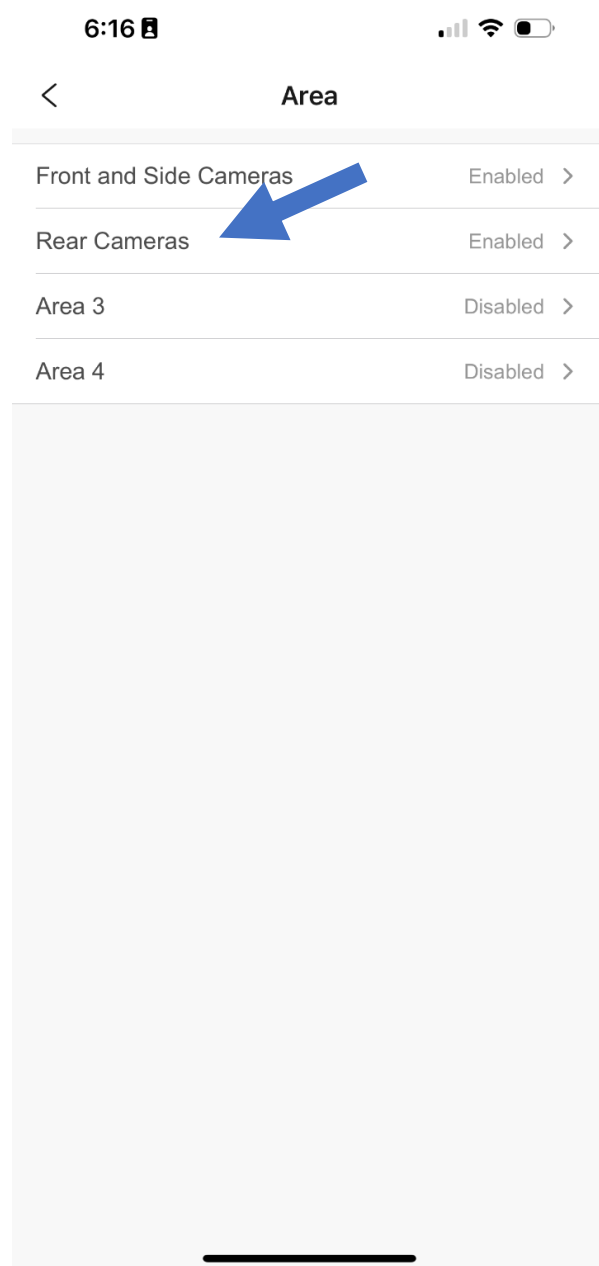




## STEP 23

Disable the area.

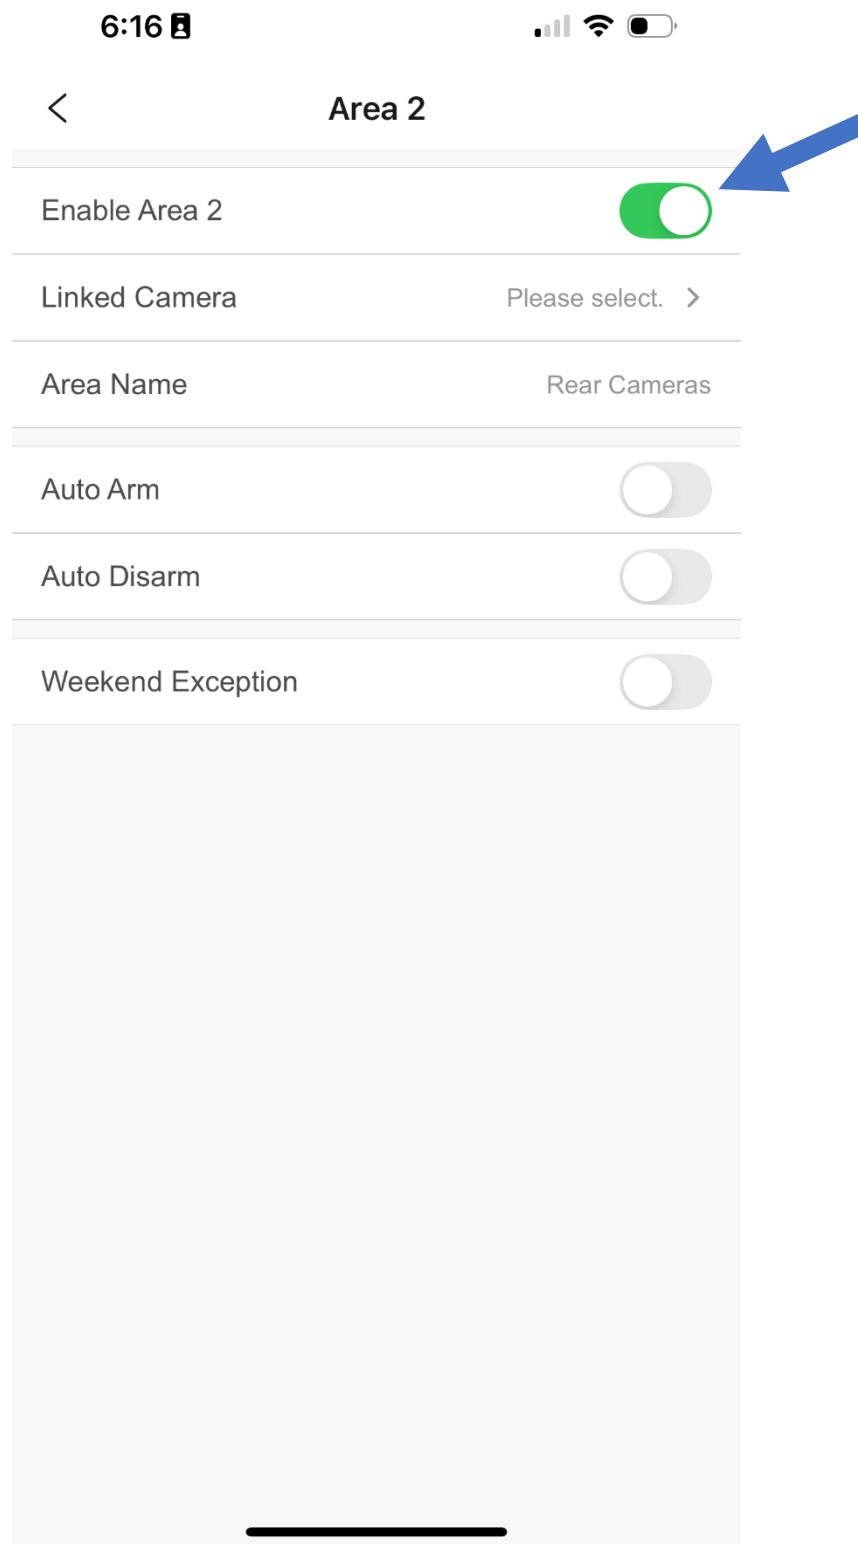

## STEP 24

Confirm the area is disabled.

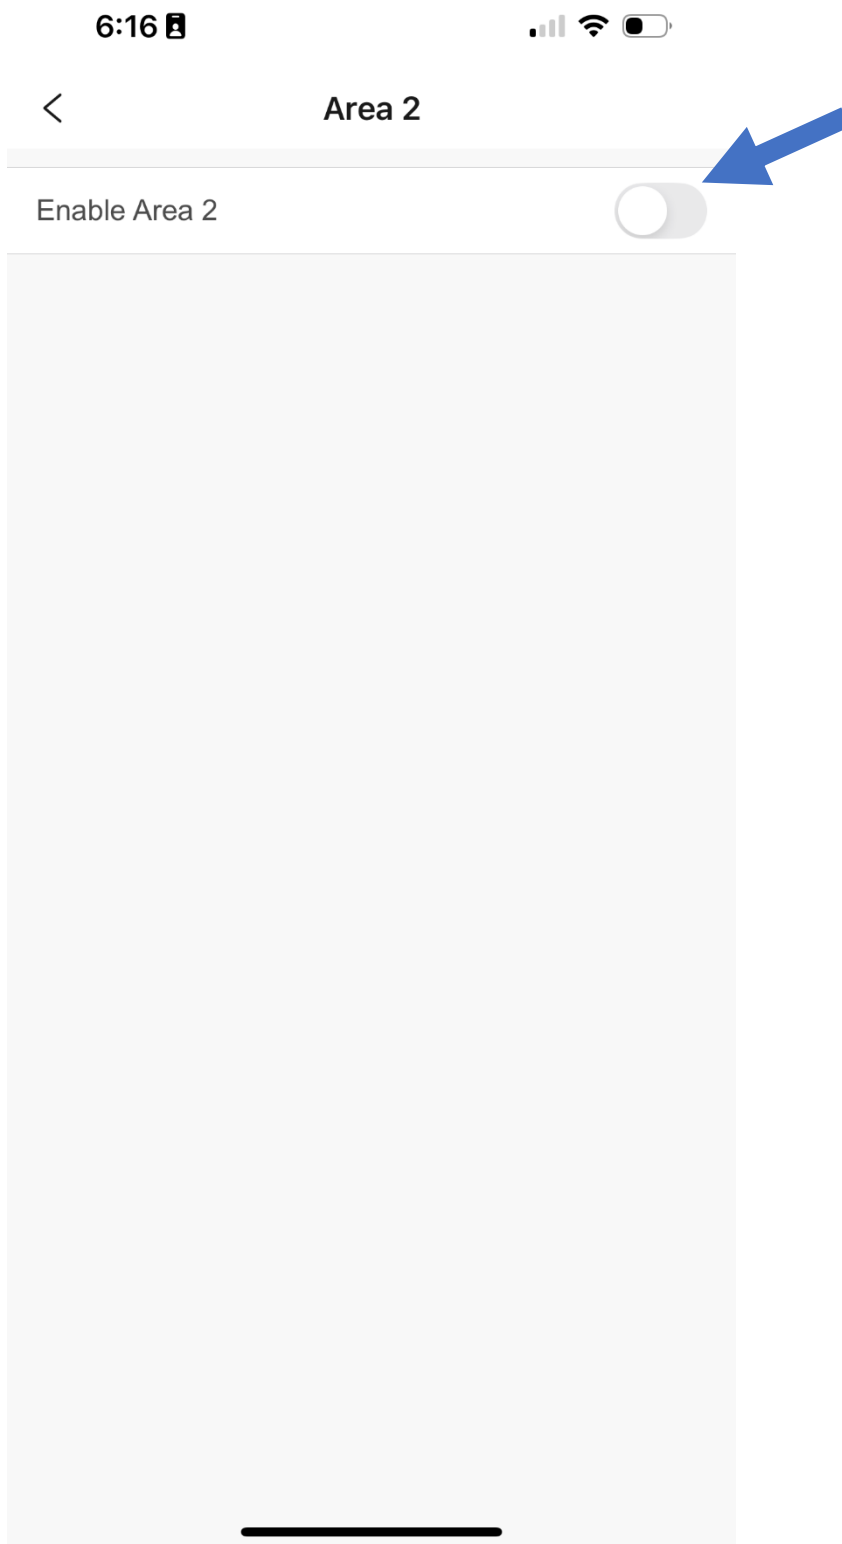

## STEP 24

The area will no longer be displayed on the Live-Guard menu screen.

