


## **33. HOW TO LIVE VIEW CAMERAS IN IVMS** **(JUNE 2025)**

### **STEP 1**

Open IVMS.

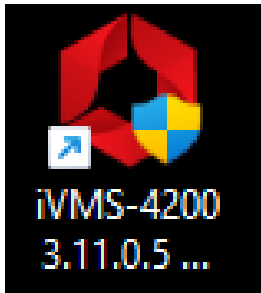

### **STEP 2**


Wait for IVMS to start the application.

The software will 'auto-login' to the home screen.

If the login screen appears, enter the username and password, then click login.


### **STEP 3**

Go to Main View.

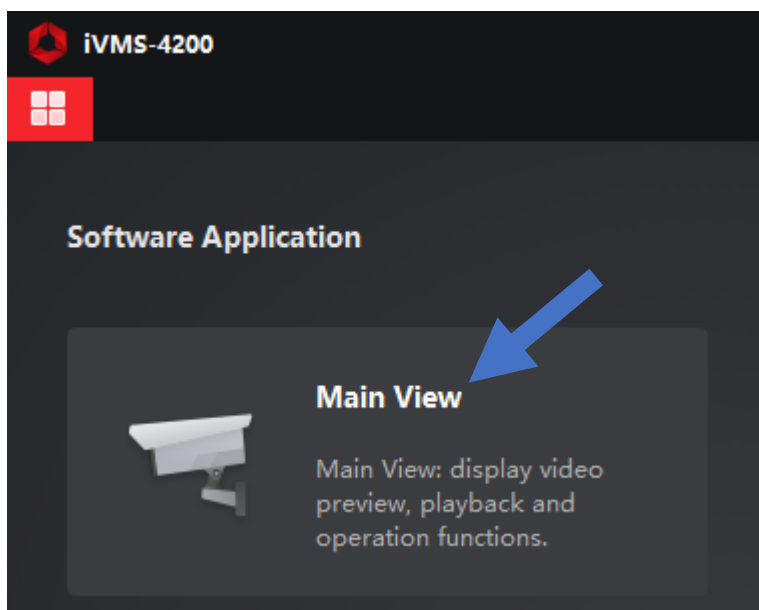


## STEP 4

The CCTV System will be listed on the left-hand side in the resource menu.

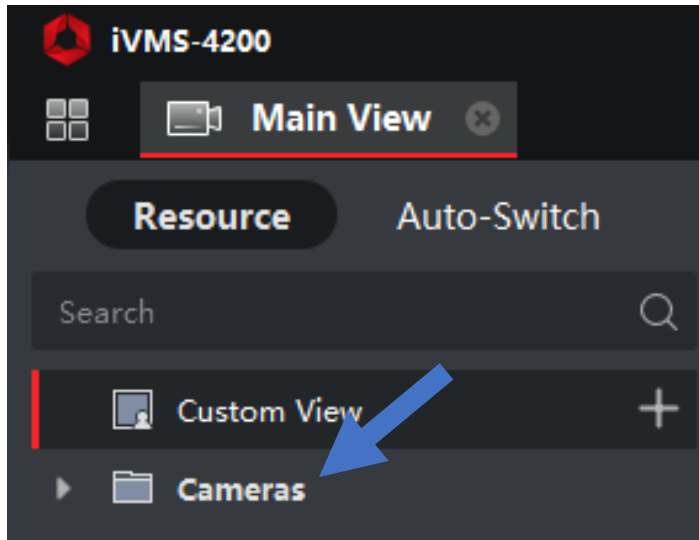


## STEP 5

Use the dropdown arrow to see all cameras connected to the NVR.

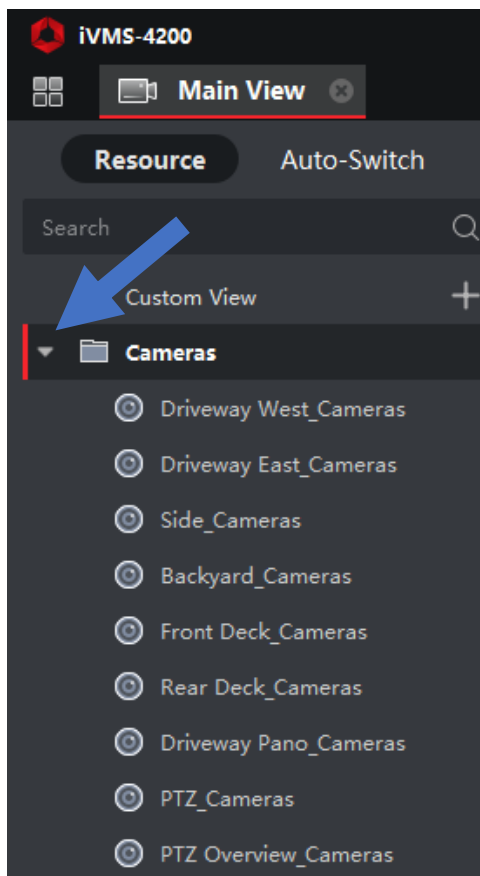


## STEP 6

To live-view all the cameras, hover your cursor over the CCTV system, and click the play button that appears.

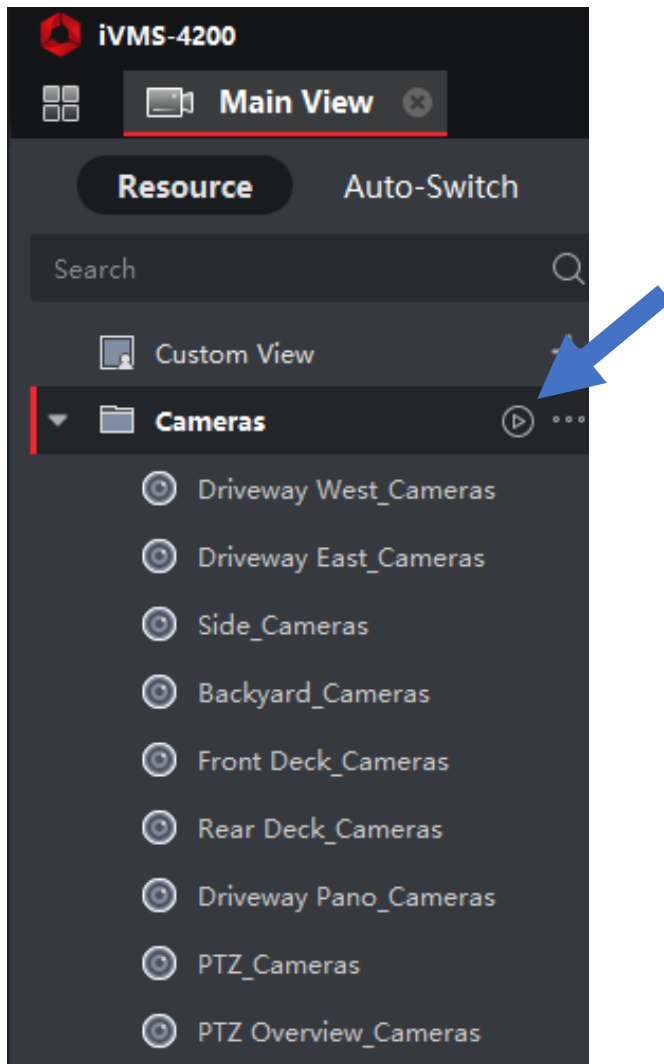

## STEP 7

All cameras will now appear in the Main View.

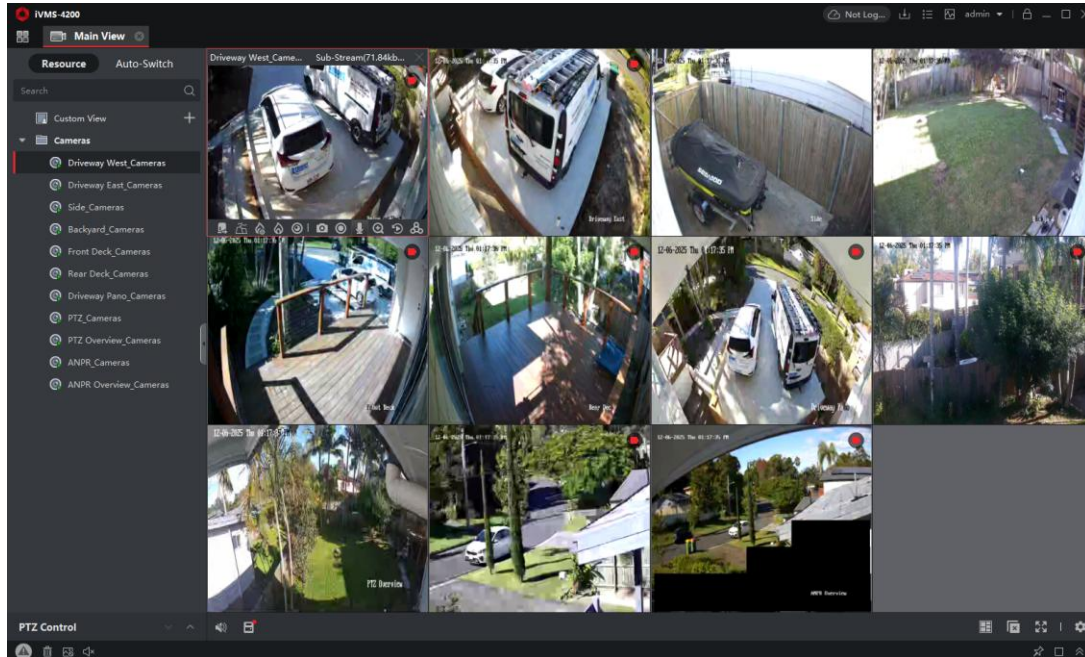

## STEP 8


To see a camera in single screen, double click on the screen of the required camera and it will change to single screen and go into full screen mode.





## STEP 9

To return to the original multi screen with all cameras, simply double click on the screen again and IVMS will return to the original multi screen with all cameras.

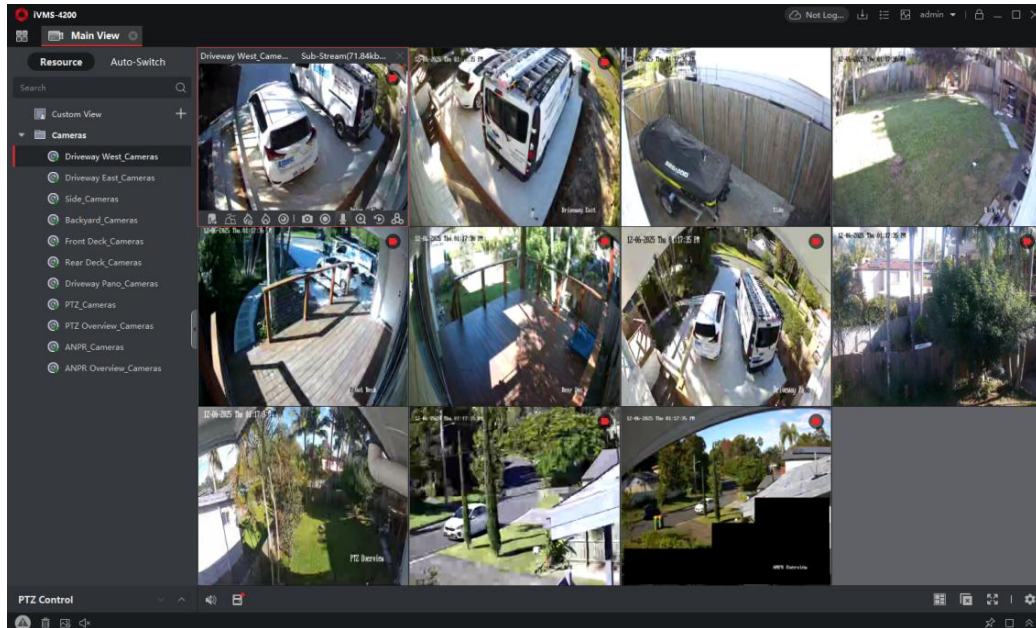


## STEP 10

To zoom in on a camera's view, double click on the camera to bring it up in single screen mode and full screen again.



## STEP 11

Hover your mouse over the screen. Right click, and then left click on 'Open Digital Zoom'.

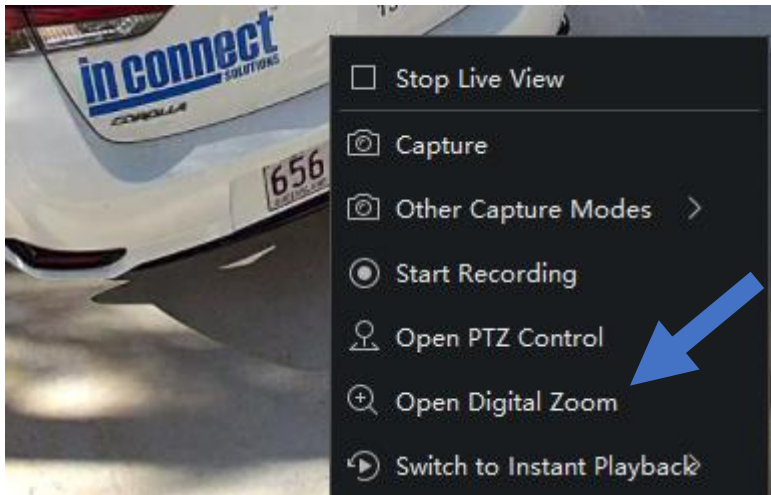

## STEP 12

Hold the cursor of the mouse over the target you want the zoom in on, and scroll the mouse wheel up. This will zoom in on the target.






## STEP 13

To zoom out, scroll the mouse wheel downwards. This will zoom out back to full screen.




## STEP 14

You will need to then 'Close Digital Zoom'. Hover your mouse over the screen. Right click, and then left click on 'Close Digital Zoom'.

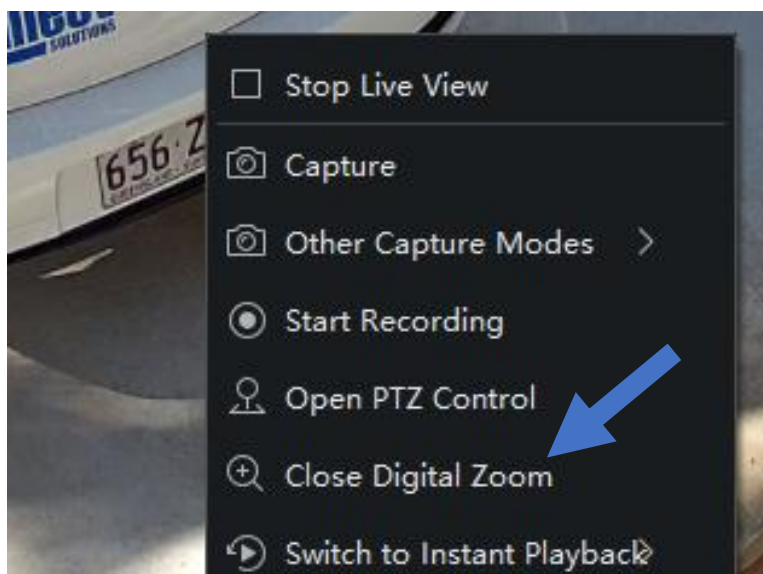

## STEP 15

You can then double click on the live view to return to multi screen view.

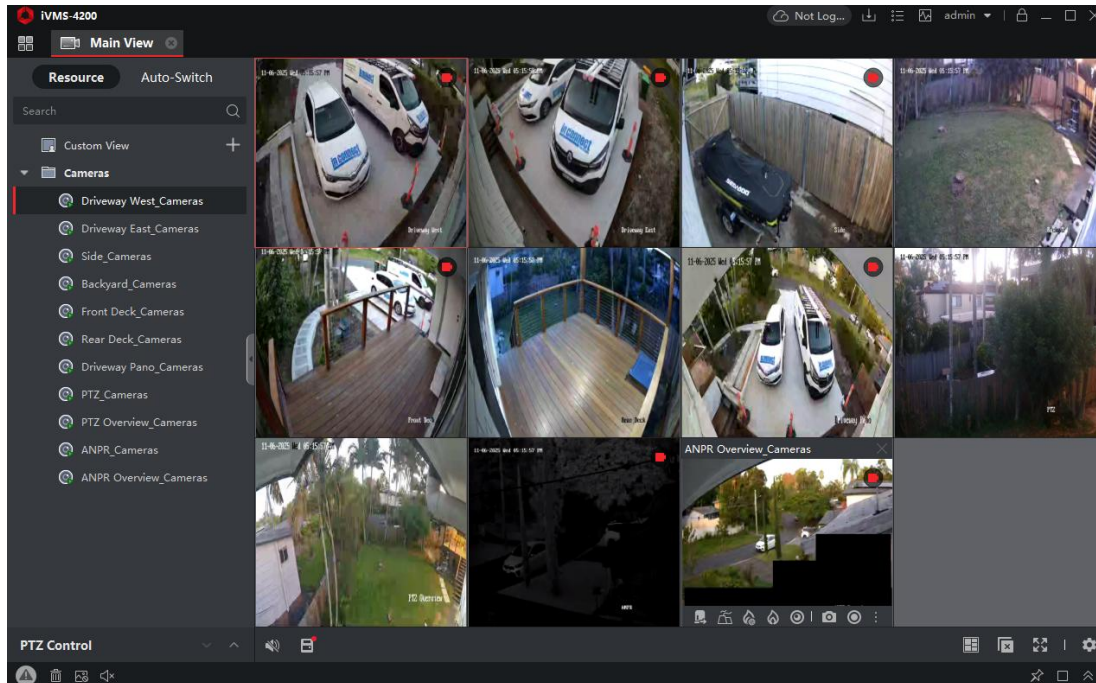

## STEP 16

When you are finished using IVMS, you have 3 options depending on when you plan to use IVMS next.

The options are listed on the following page.





**Option 1** – Use this option if you are going to view the cameras in IVMS again shortly (ie: in the next 5 minutes).


Simply minimize the software or leave the software on the screen.

**Option 2** – Use this option if you are going to view the cameras again later the same day.

It is advised to stop the cameras streaming to the software.

This is to minimize the resources used by your PC in the meantime whilst not viewing the cameras in IVMS.

You can do this by clicking on the 'Stop All Live View' button in the bottom right corner of the screen.

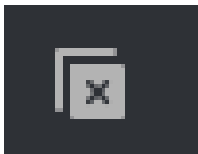

You can then minimize the software or leave it on the screen.

When you return later, you can start the cameras streaming again by hovering your cursor over the NVR and clicking the play button that appears (as shown previously in Step 6).

**Option 3** – Use this option if you will not be viewing the cameras again until the next day, or later.

Stop the cameras streaming, then close the software. You can do this by clicking the Stop All Live View button in the bottom right corner (as shown previously in Option 2).

Then close the software by clicking the X in the top right corner, then clicking OK when prompted to Exit Now.

