


51. HOW TO LOGIN TO THE NVR (JUNE 2025)


STEP 1

The NVR will display a Live View when in lock screen mode.

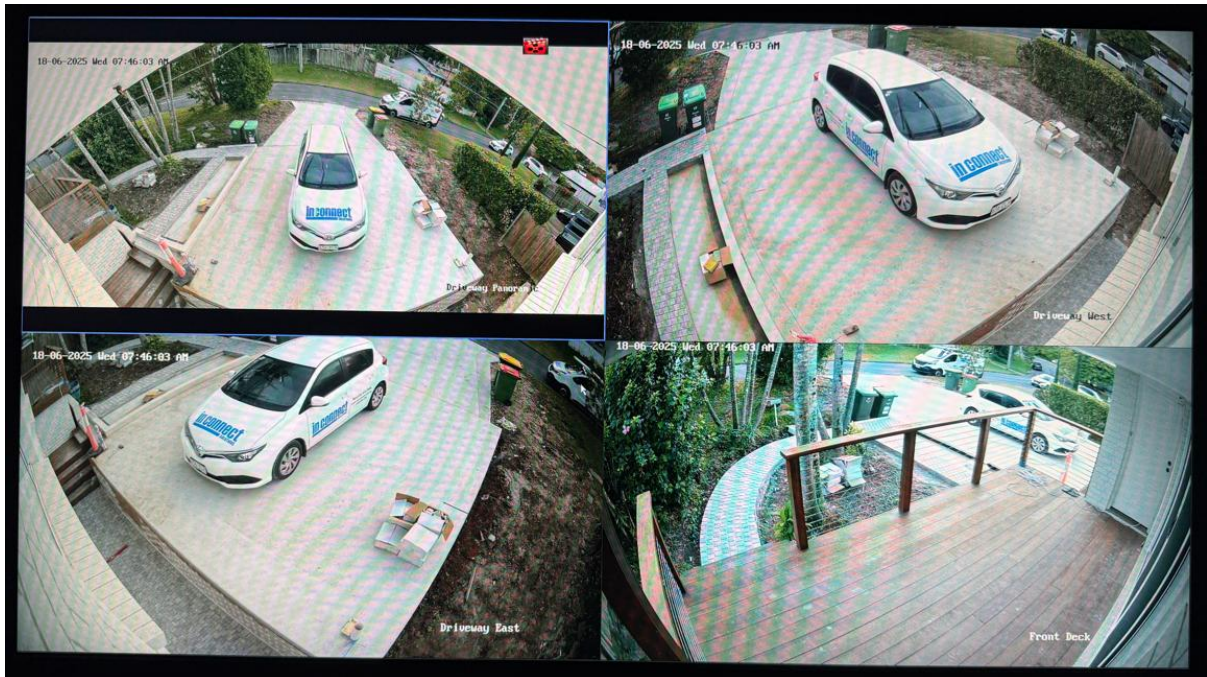

STEP 2

Rick click, press Enter Desktop.

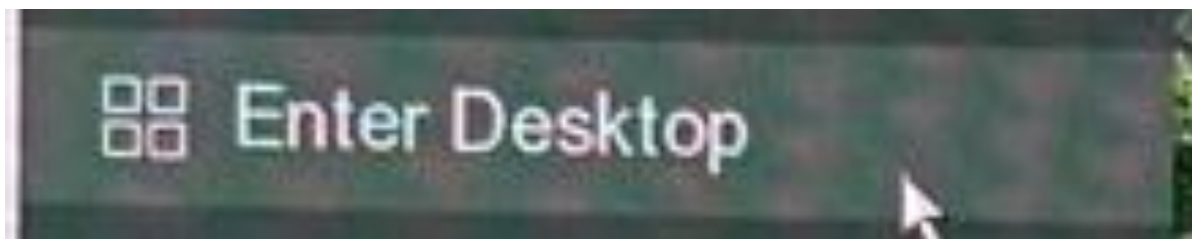

STEP 3

The unlock screen will appear.



STEP 4


Draw the Unlock Pattern.

The Unlock Pattern will be provided by your installer.



STEP 5


Alternatively, you can choose Password Login.

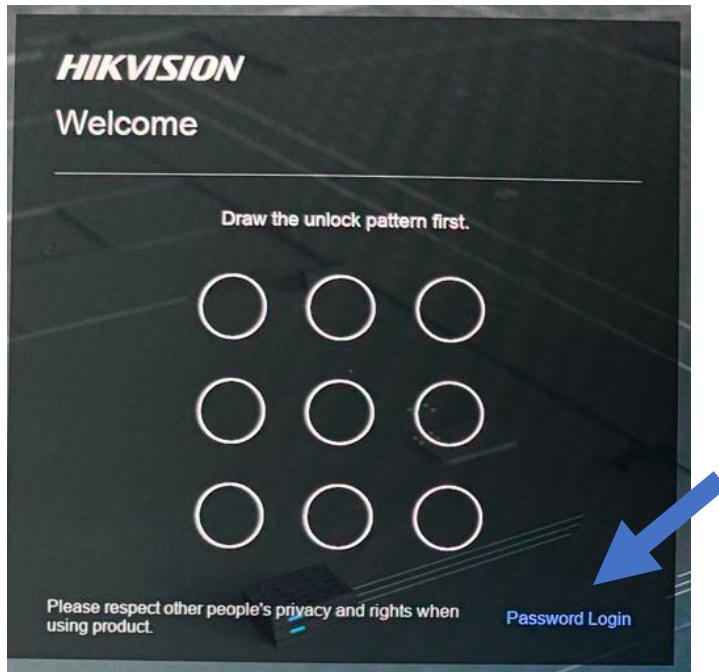

STEP 6


Enter the password.

The password will be provided by your installer.

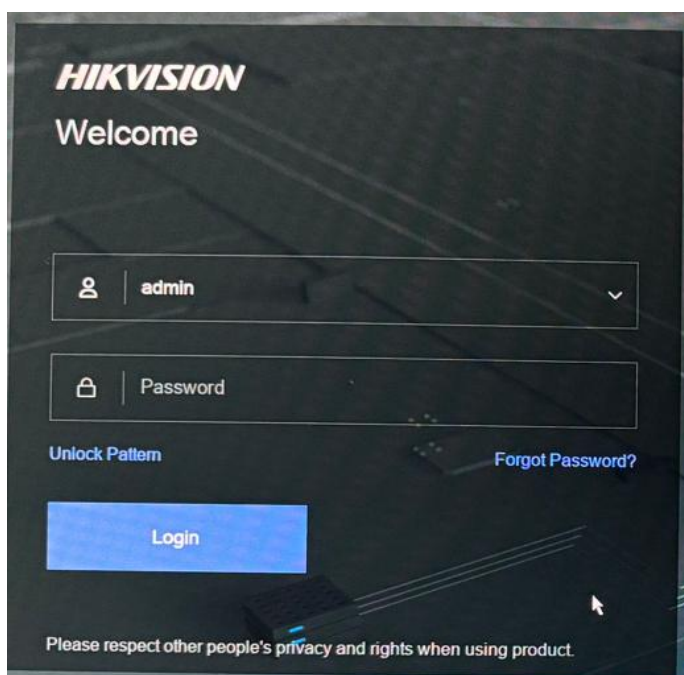


STEP 7

You will now be on the Desktop.

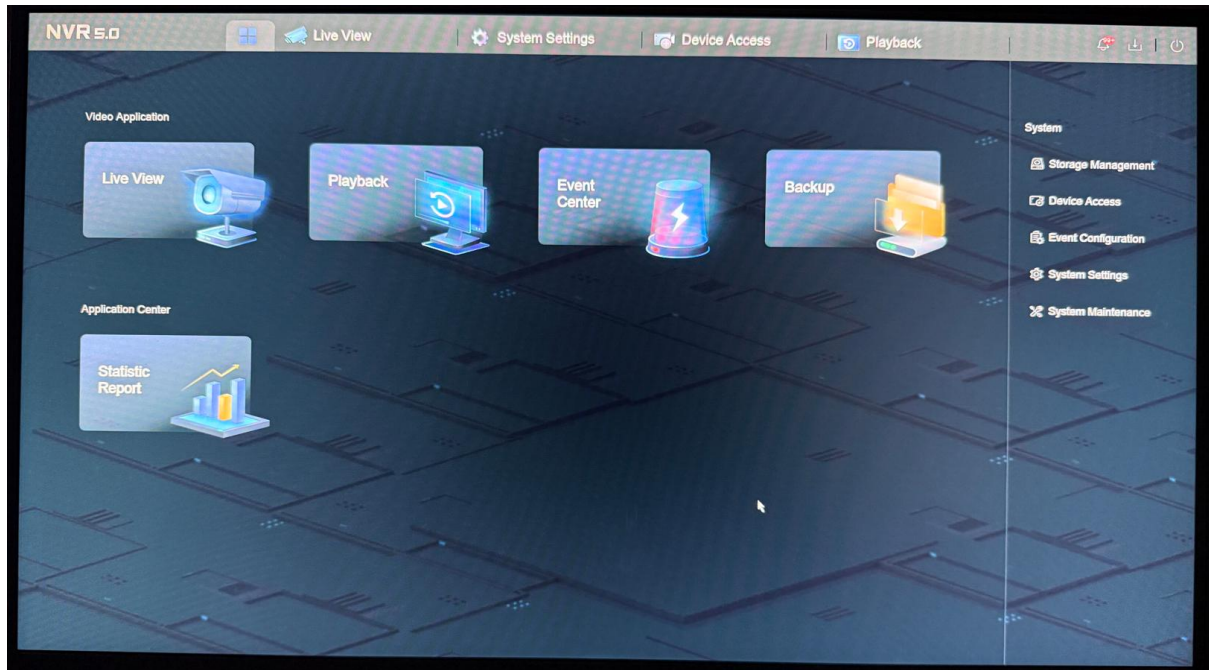


STEP 8

To disable the login screen, so there is no need to enter the unlock pattern nor password, go to System Settings.

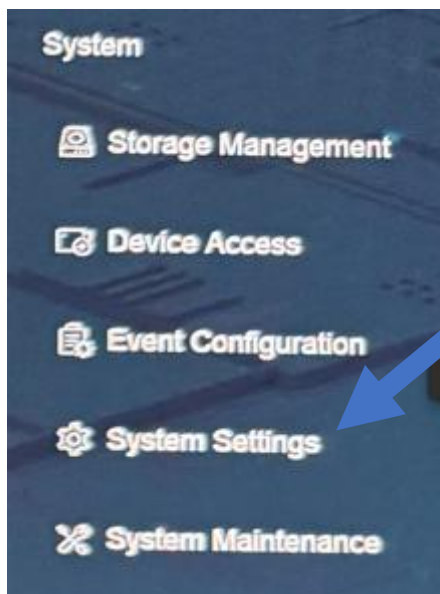


STEP 9

Go to System Configuration.

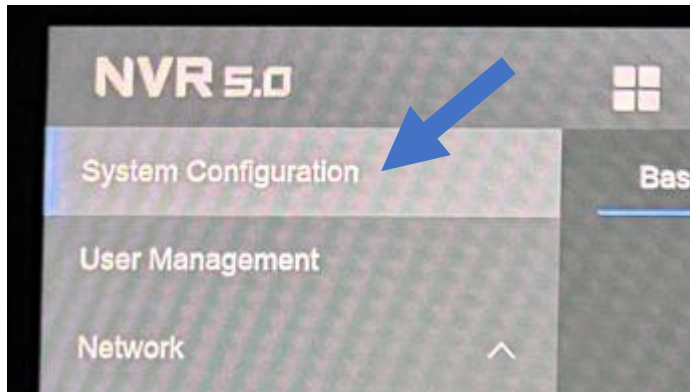


STEP 10

Turn off lock screen password.

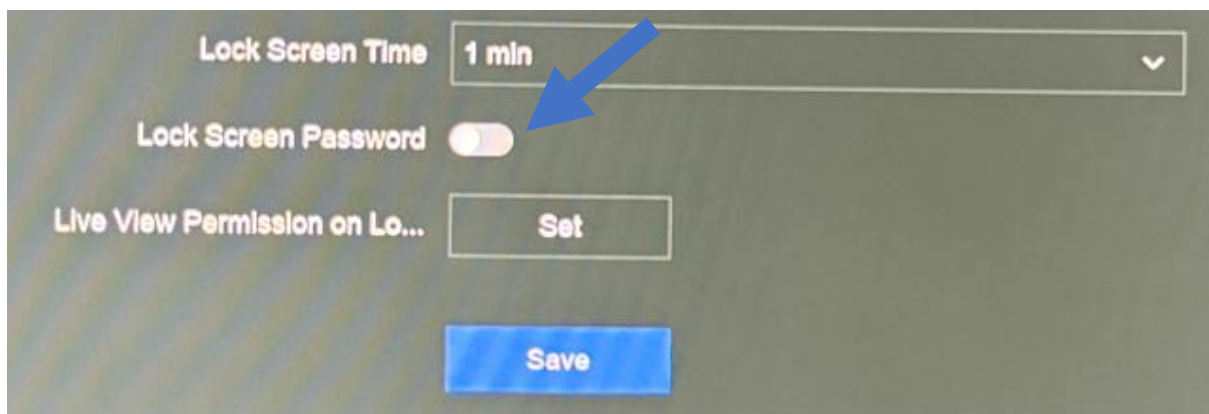


STEP 11

Press OK.

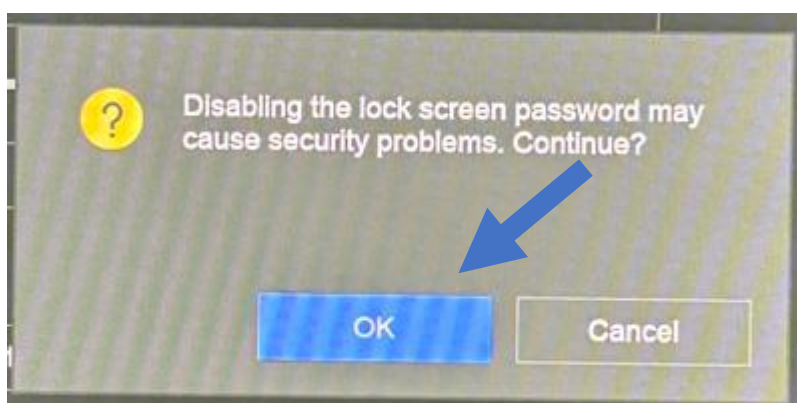


STEP 12

To change the Lock Screen Time, so that the amount of time that needs to pass before the lock screen enables, change the Lock Screen Time.

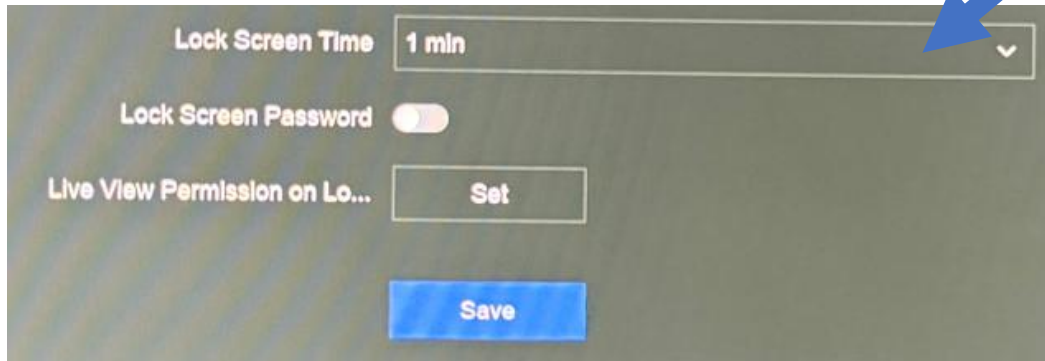

STEP 13

Press Save.

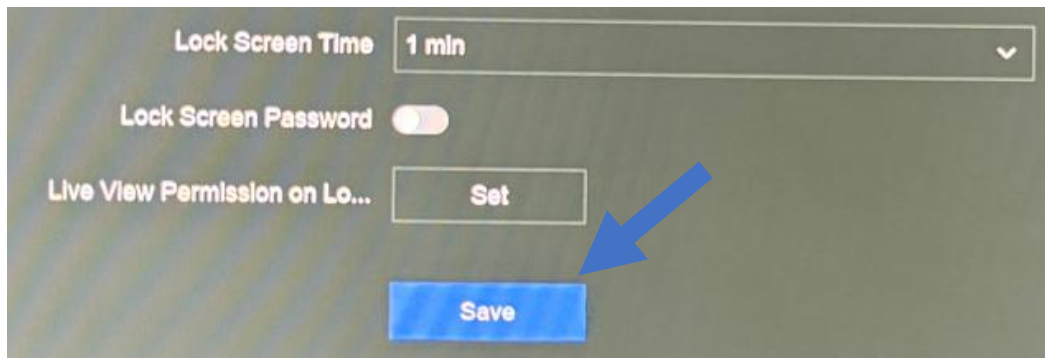

STEP 14

Go back to the desktop.

