

54. HOW TO SETUP CUSTOM VIEWS **(JUNE 2025)**


STEP 1

Go to Live View.




STEP 2

Click custom view.

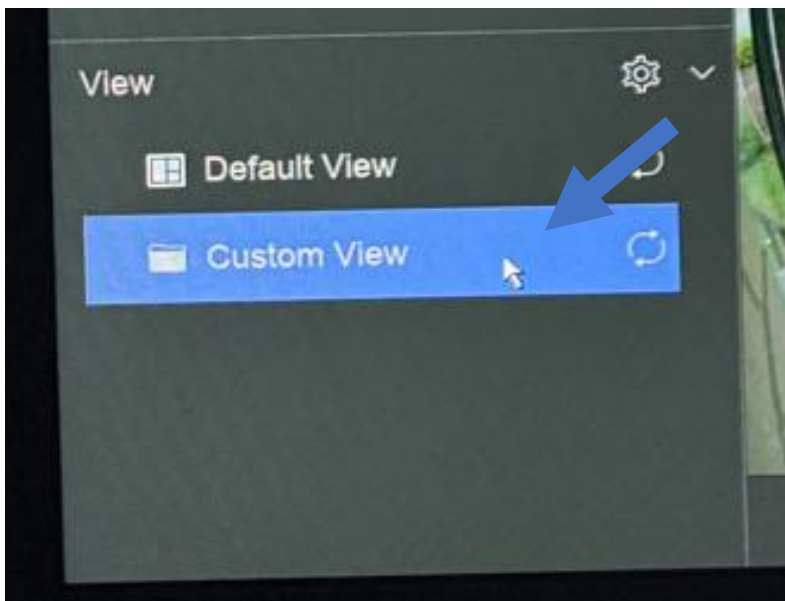


STEP 3

Click view settings

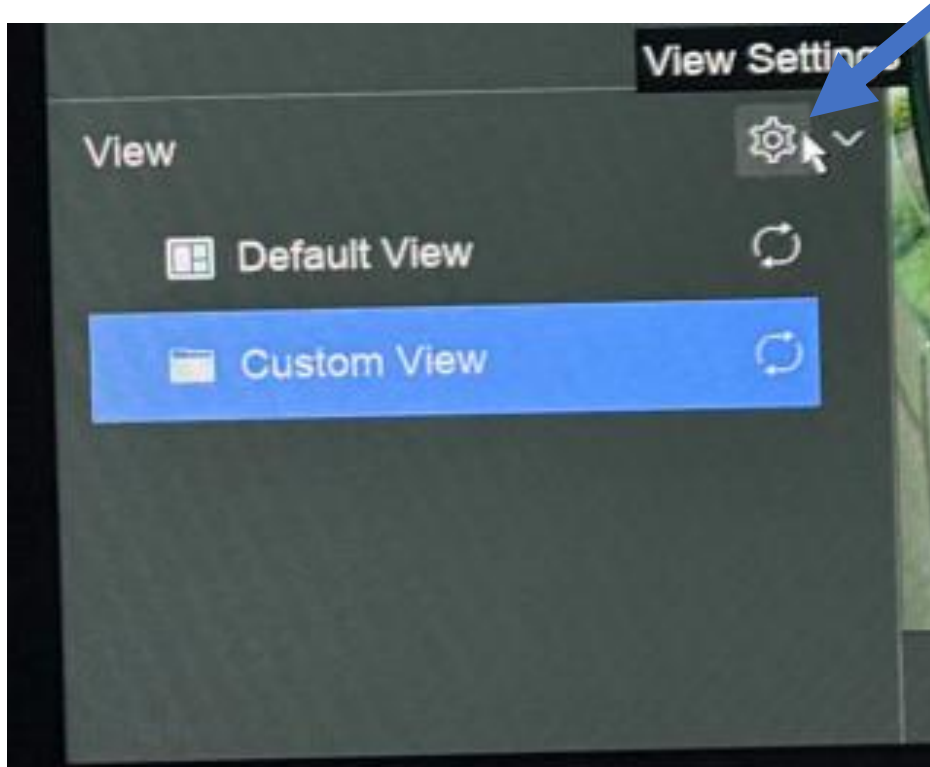


STEP 4

Press Add View.

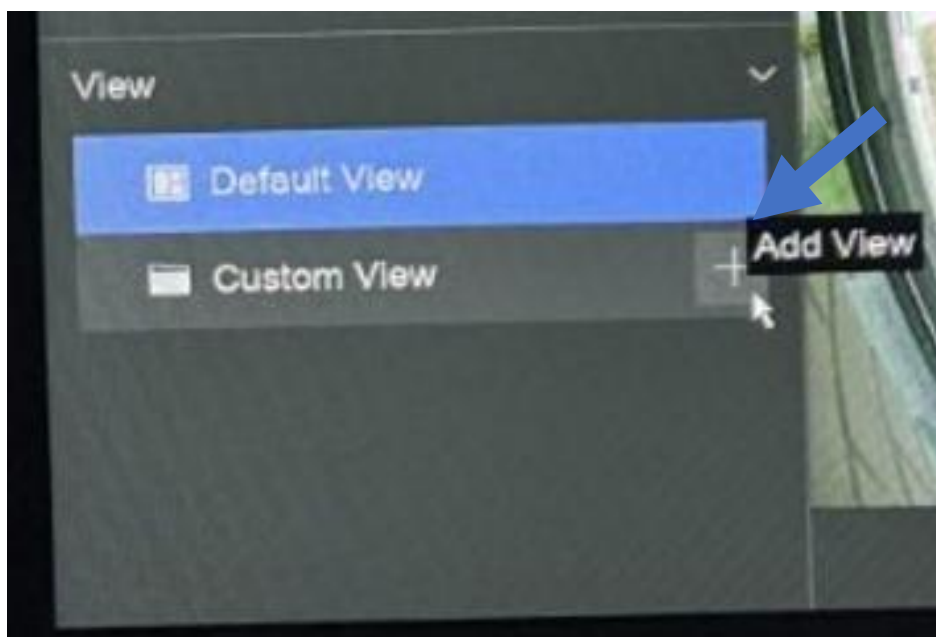


STEP 5

Enter the required name for the view.

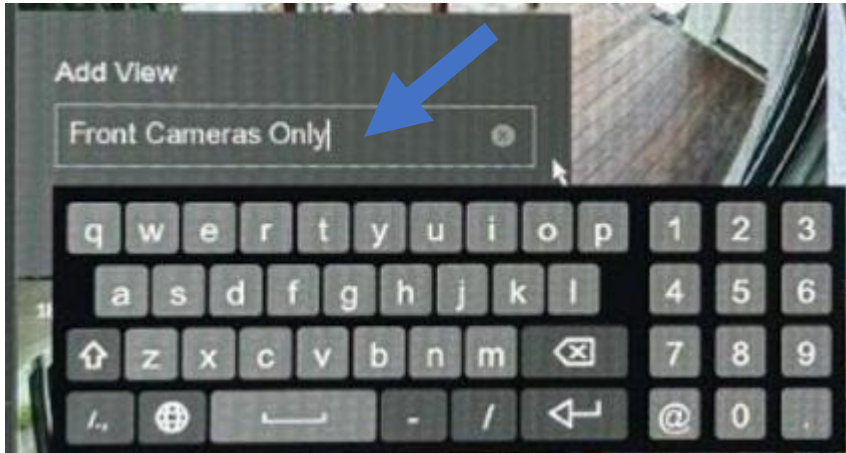


STEP 6

Press Enter.

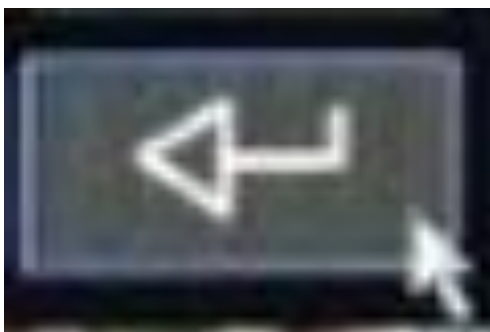

STEP 7


Press OK.

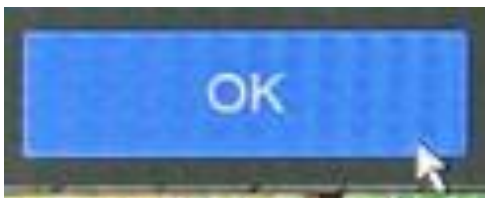

STEP 8

Go to Window Division aka: Split.

The button is in the bottom right corner.

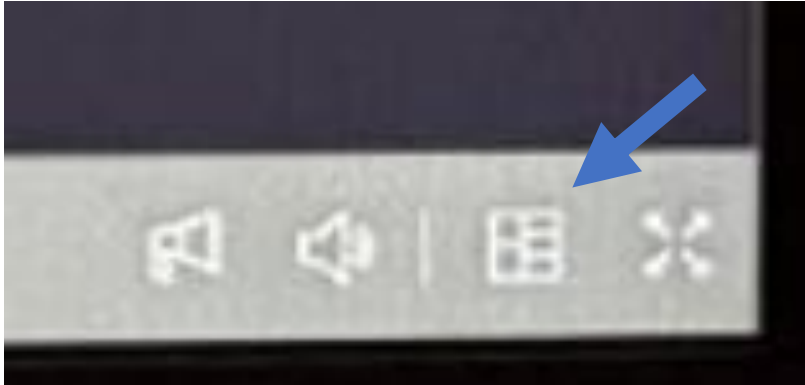


STEP 9

Choose the required camera quantity/window division to suit the new custom view.



STEP 10

Move your cursor to the channel list on the left.

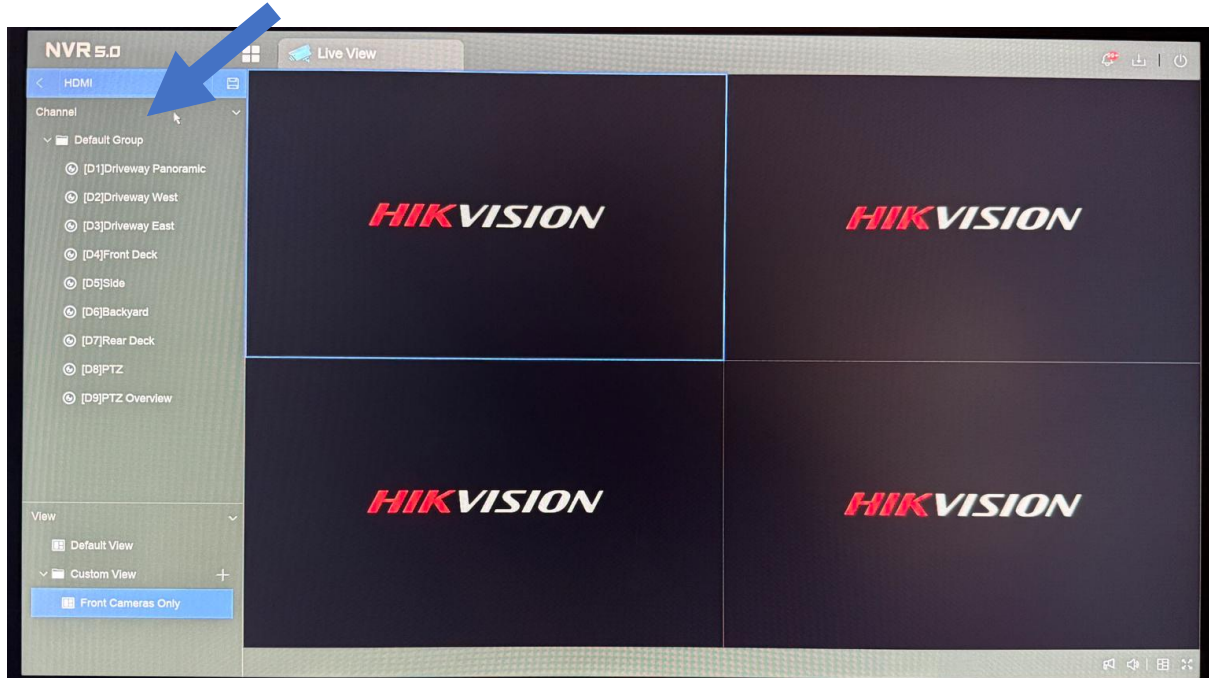

STEP 11


Decide which cameras you are going to add to the new custom view, and which tile each camera will go in.

STEP 12

Hover your cursor over the first camera.

Click and hold.

Drag the camera into the corresponding tile.

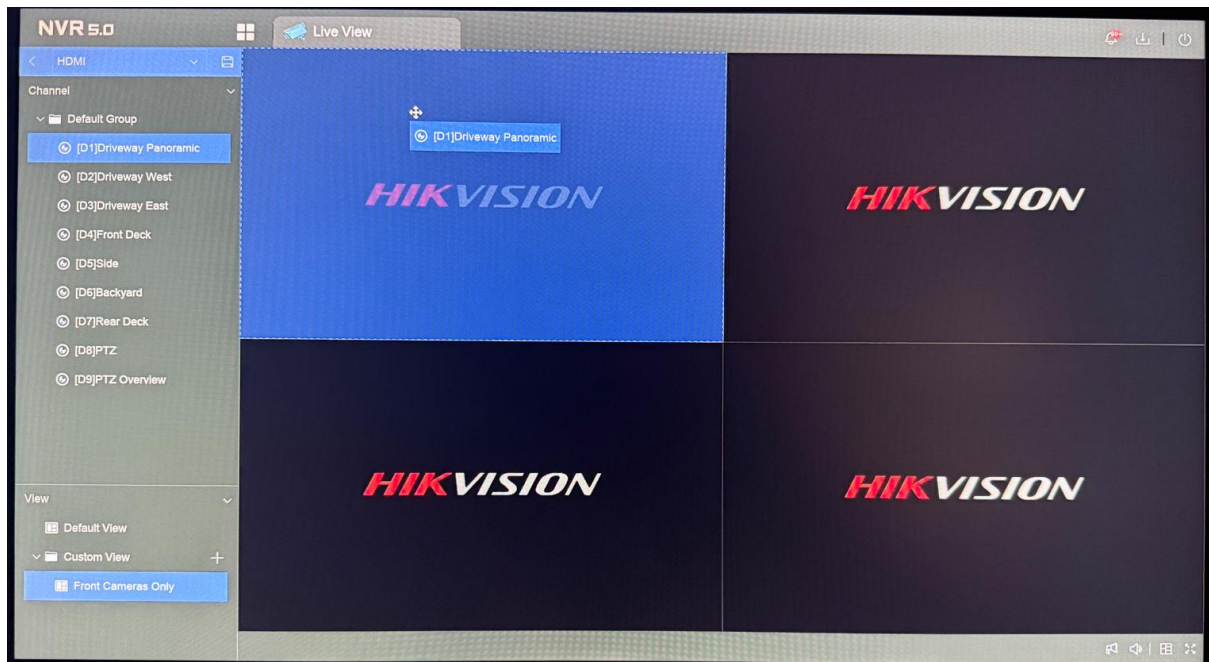

STEP 13

Repeat for all cameras required in the view.


STEP 14

Press Save.




STEP 15

Confirm the new custom view is listed in the View list in the bottom left corner.

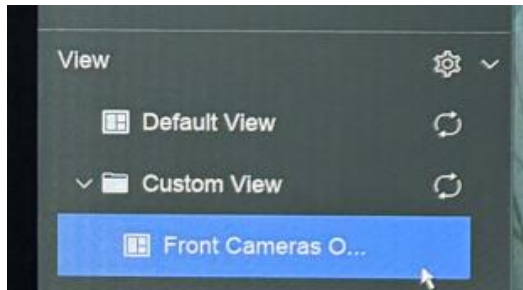


STEP 16

Click on the new custom view.

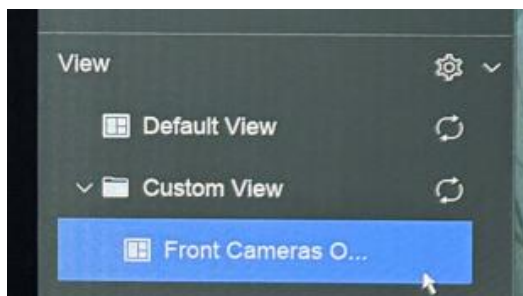


STEP 17

Confirm the custom view is as required.

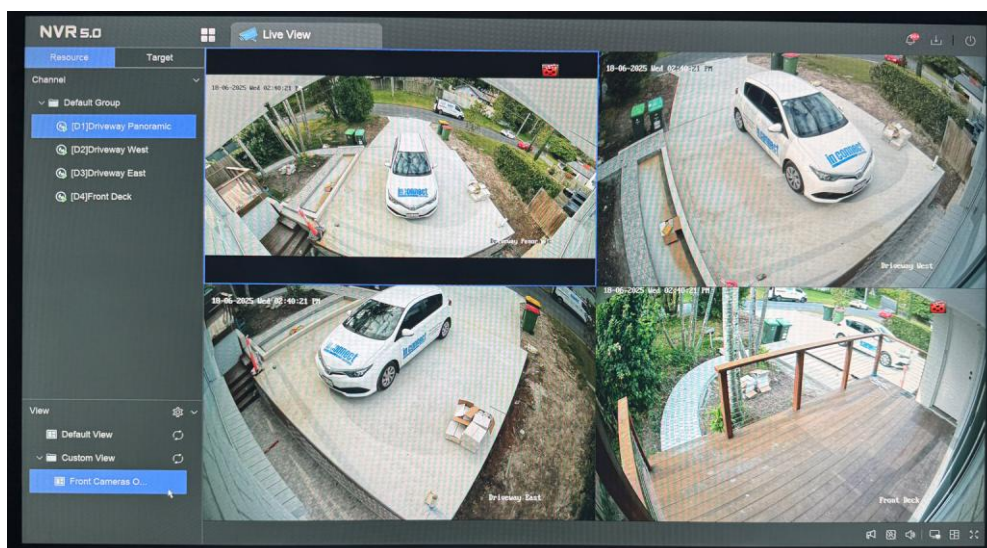


STEP 18

Click on default view.

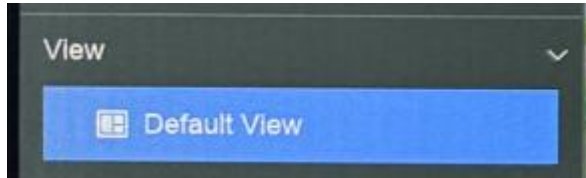

STEP 19

Confirm all cameras are back on the screen.

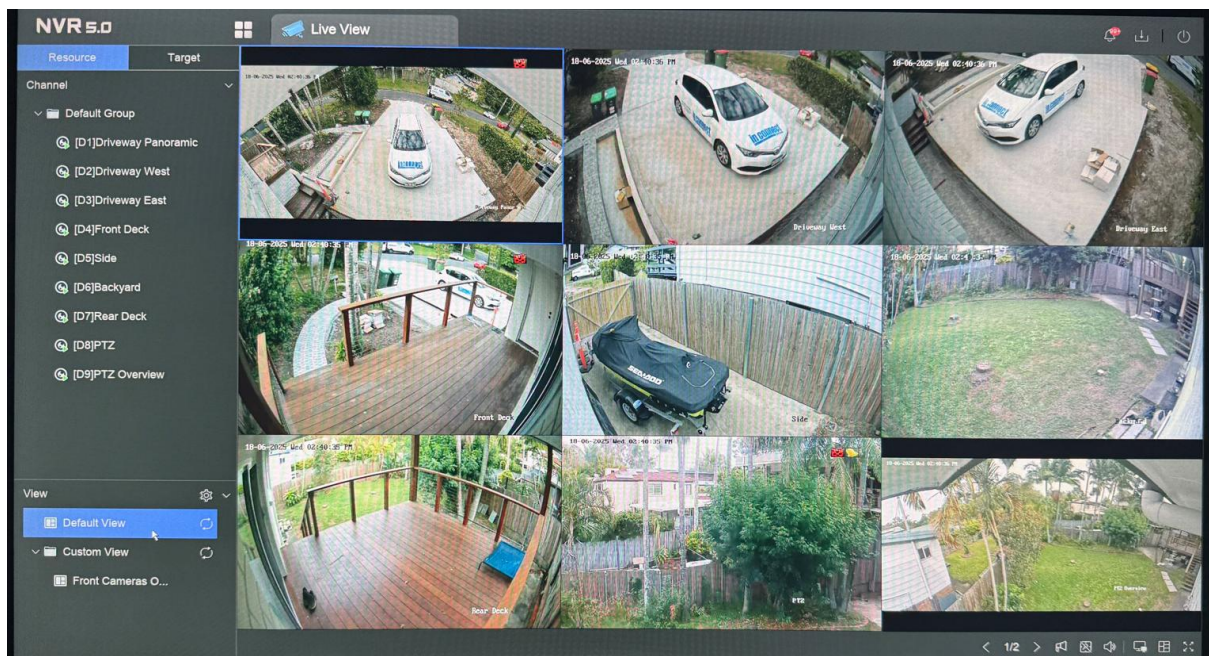


STEP 20

To setup additional custom views, repeat steps 2 - 17.

STEP 21


To delete a custom view, click view settings.

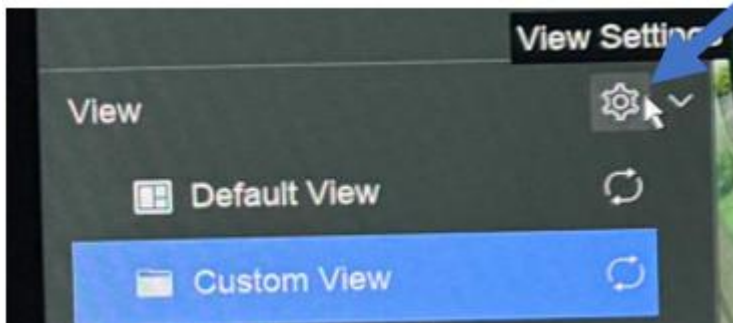

STEP 22

Hover your mouse over the custom view.

Press Delete.

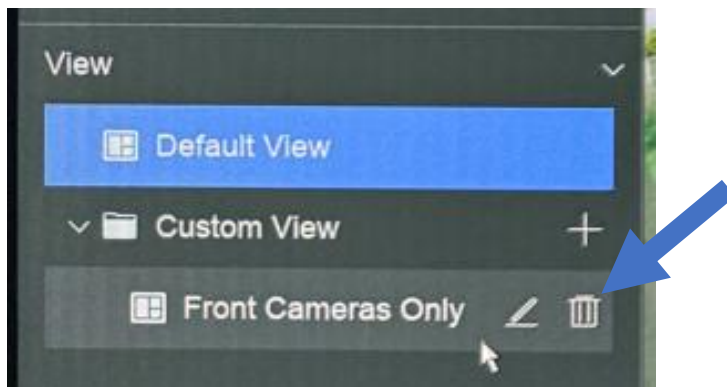

STEP 23

Press Save.

