


203. HOW TO CHANGE THE UNLOCK PASSWORD (JULY 2025)


STEP 1

Go to the Home Screen.

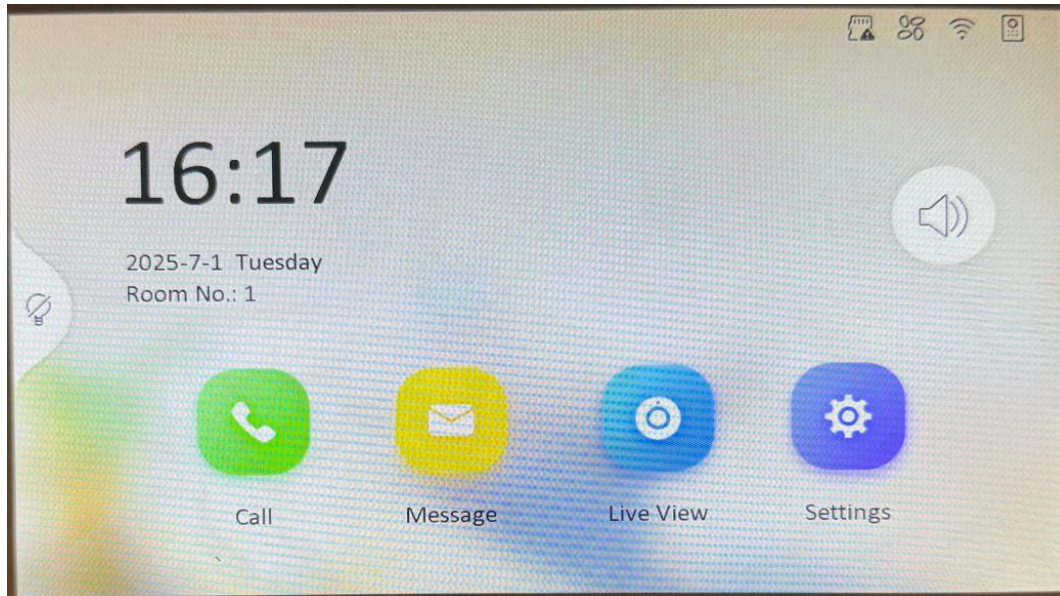


STEP 2

Go to Settings.

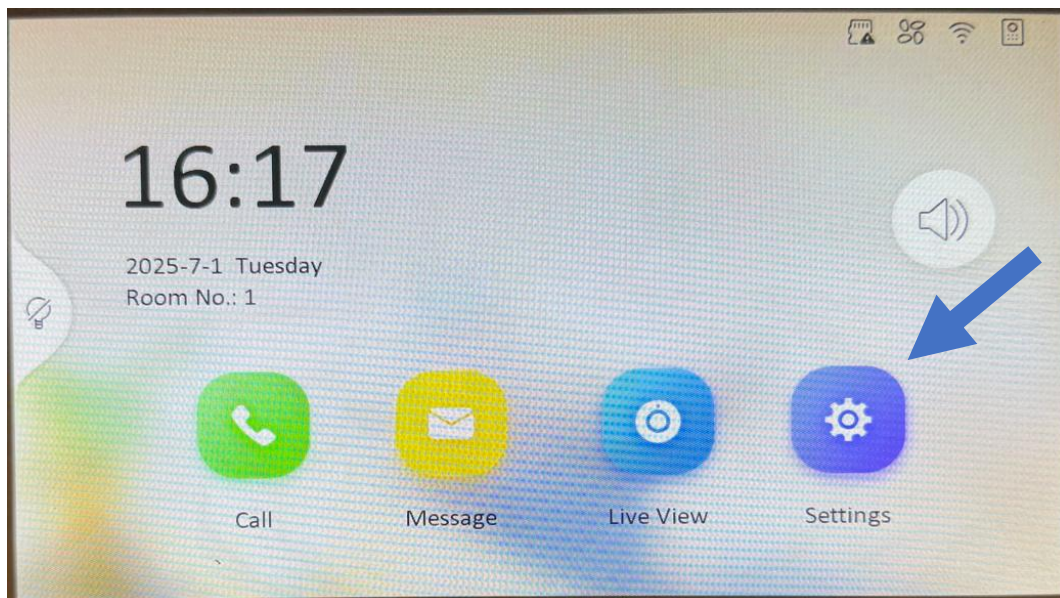


STEP 3

Go to Advanced Settings.

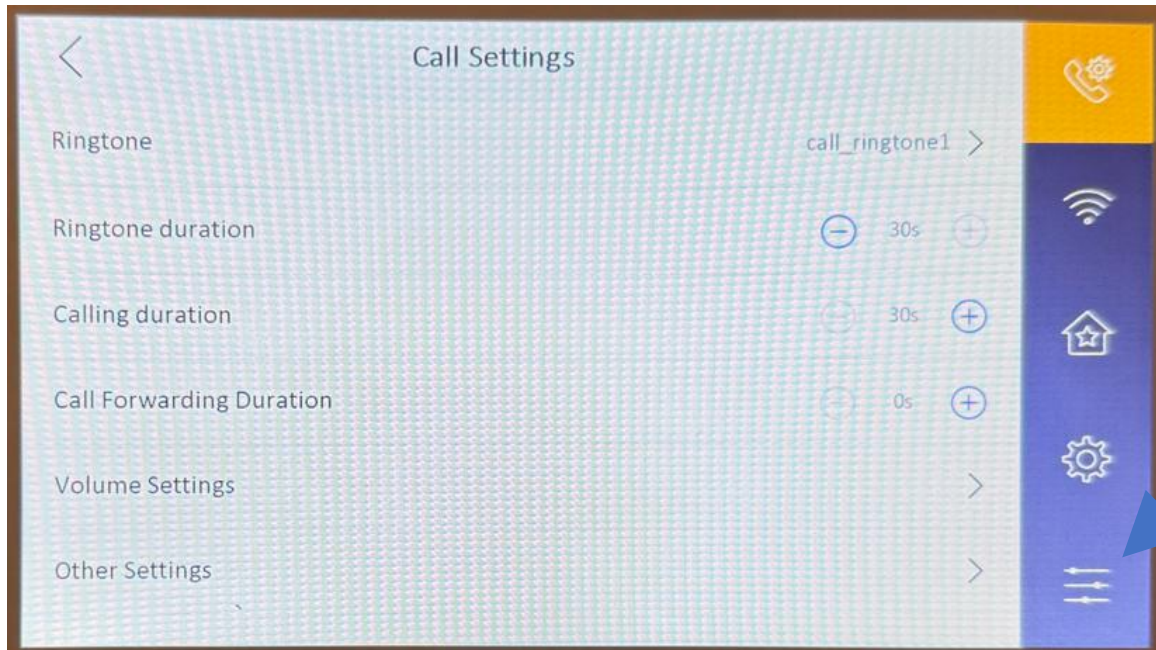

STEP 4


Go to Configuration.

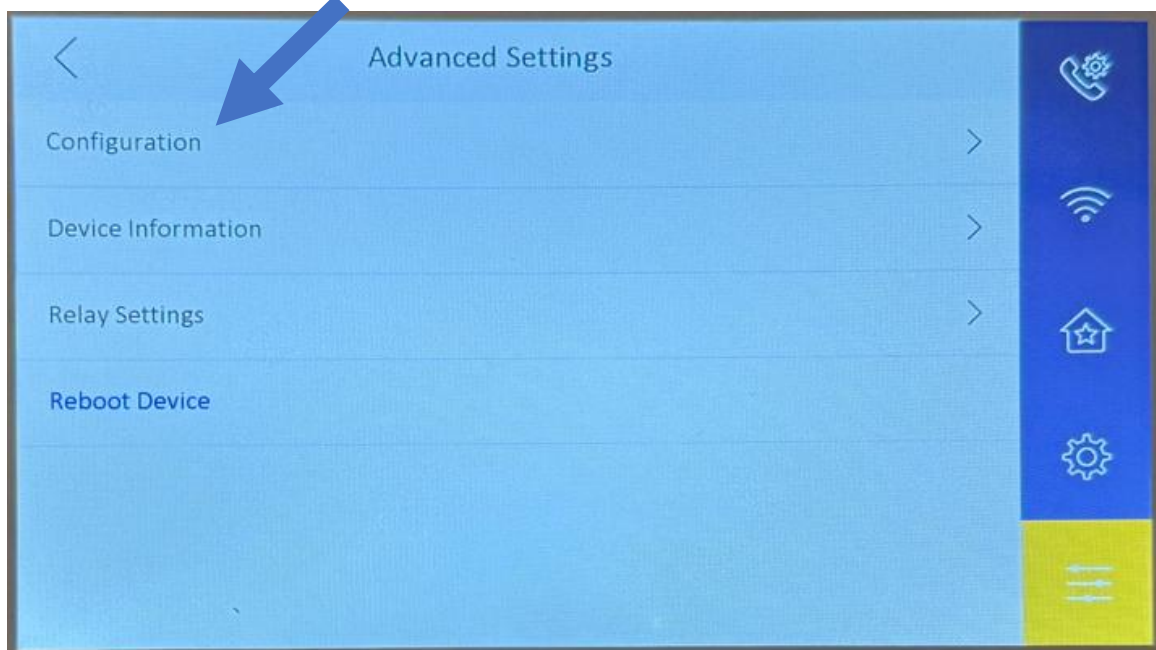

STEP 5


Enter the password (provided by your installer).

Press 'OK'.

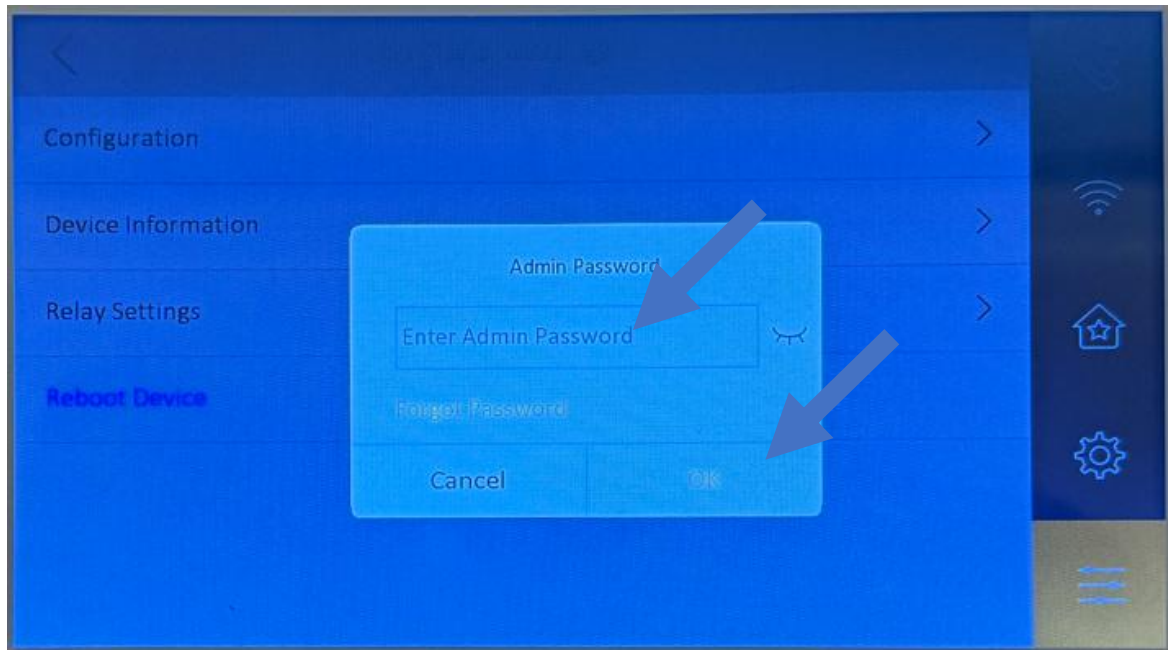


STEP 6

Go to 'Password'.

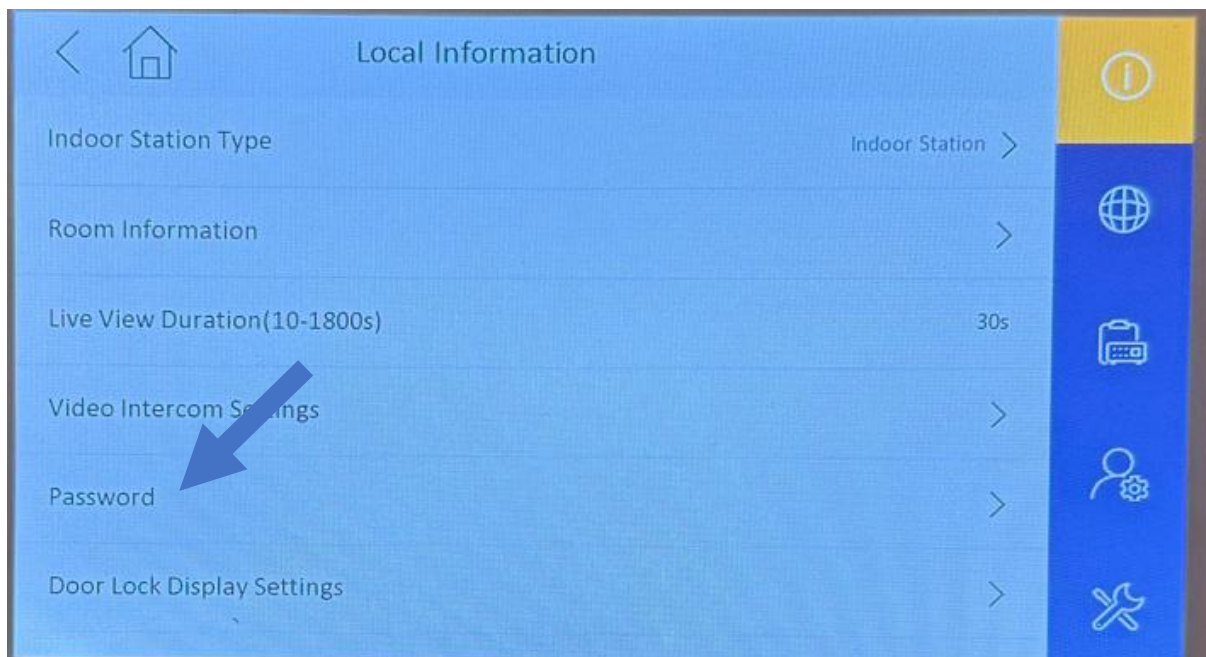

STEP 7

Go to 'Unlock Password'.

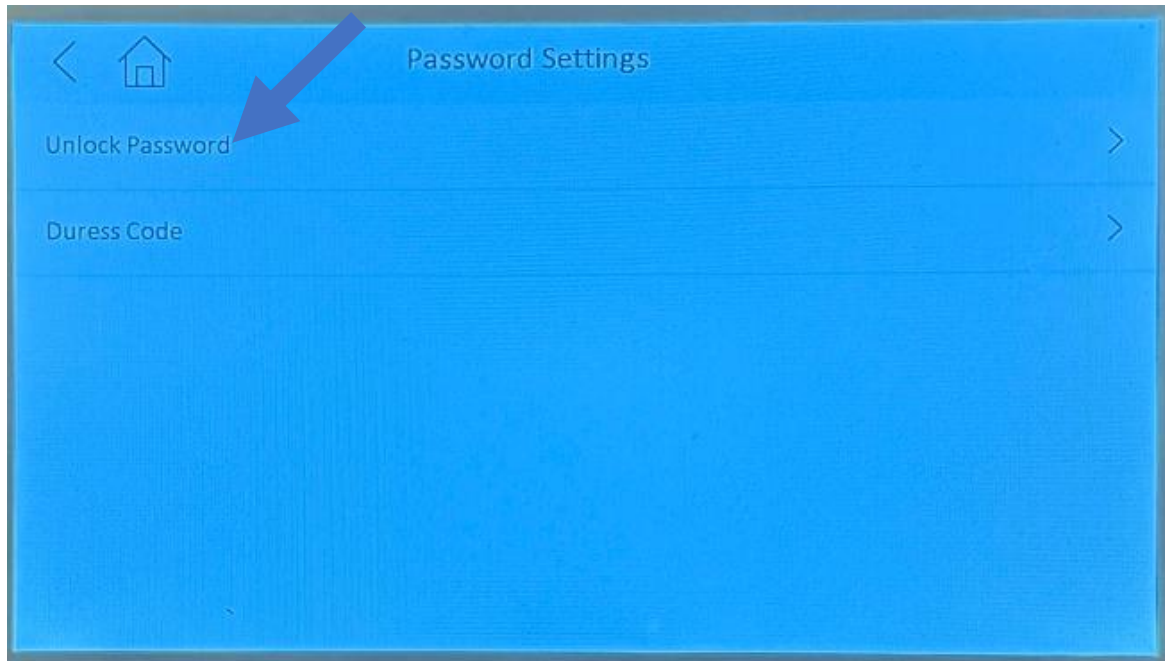

STEP 8

Enter the required PIN code.

It must be 6 digits.



STEP 9


Click on the 'eye' icon to confirm the PIN code required is correct.

Press 'OK'.



STEP 10

Go back to the Home Screen.

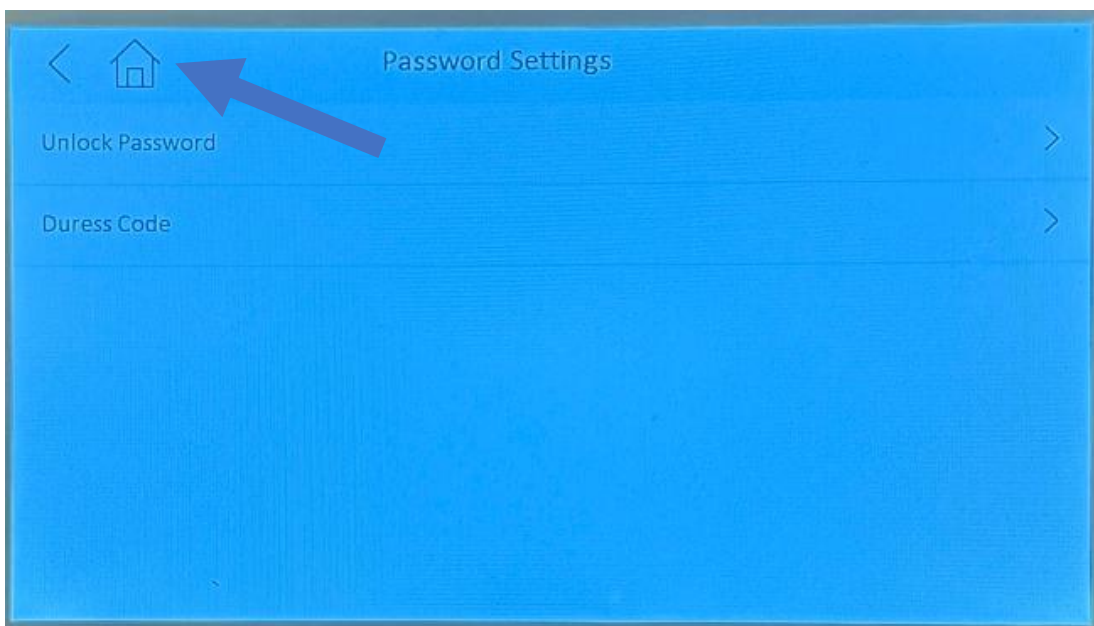

STEP 11

NOTE:

Your PIN code needs to be entered into the keypad in the following format.

'#' ' Unit Number' '6 Digit PIN' '#'

STEP 12

HIGH RISE BUILDING EXAMPLE:

If you are unit '3' in a high rise building, and your pin code is '778899', enter '#3778899#' on the keypad.

STEP 13

STANDALONE HOUSE EXAMPLE:

If you are in a standalone house, you are always unit 1. Therefore if your pin code is '778899', enter '#1778899#' on the keypad.