184. HOW TO HIDE CONNECTED CAMERAS (JUNE 2025)
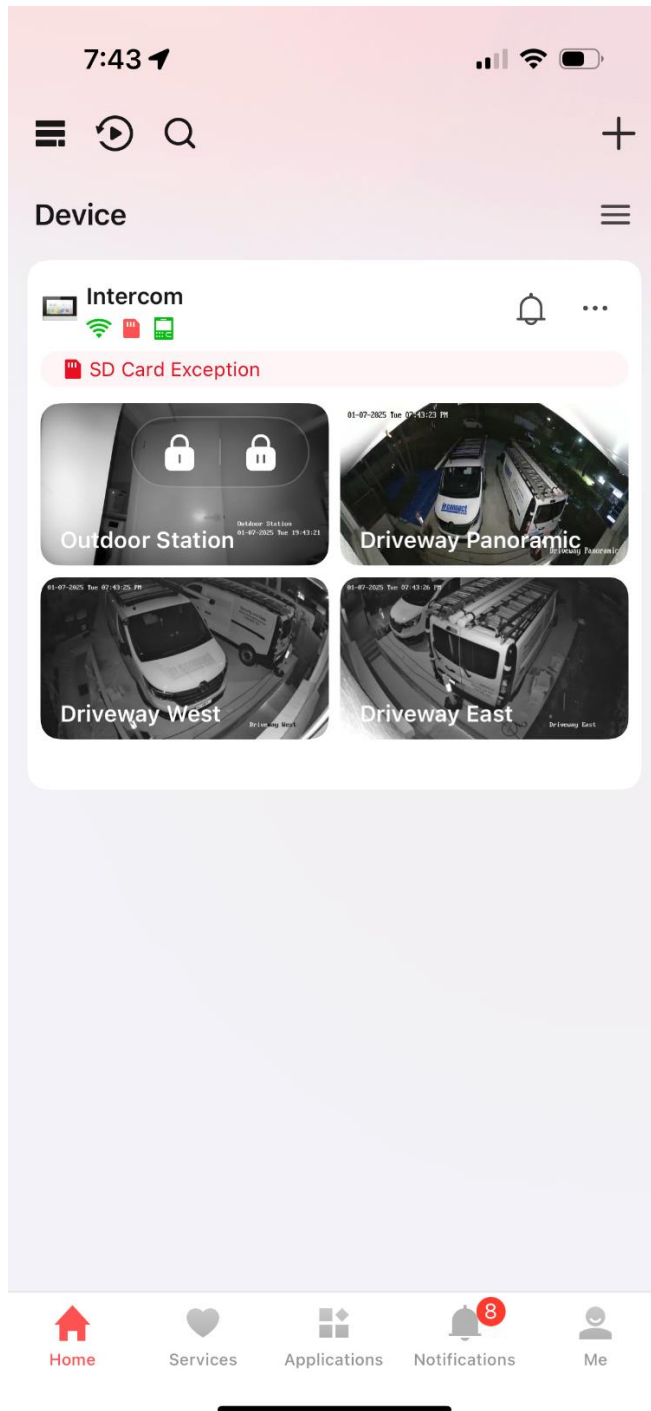
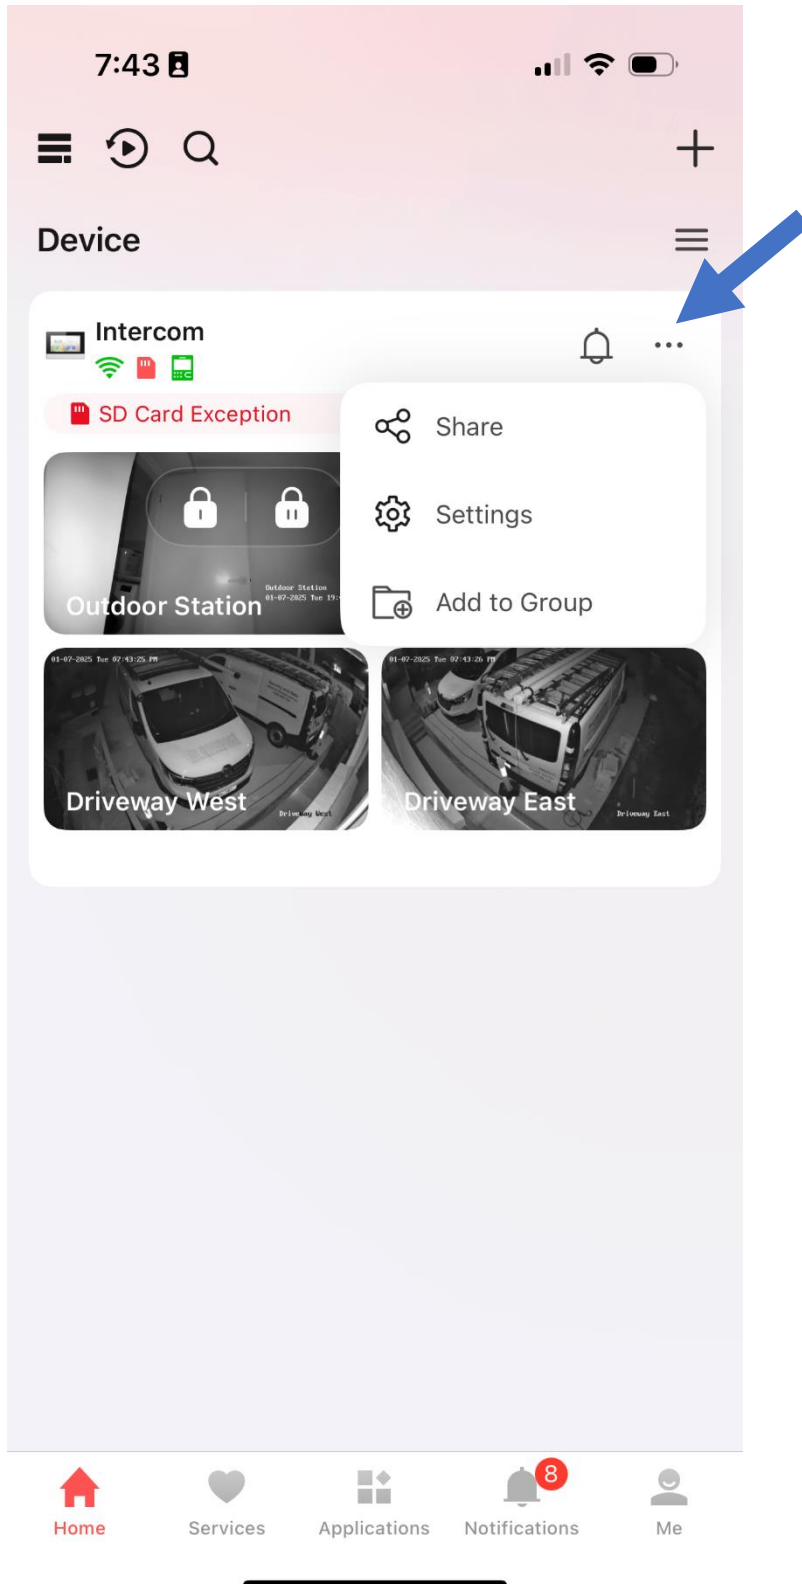## STEP 1

Go to the Home Screen.
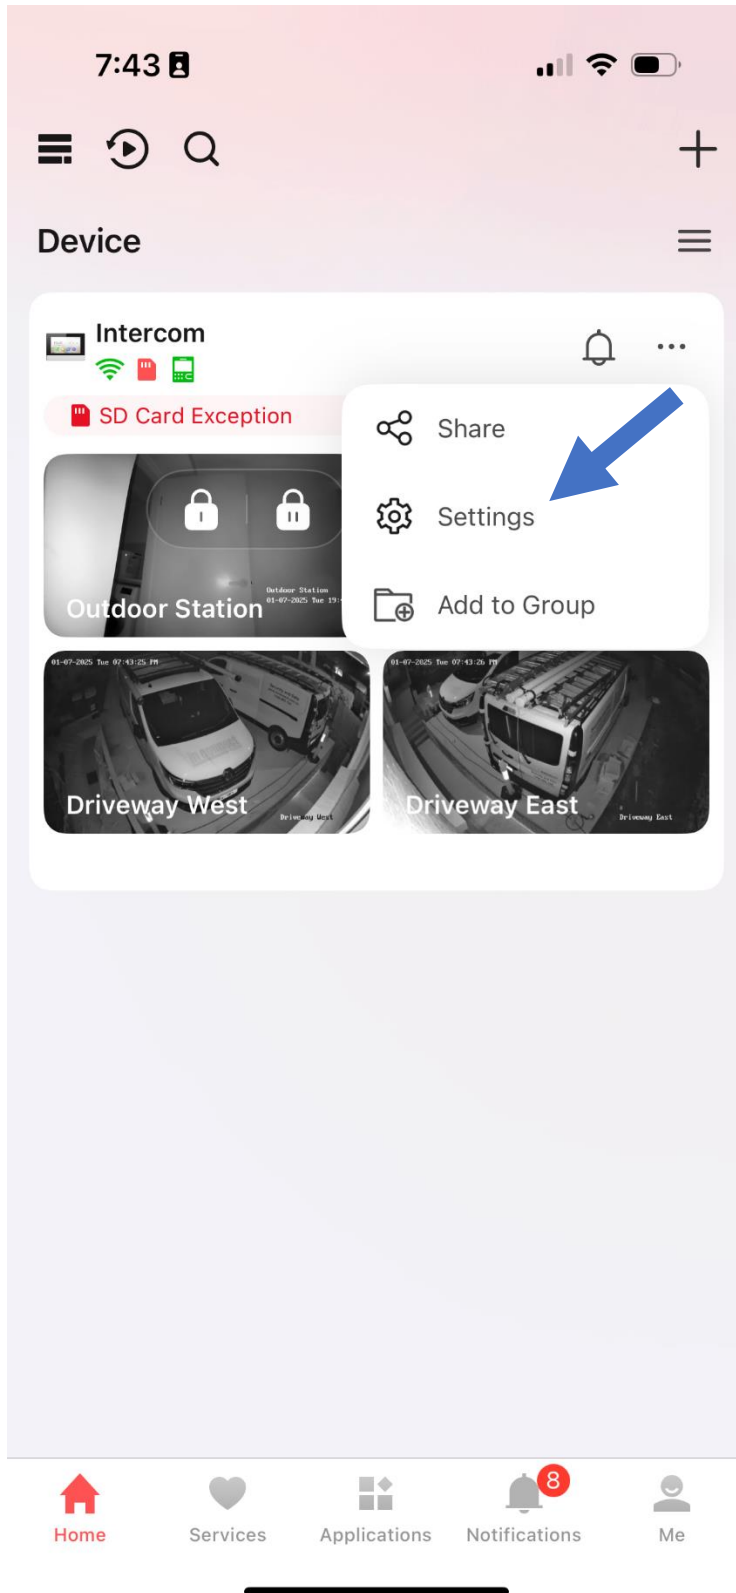
STEP 2

Go to 'Menu'.
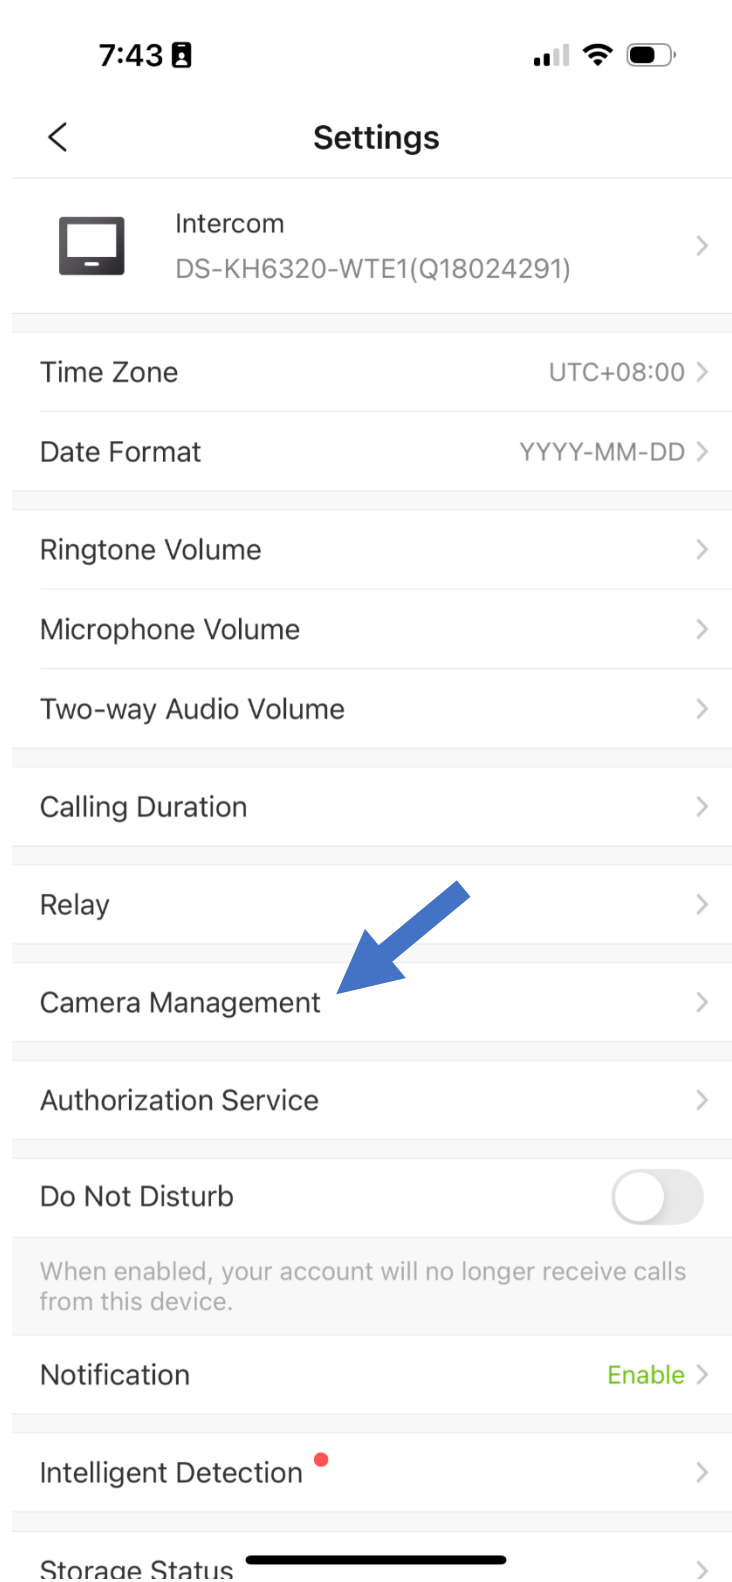
STEP 3

Go to 'Settings'.

STEP 4

Go to 'Camera Management'.

7:43

Settings

Intercom
DS-KH6320-WTE1(Q18024291) >

Time Zone	UTC+08:00 >
Date Format	YYYY-MM-DD >

Ringtone Volume	>
Microphone Volume	>
Two-way Audio Volume	>

Calling Duration	>

Relay	>

Camera Management	>

Authorization Service	>

Do Not Disturb ⬤

When enabled, your account will no longer receive calls from this device.

Notification	Enable >

Intelligent Detection •	>

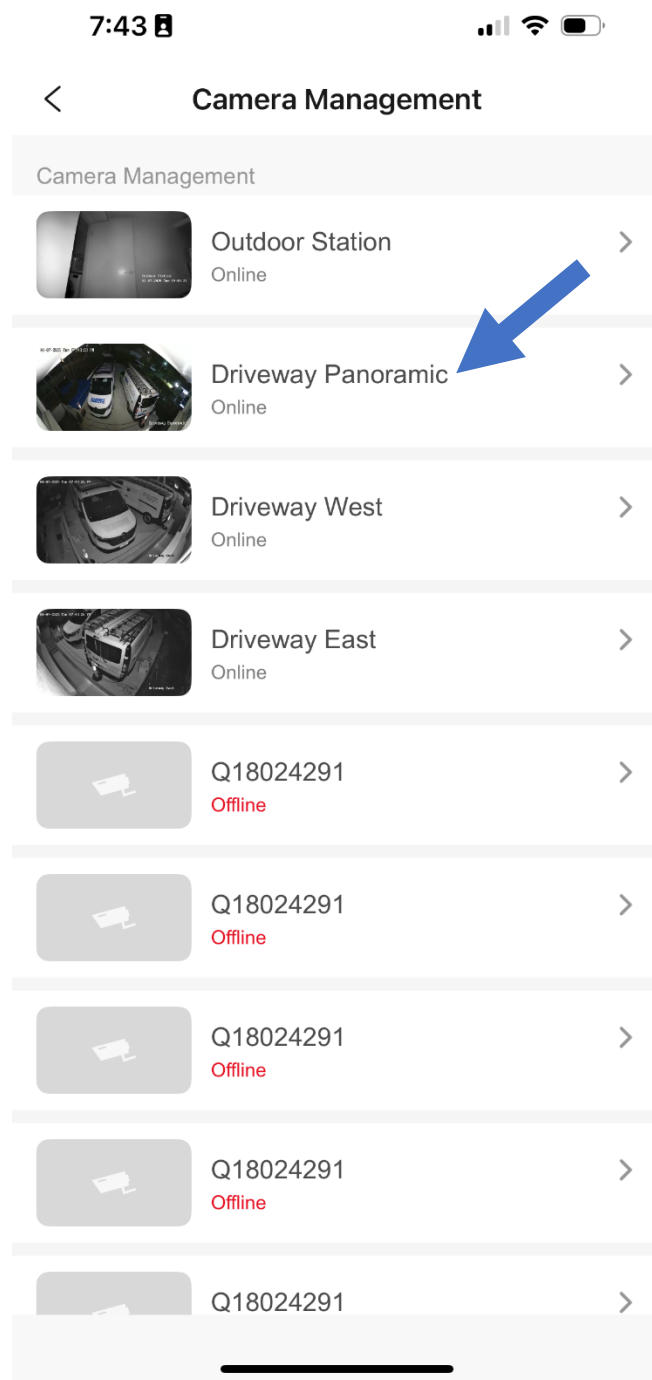| Storage Status	>

STEP 5
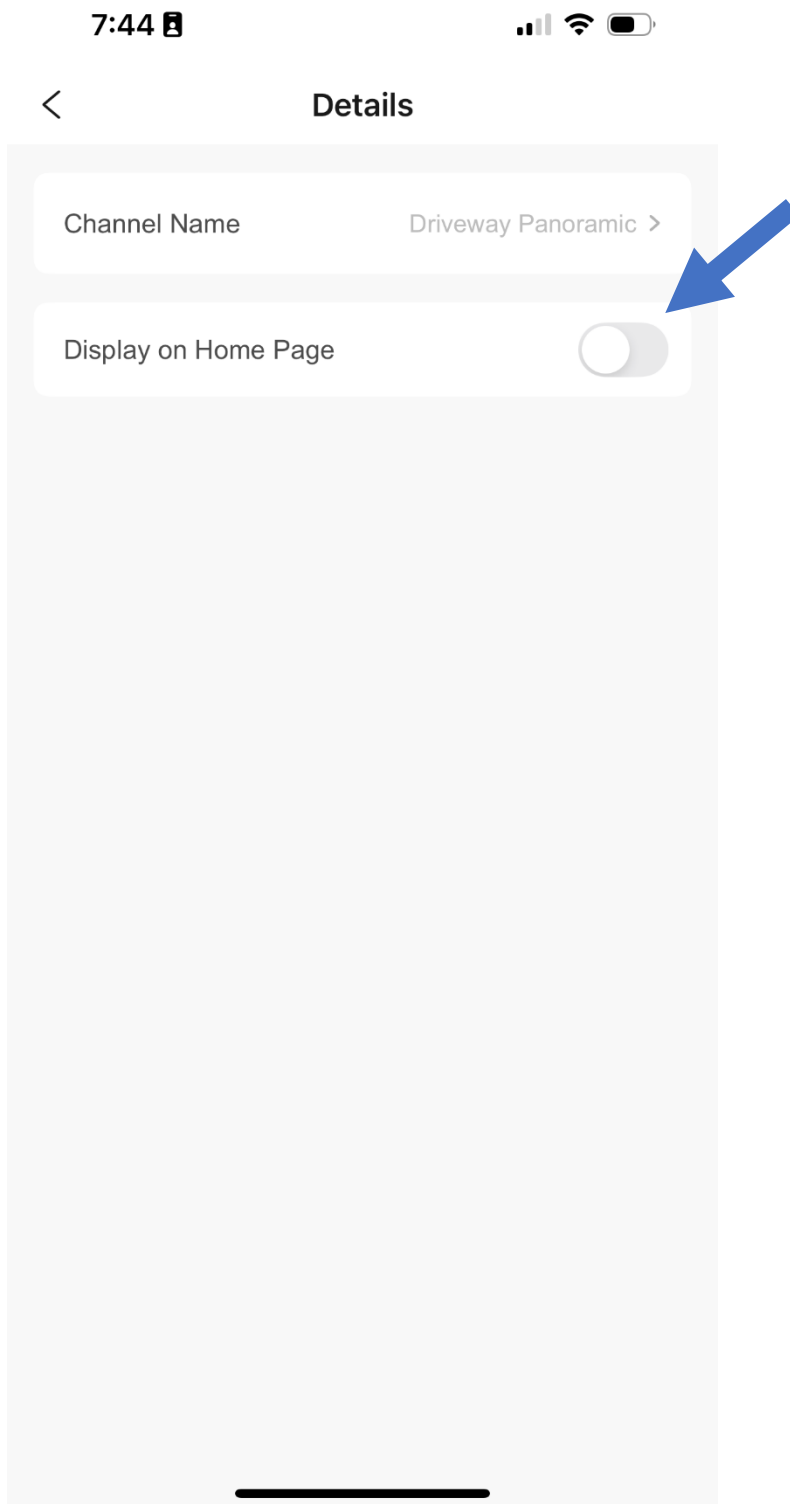
Click on the first 'Online' camera.

NOTE:
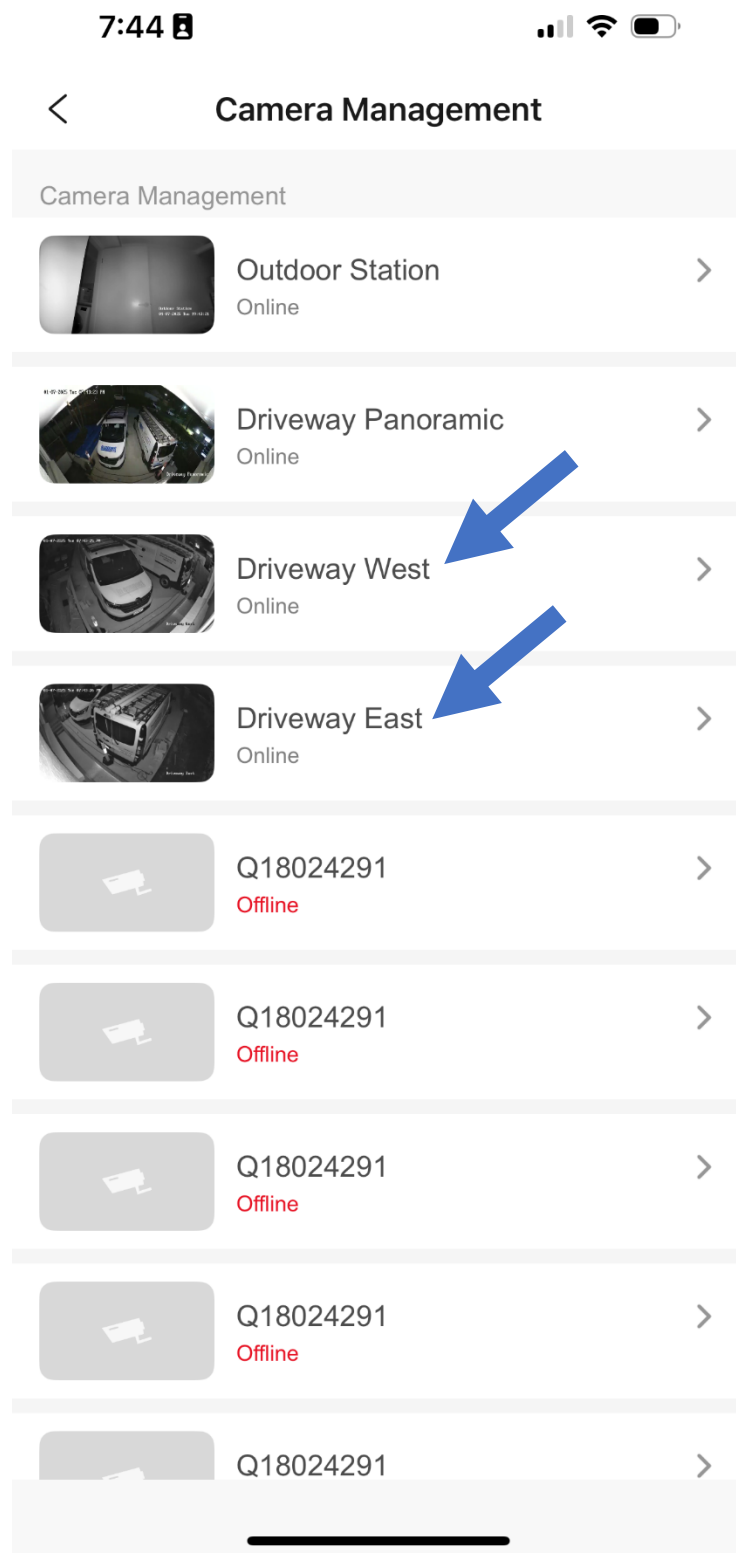
<u>Do not</u> click on the 'Outdoor Station'.

STEP 6

Turn off 'Display on Home Page'.

STEP 7

Repeat the steps for the remaining 'Online' cameras.

STEP 8

Return to the Home Page.

The cameras will no longer be displayed as part of the intercom system.