


# 57. HOW TO DOWNLOAD FOOTAGE TO USB STICK (JUNE 2025)


# STEP 1

Go to Playback.

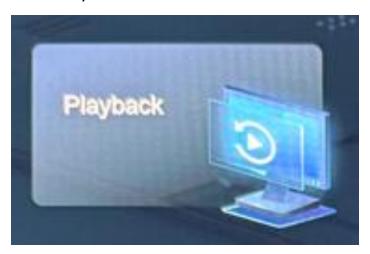

# STEP 2

Find the footage you want to download.

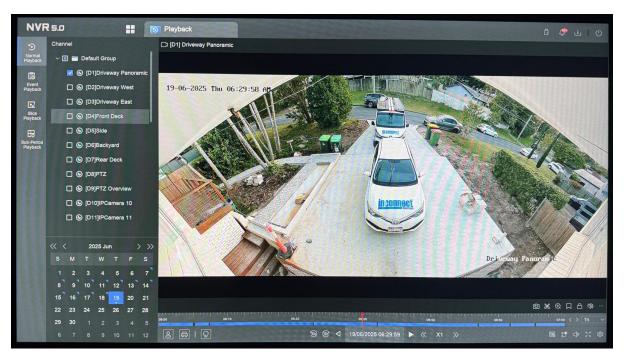




Hover your mouse over the screen.

#### STEP 4

Press the scissors icon aka: clip.

The icon is in the lower right hand corner.

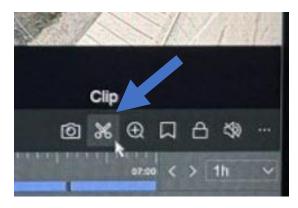

## STEP 5


Enter the start time for the downloaded footage.

Enter the end time for the downloaded footage.

#### NOTE:


It is advised to never export clips longer than 5 minutes in duration.

If you require 15 minutes of footage, export it in 3 x 5 minute segments.

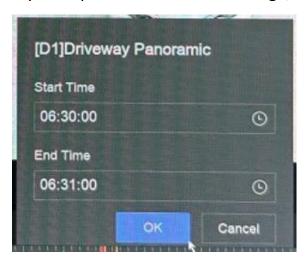




Press OK.

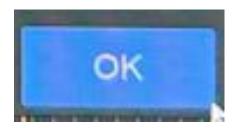

# STEP 7

Select Video Export Format to MP4.

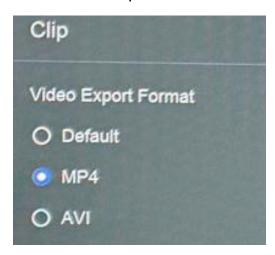

# STEP 8

Click on the folder to select a saving path.





Choose the USB Stick.



# **STEP 10**

Double click on the CCTV Downloads USB folder.



#### **STEP 11**

Ensure you are now in the CCTV Downloads USB Folder.





Press OK.




## **STEP 13**

Ensure the saving path is now the CCTV Downloads USB Folder.



# **STEP 14**

Turn off 'Export VS Player'.

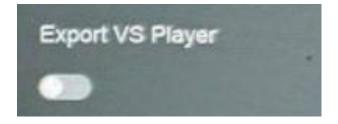


#### **STEP 15**

Turn off 'Video Splicing Backup'.





Press OK.

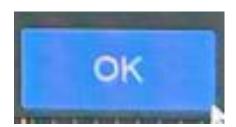


# **STEP 17**

Click on the Download Centre aka: Download Task.




# **STEP 18**

Confirm the download/s are complete.

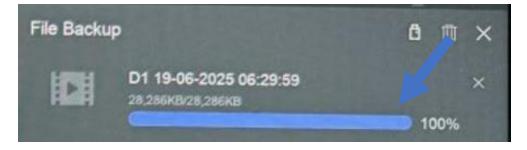



Close the Download Centre aka: Download Task.

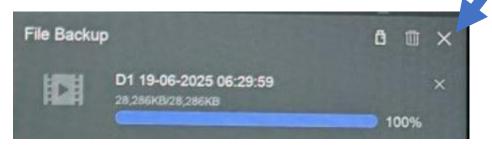

# STEP 20

Remove the USB Stick from the NVR.

# **STEP 21**


Place the USB stick in a Windows PC.





Find the USB Stick in File Explorer.






> Metwork

# STEP 23

Go into the folder CCTV Downloads USB.

Name



#### STEP 24

Confirm the downloaded footage is there.

#### NOTE:

In the folder will be 2 files.

1 will be a MP4 file, this is the downloaded video file.

1 will be a **Notepad file**, this can be **ignored**.

Name	Туре
▲ MAIN_D01_20250619061059	MP4 Video File (VLC)
MAIN_D01_20250619061059	Text Document



#### NOTE:

The NVR will export separate clips for separate motion events if multiple motion events happened in the chosen timeframe.

Name	Туре
À MAIN_D01_20250619061059	MP4 Video File (VLC)
MAIN_D01_20250619061059	Text Document
≜ MAIN_D01_20250619061335	MP4 Video File (VLC)
MAIN_D01_20250619061335	Text Document
≜ MAIN_D01_20250619062011	MP4 Video File (VLC)
MAIN_D01_20250619062011	Text Document

# **STEP 26**

You are now ready to view the footage from the USB.